


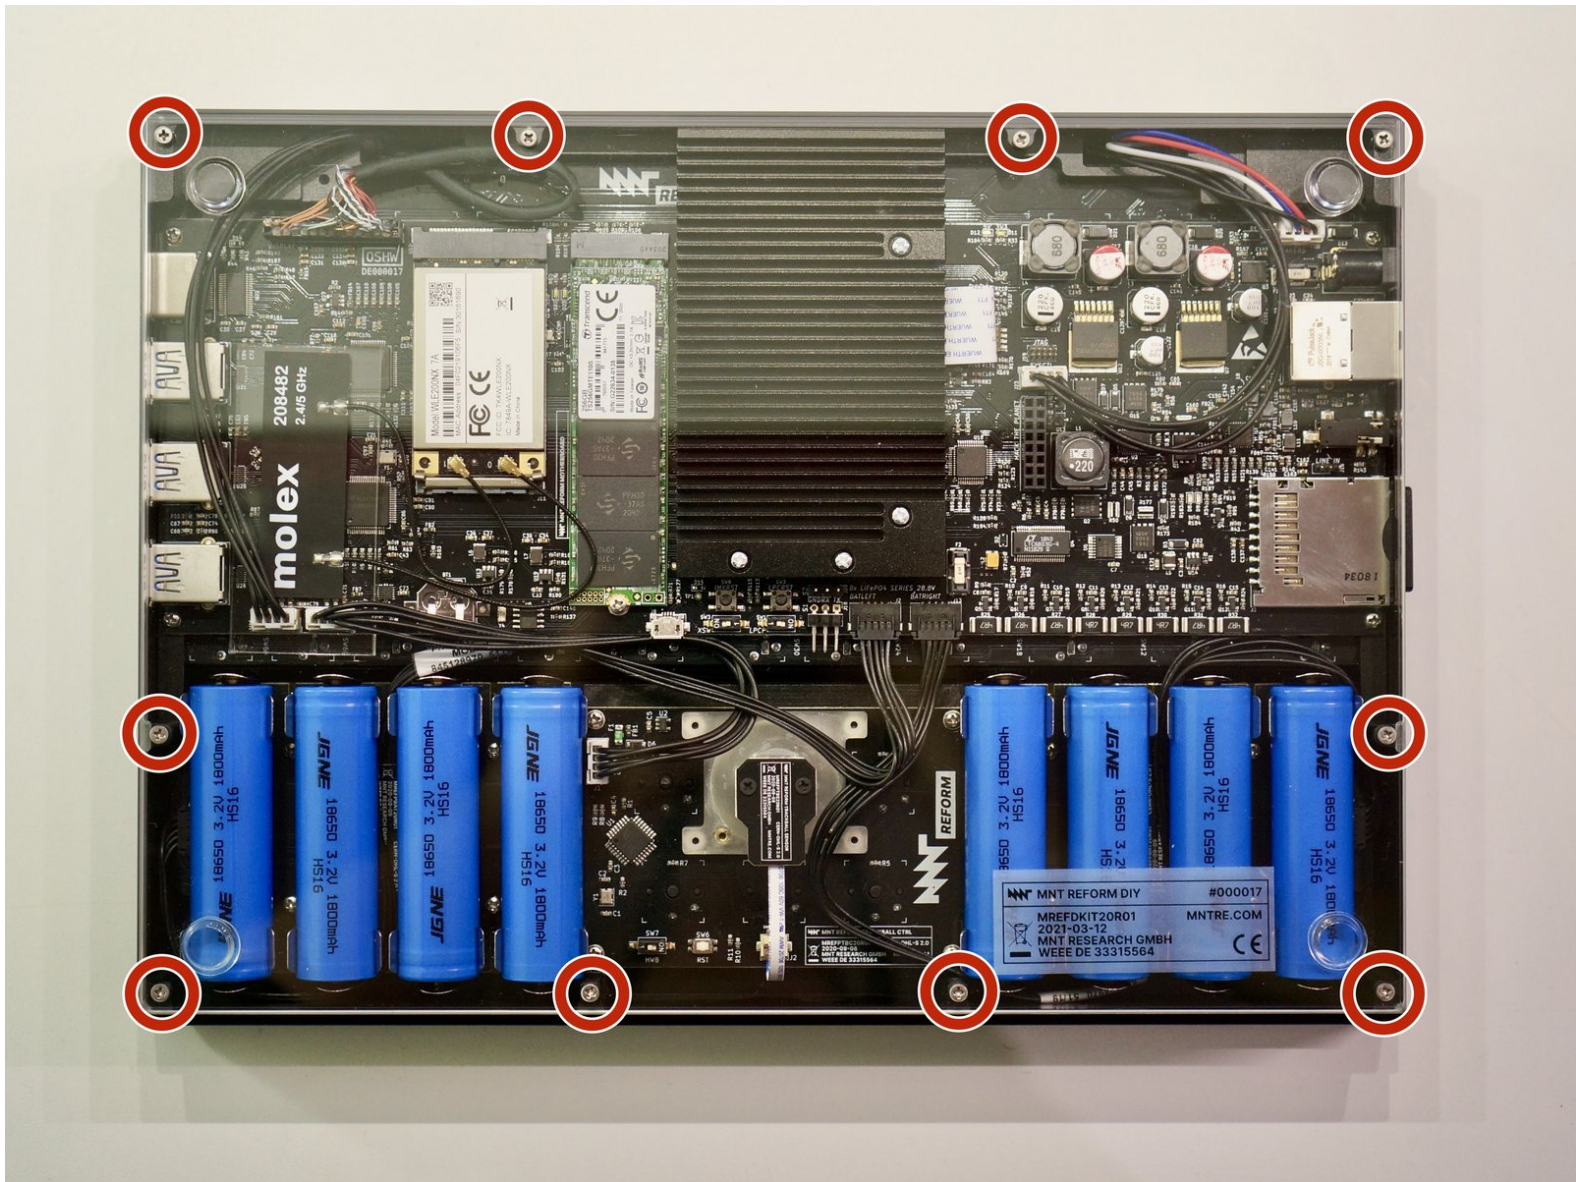

MNT Reform Bottom Plate Replacement

Remove the bottom plate to access most of your MNT Reform's internals.

Written By: Neelfyn



INTRODUCTION

Remove the transparent acrylic bottom plate to access most of your MNT Reform's internals.


Please be extra careful while and after opening the case of the device. MNT Reform uses eight 18650 batteries in series. When fully charged, these combine to a voltage of almost 29 volts, and the battery cells can easily deliver multiple amperes of current. Do not touch the metal pins of the battery holders with metal tools.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove Bottom Plate Screws

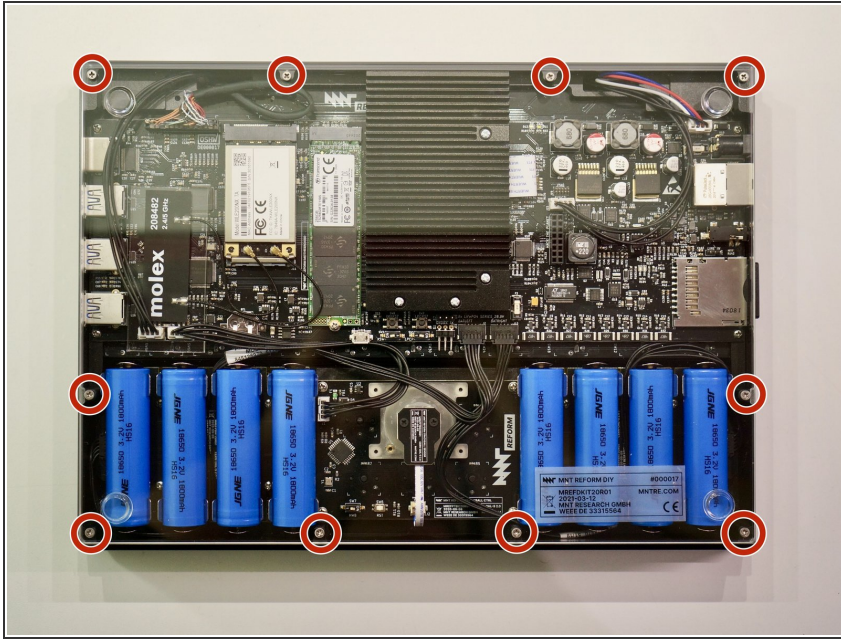

- Remove the following screws securing the transparent acrylic bottom plate to the main box:
 - Ten M2x6mm silver Phillips screws

Step 2 — Remove Bottom Plate

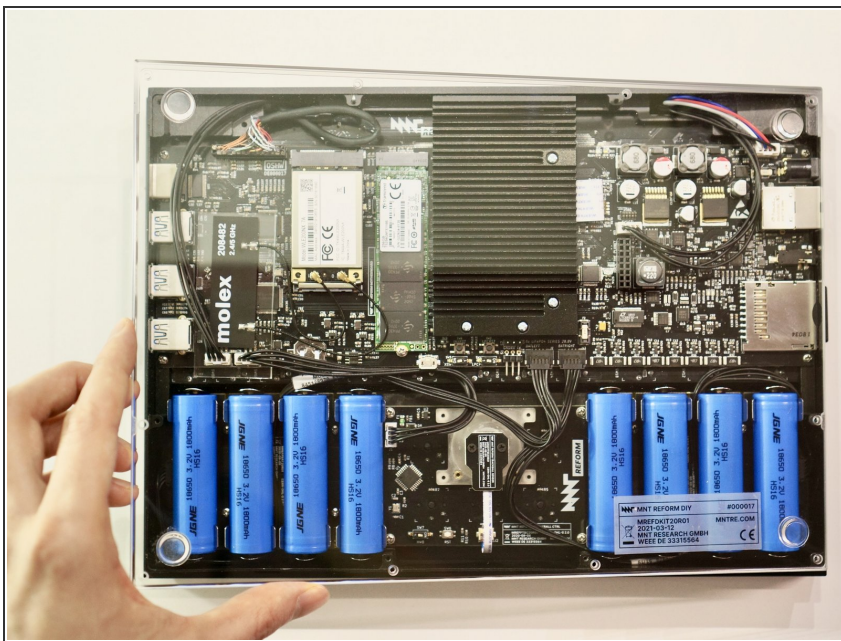

- Lift the bottom plate and set it aside.

⚠ Before servicing anything on the inside, make sure to remove all battery cells.

To reassemble your device, follow these instructions in reverse order. Ensure that no cables are squeezed when replacing the bottom plate. Don't overtighten screws.

