



iDog Clip Back Cover Removal

This guide will help you take off the back "cover" of the iDog Clip.

Written By: 118811



INTRODUCTION

You will need: a regular Philips head screwdriver that's it!

Step 1 — iDog Clip Back Cover Removal




- Make sure it is off by holding its nose for about 4 seconds. If it is already off it will turn on.

Step 2



- Unscrew the battery cover screw.

Step 3

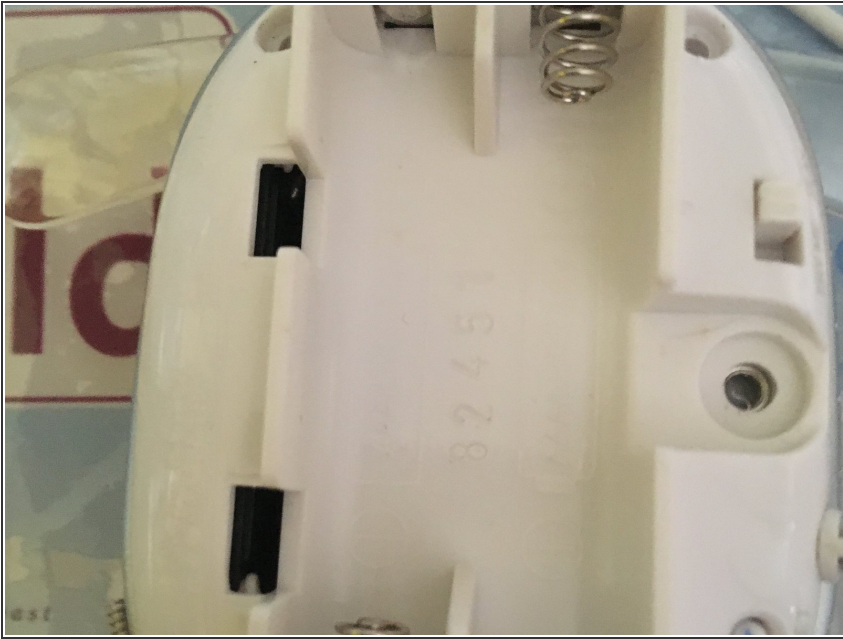

- Remove batteries.

Step 4



- Remove all screws (they are the same size).

Step 5



⚠ Gently pull up (watch video).

Step 6



i And you are done! To put it back on make sure you start with AUX out!!!

To reassemble your device, follow these instructions in reverse order.