




# iPad 4 Wi-Fi Headphone Jack Cable Replacement

Internal prereq.

Written By: Walter Galan

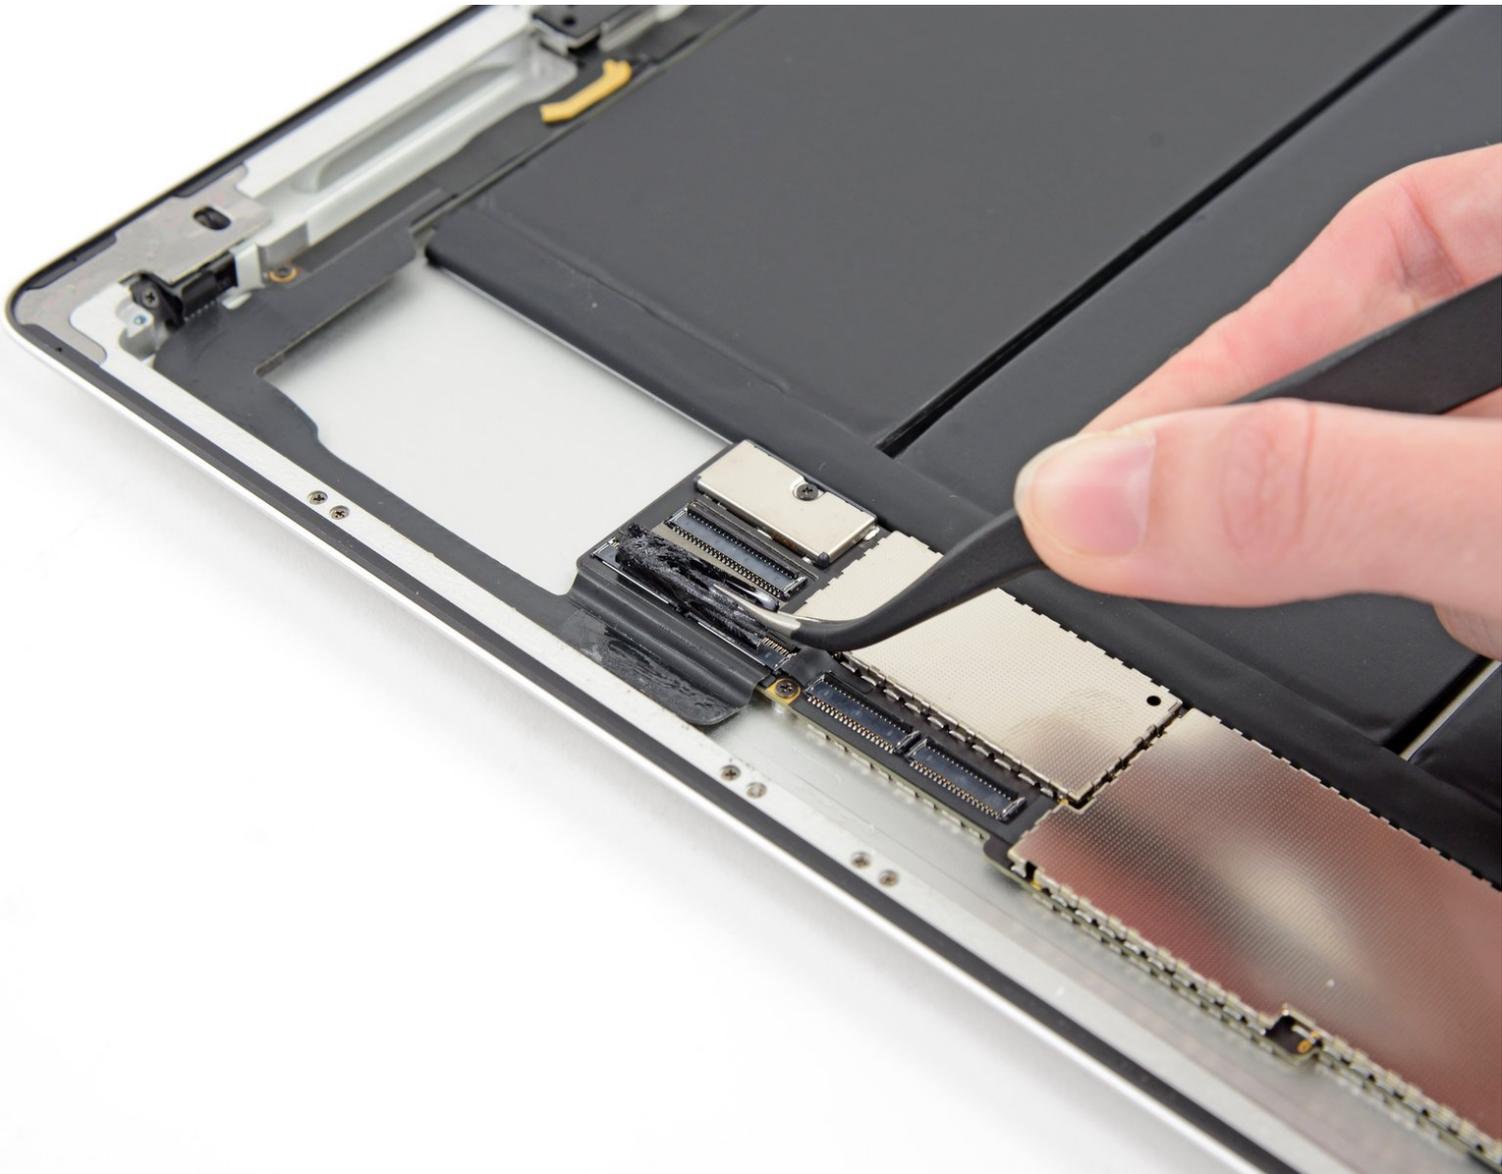

---

## INTRODUCTION

Internal prereq.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Headphone Jack Cable



- Use tweezers to peel back and remove the piece of electrical tape covering the headphone jack assembly cable connector.
- Using the tip of a spudger, flip up the retaining flap on both of the ZIF connectors securing the headphone jack cable to the logic board.

## Step 2



- Slide the flat end of a spudger underneath the headphone jack assembly cable, releasing the adhesive securing it to the rear aluminum frame.
- Pull the headphone jack assembly cable straight out of its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.