


# Sony Ericsson Xperia X10 Audio Jack Replacement

User will be able to dissemble the phone, locate and replace the audio jack

Written By: Bryan

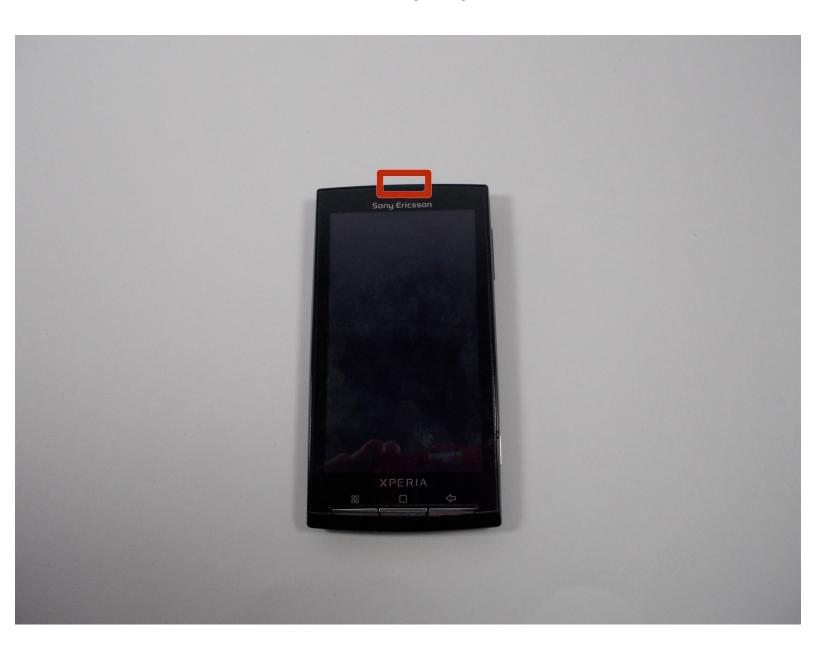


This document was generated on 2020-11-15 04:22:54 AM (MST).



- Flathead Screwdriver (1)
- T6 Torx Screwdriver (1)

#### Step 1 — Audio Jack

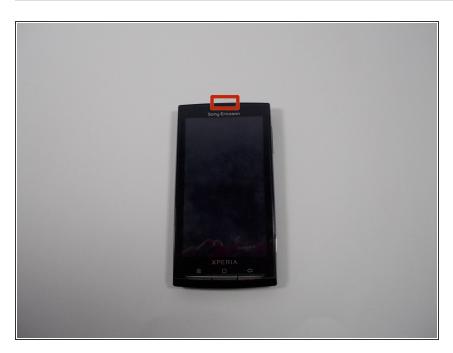

 The audio jack is located on the top side of the phone, in the center. To access the audio jack disassemble is necessary.



 Start by having the screen of the phone facing downwards and remove the battery. Remove eight 5mm screws located as shown with a T-6 bit.





 Using a case opener, start on the bottom right side of the phone and undo clips located at the interior sides. Repeat this step for the left side.




 Once the clips are undone the back casing should dislocate and reveal the internal components of the phone. Audio jack location is identified on the image.

#### Step 5

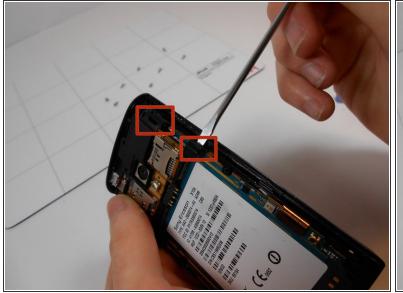

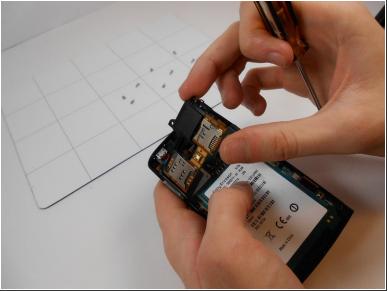

The audio jack can only be accessed if the internal casing is removed. To remove this, apply
pressure on the left side of internal casing and using a flat head screw driver unlatch both clips on
the right side of casing.

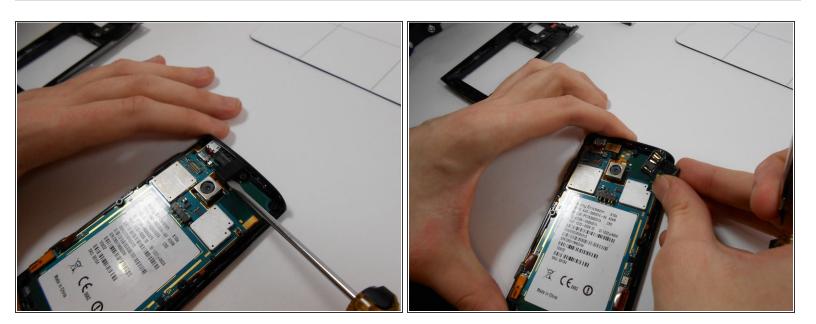

Audio Jack is located and easily removed. New component can be inserted.

To reassemble your device, follow these instructions in reverse order.