

iPhone 5s Speaker Replacement

Prerequisite to remove the speaker after the logic board.

Written By: Sam Goldheart



INTRODUCTION


Prerequisite to remove the speaker after the logic board.

TOOLS:

۶


- Phillips #000 Screwdriver (1)
- Spudger (1)

Step 1 — Speaker

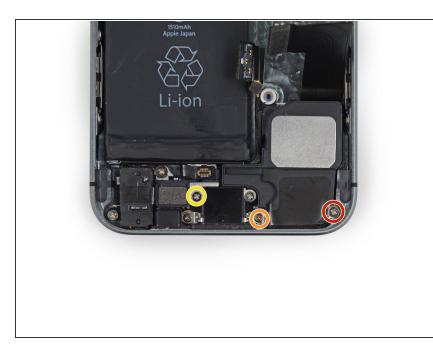

- Remove the following screws:
 - One 2.9 mm Phillips #000 screw
 - One 1.5 mm Phillips #000 screw
 - One 3.6 mm Phillips #000 screw

Step 2

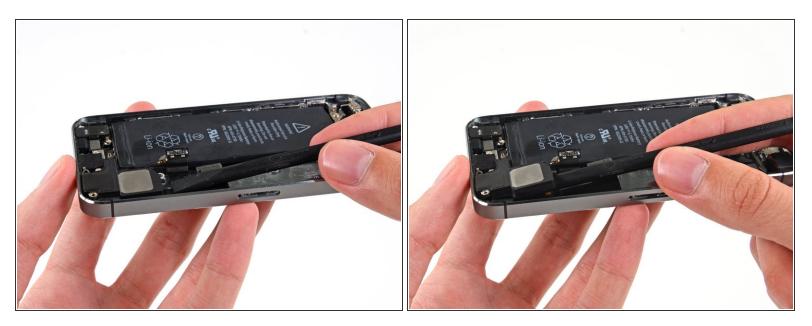

Use the flat end of a spudger to gently lift the speaker from the rear case.

↑ Do not attempt to pry the speaker entirely out of the case.

Step 3



(i) The speaker has a small peg that slides into a slot beneath the home button cable socket.

- Lift the speaker and pull it toward the side of the phone to free this peg from the Lightning connector assembly.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.