




Lite FX Rotating Big Ball of Lite Model 1929 Light Bulb Replacement

This guide will help you replace the light bulb in a Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Nick Kaprielian

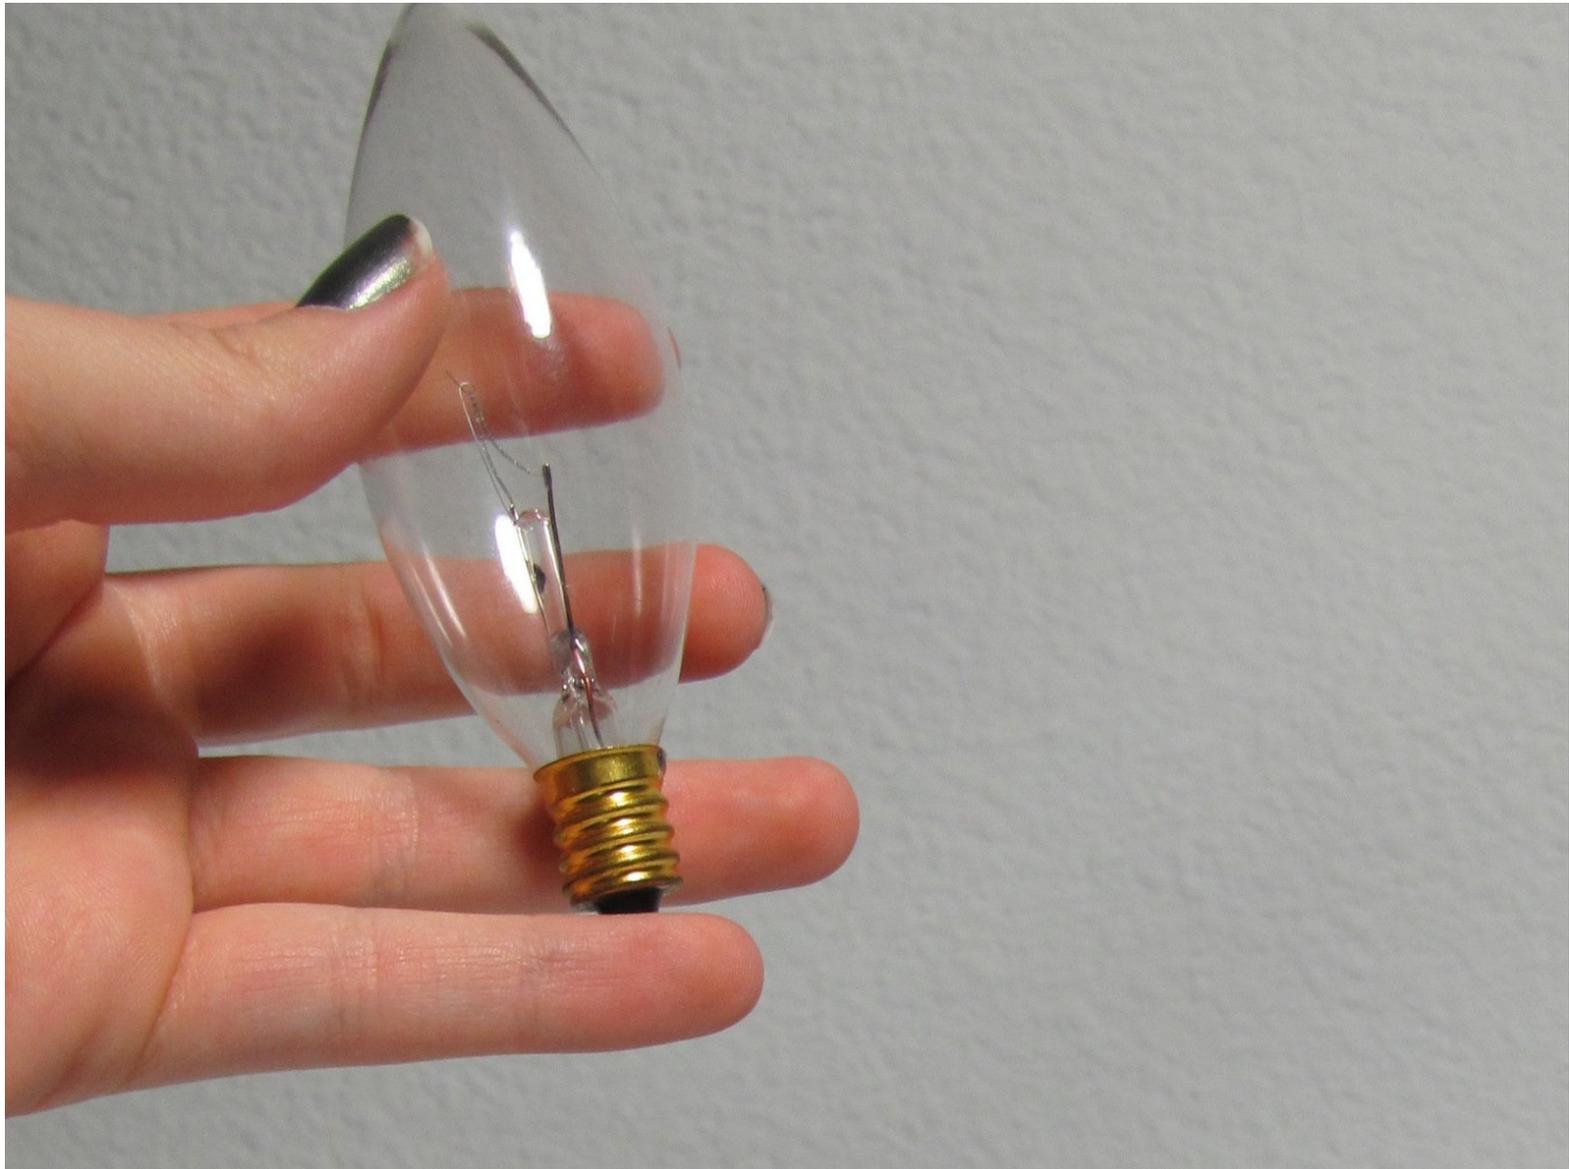

INTRODUCTION

Is your disco ball not sending out groovy beams of light anymore? The most common problem is the light bulb is burnt out. This guide will teach you how to replace that light bulb, so you can get back to partying!

TOOLS:

- [B-10 25 Watt Candelabra Light Bulb](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Lite FX Rotating Big Ball of Lite Model 1929 Ball Disassembly



- ⚠️ Unplug the device to avoid injury.
- Turn the device over, so that the base is on top.

Step 2




- Compress the tab by pushing towards the center of the device with a spudger.
- While compressing the tab, peel the base away from the rotating head.

Step 3



- If the metal brackets come off of the sphere, put them back on the plastic piece as shown in the photo.

Step 4 — Light Bulb

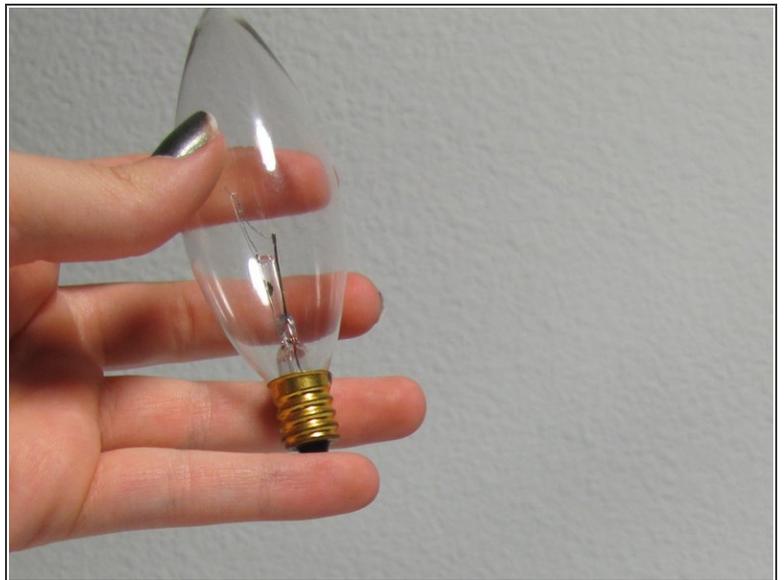

- Unscrew the burnt-out light bulb with a counter-clockwise twist.

 Do not apply too much pressure when unscrewing light bulb, as the light bulb may break.