



Nokia 6236i Front Casing Replacement

This guide will give step-by-step instructions...

Written By: Erik Lindahl




INTRODUCTION

This guide will give step-by-step instructions for removing the Nokia 6236i front casing without damage. This action may be considered if the front case is cracked, needs in-depth cleaning, or keyboard buttons need replacement.

TOOLS:


Flathead 3/32" or 2.5 mm Screwdriver (1)

Step 1 — Battery

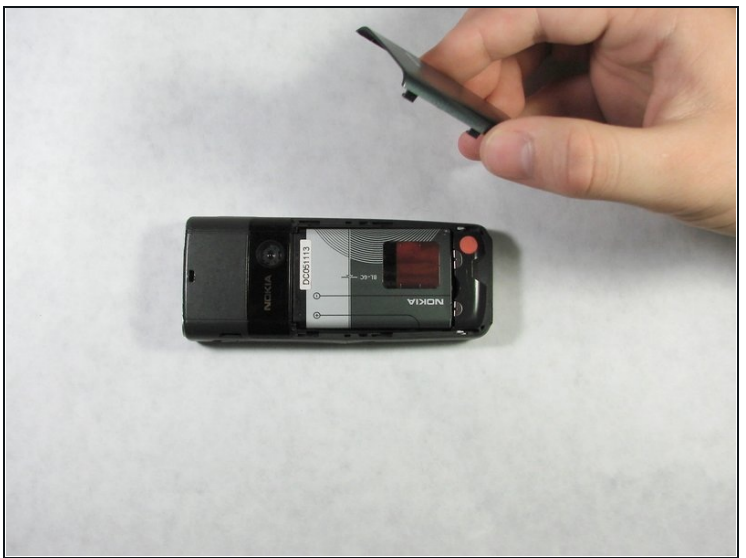


- Using your thumb, apply pressure to the battery casing (below the camera). Firmly pull towards the bottom of the phone.
- Lift the battery case off of the phone.

Step 2

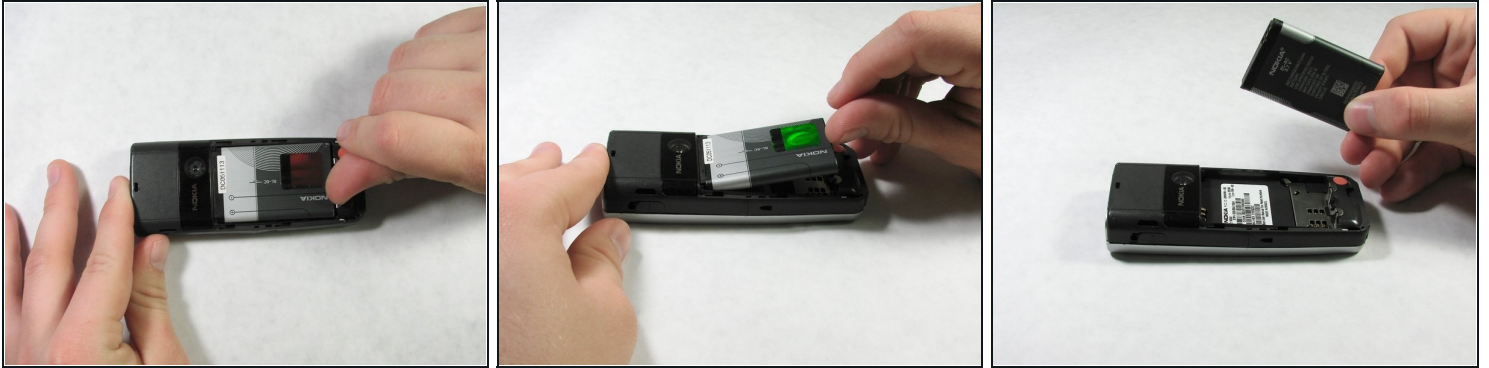


- Use your thumb to get underneath the battery and pull up and out from the bottom of the battery tray.
- The battery should lift out with minimal resistance.

Step 3 — SIM Card

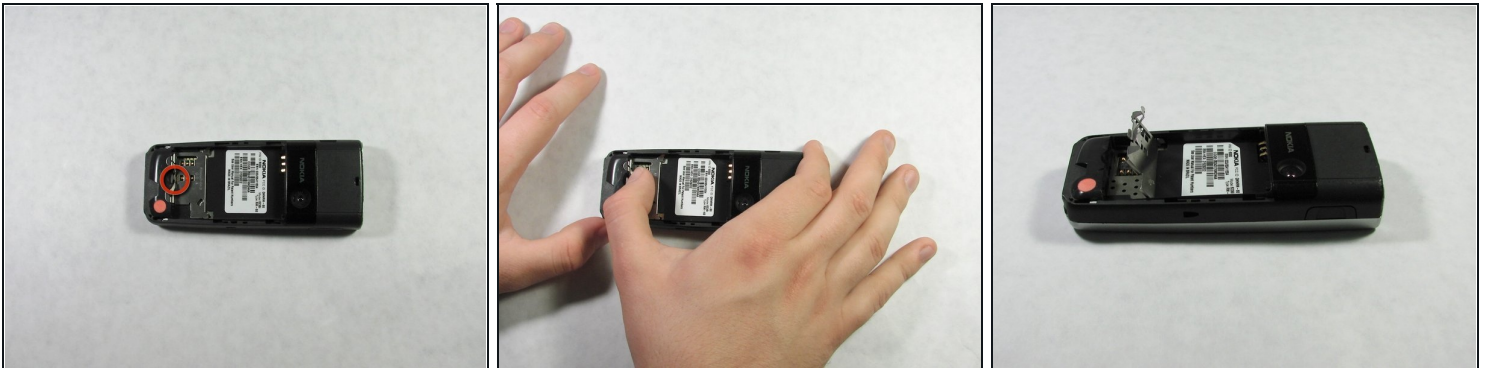

- Once the battery is removed, pull the tab of the metal sim card cover, and lift it up.
- The sim card is underneath and can now be removed.

Step 4 — Front Casing

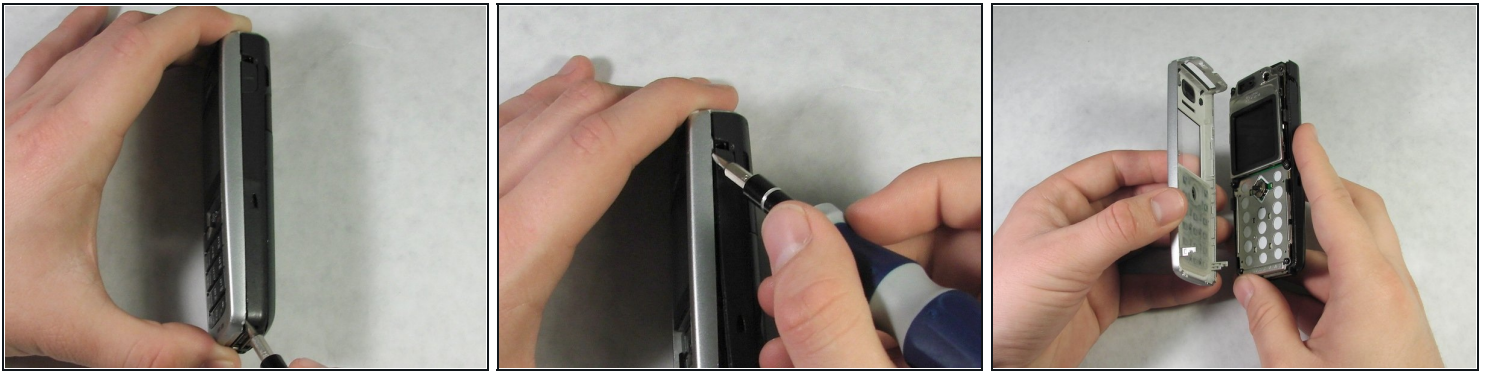

- Insert a spudger into the indentation on the bottom right side of the device.
- Slide the spudger upward to a second indentation at the top of the phone.
- The front casing will detach from the phone.

The front casing will be detached without causing damage to the case or phone model.

For reassembly, complete the listed steps in reverse.