




# Alcatel One Touch Fierce Rear Facing Camera Replacement

In this guide we showed how to carefully remove the main camera from you phone in order to replace it.

Written By: Cody Stouffer

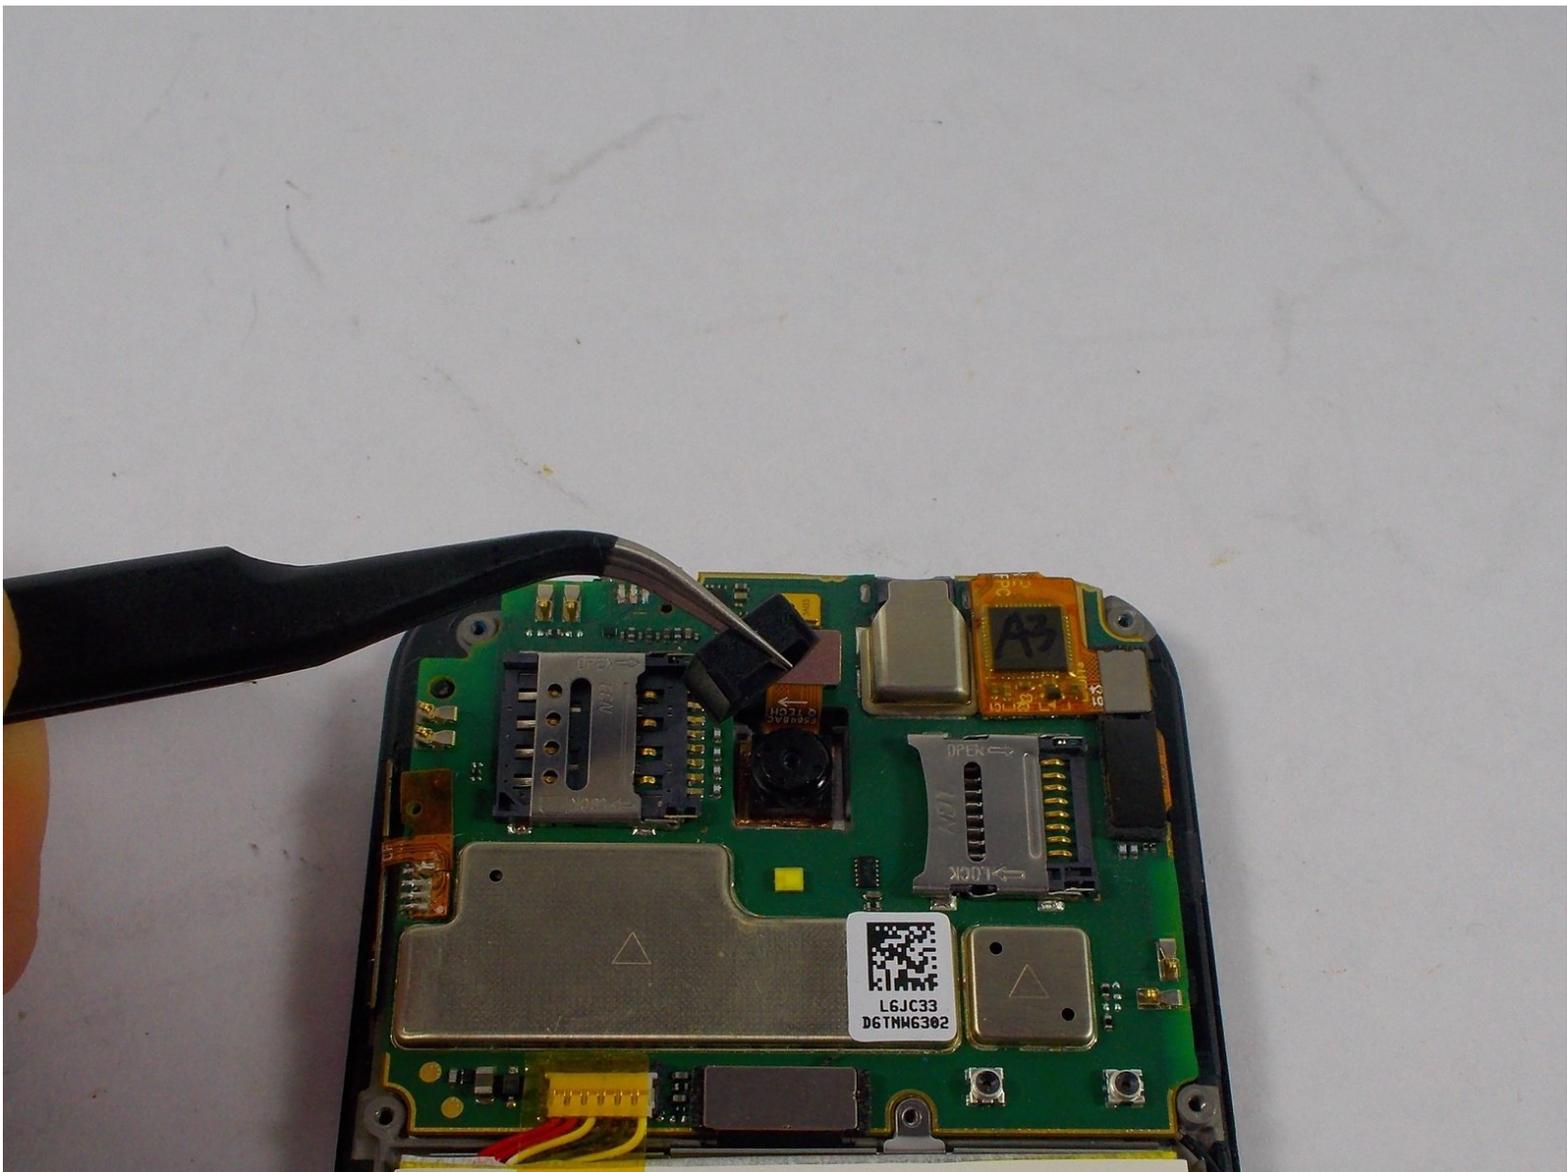

---

## INTRODUCTION

Use this guide to replace the rear facing camera on your Alcatel One Touch Fierce.

---

### TOOLS:


- [iFixit Opening Tool](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Rear Case





- Pry with a plastic opening tool, or your fingernail, in the divot at the bottom left corner of the phone.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

## Step 2 — Midframe

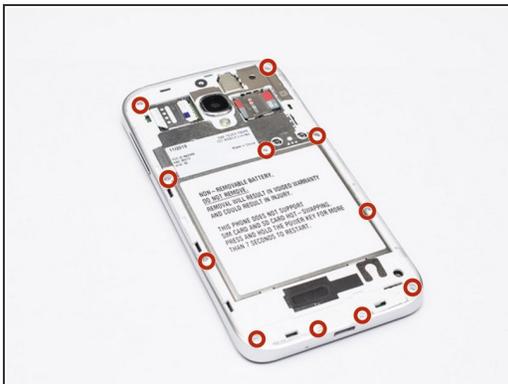

- Remove the 11 Phillips #000 screws.
- The midframe should lift free.

### Step 3 — Rear Facing Camera

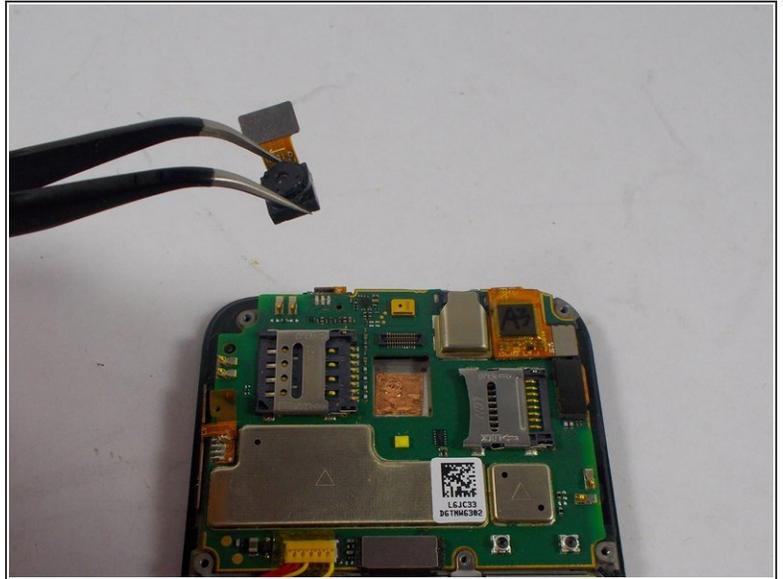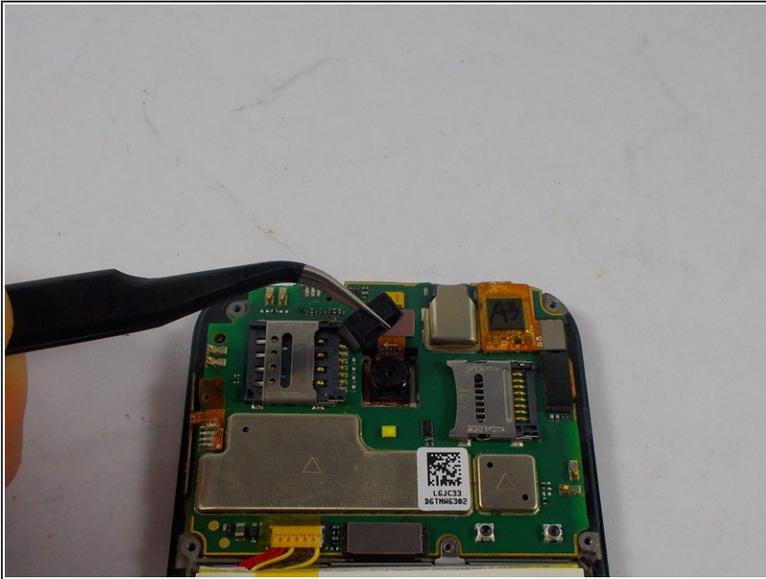

- Use a pair of tweezers to gently disconnect the camera connector and remove the rear facing camera.

To reassemble your device, follow these instructions in reverse order.