




HTC HD 2 Front Panel Replacement

How to replace a HTC HD 2 front panel.

Written By: Mark Kruhse

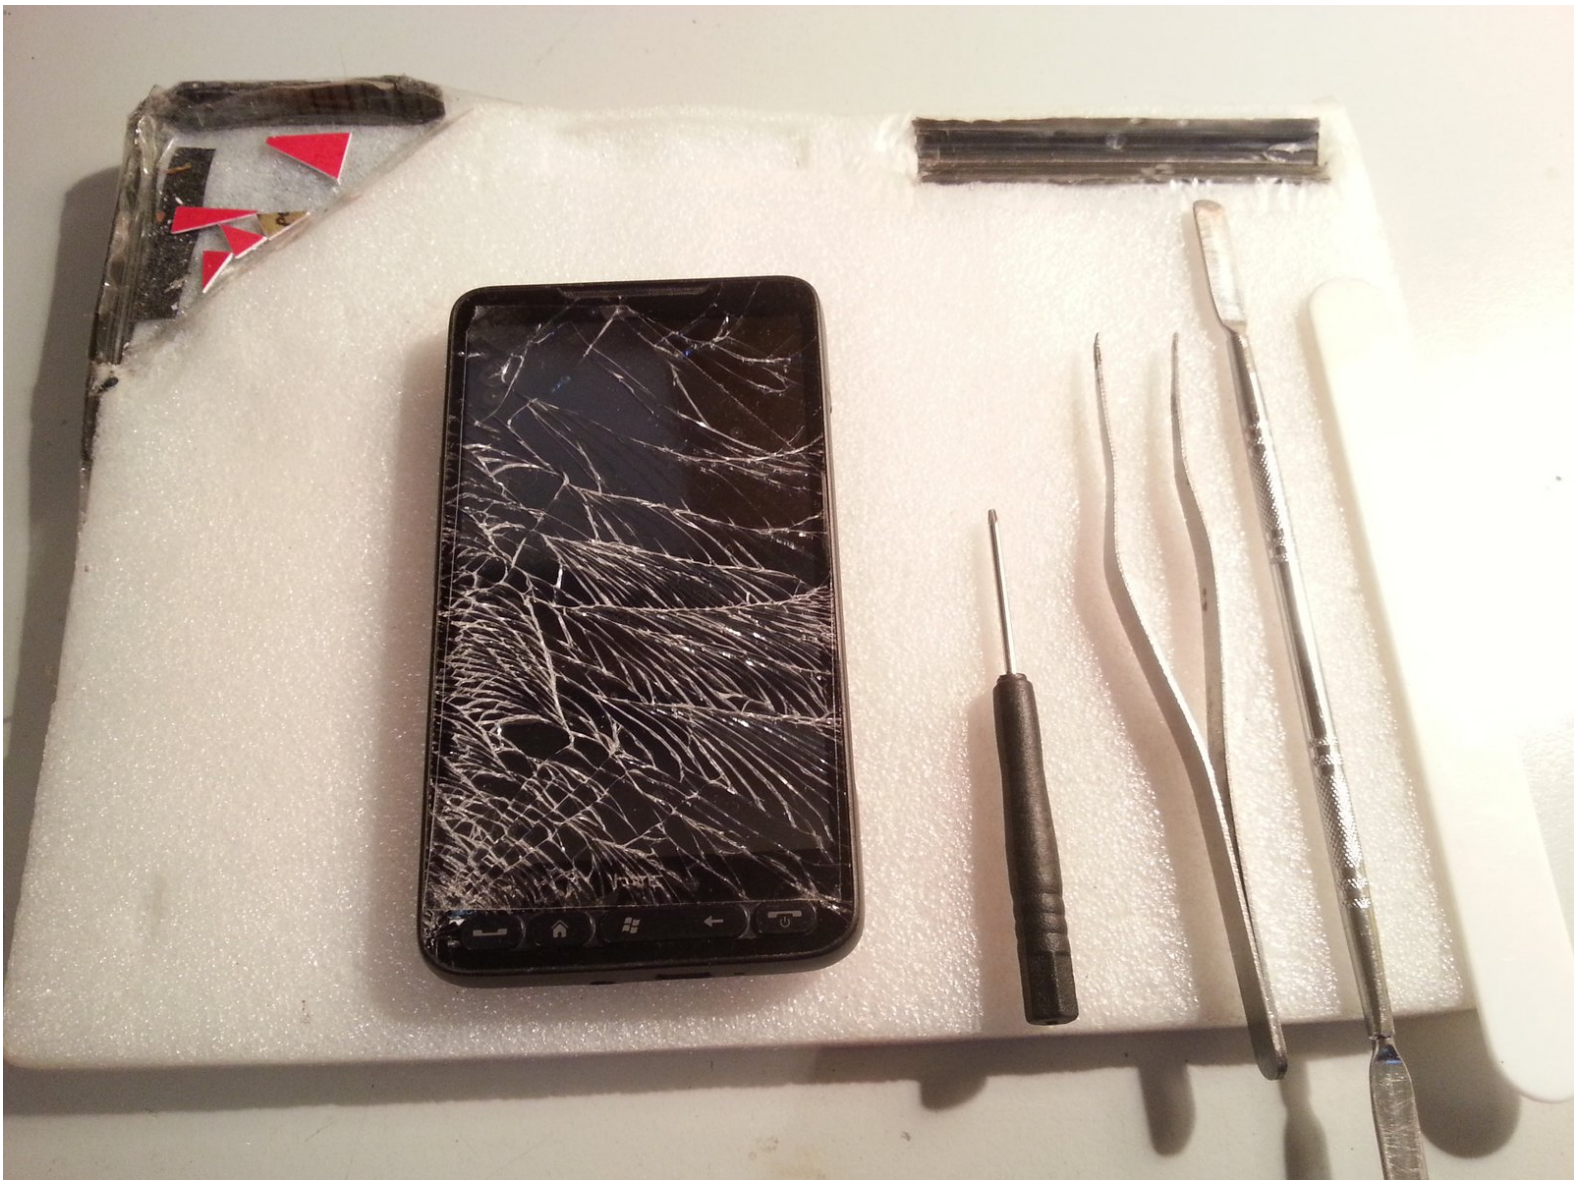

INTRODUCTION


This guide demonstrates how to properly remove and replace the front panel of an HTC HD 2.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front panel

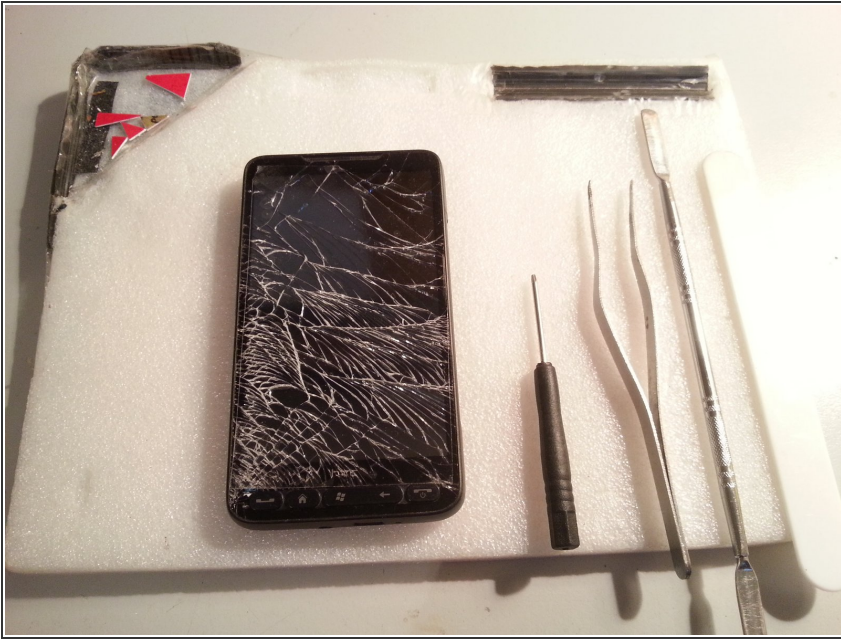

- HTC HD 2 Touch Glas Repair

Step 2




- Open the back cover and remove the battery.

Step 3 — These turn out 4 screws




- Use a small Philips screwdriver to remove the four indicated screws.

Step 4 — Push it out

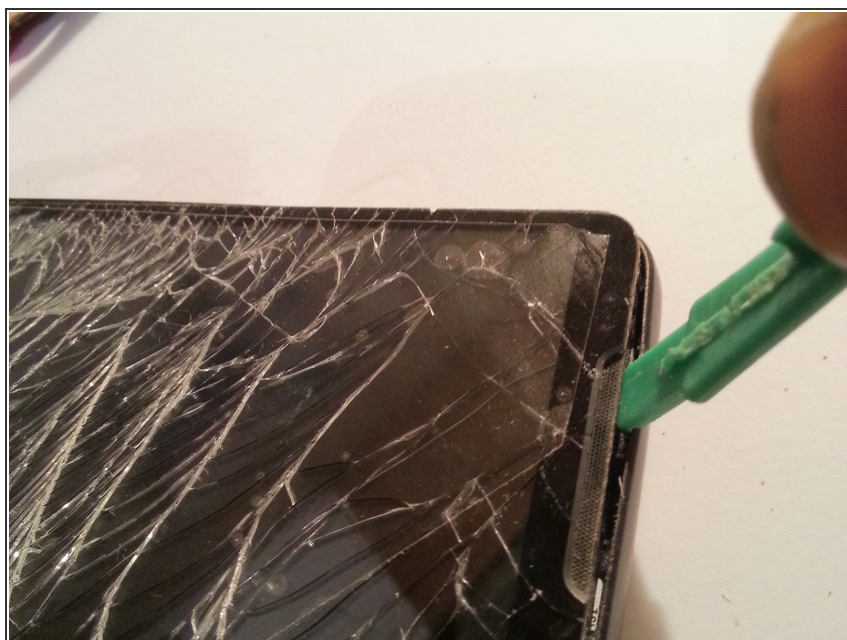



- Use a pry tool along the edges of the device to remove the broken or non-functional screen.

Step 5 — Pull flex cable connections and caution.

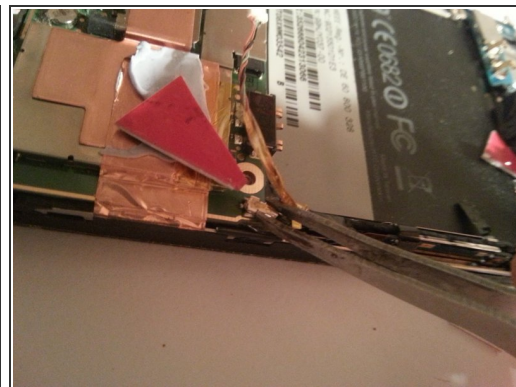



- Carefully pull the flex cable connections.

Step 6 — Nur lösen / Anschluss Flex links von Laut/leise buttons

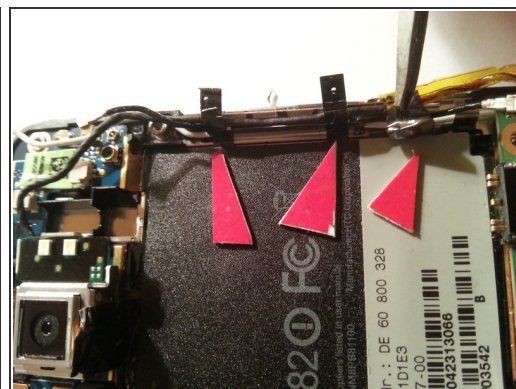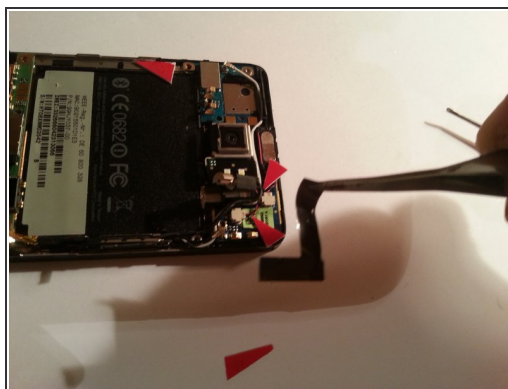



- Danach 3 tesa stripes lösen
- Using tweezers, release the 3 tesa strips.

Step 7

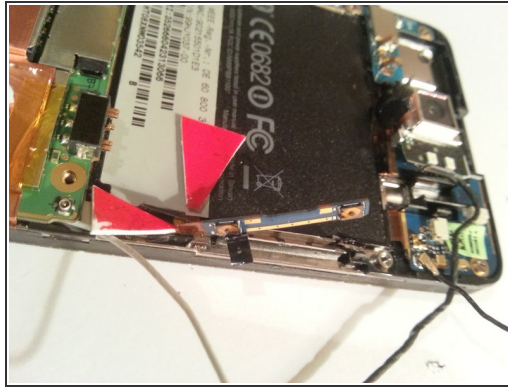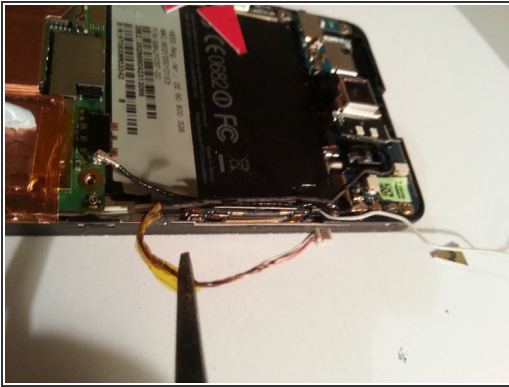




- Kabel vorsichtig aus dem Kabelschacht ...
- Carefully remove the cable from its shaft.

Step 8 — Flex

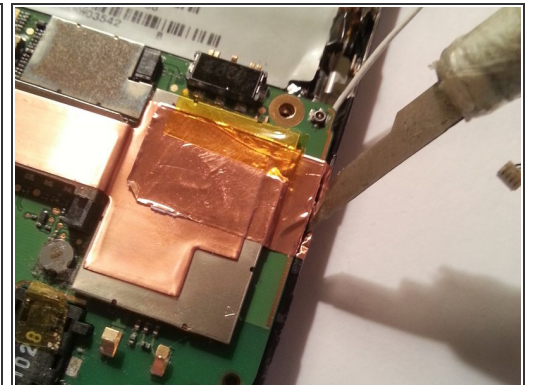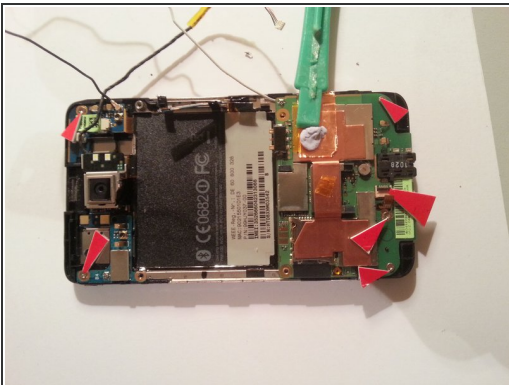




- FLEX

Step 9 — Raushebeln

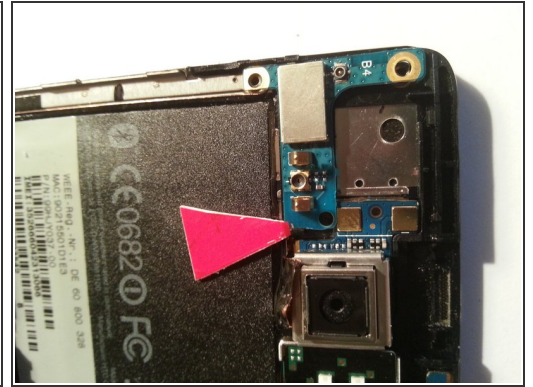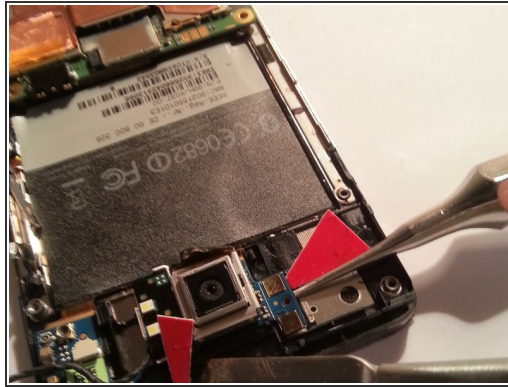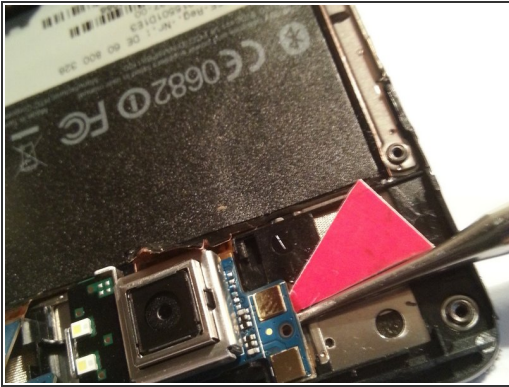


- Einzelnd

Step 10 — Weiter

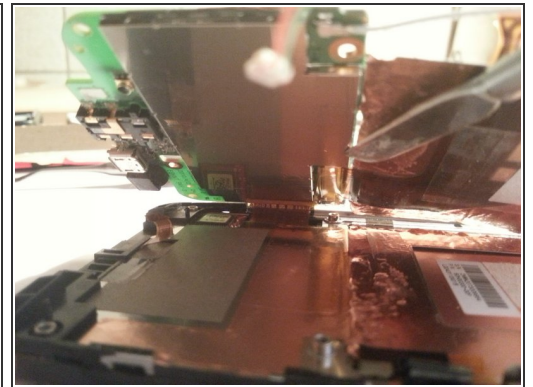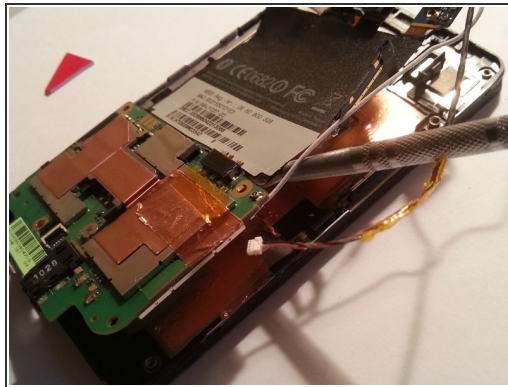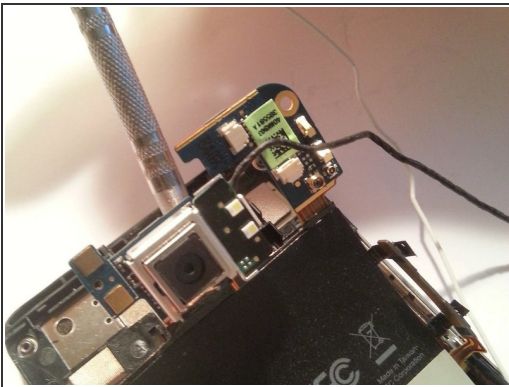

- Flex

Step 11 — Aufklappen

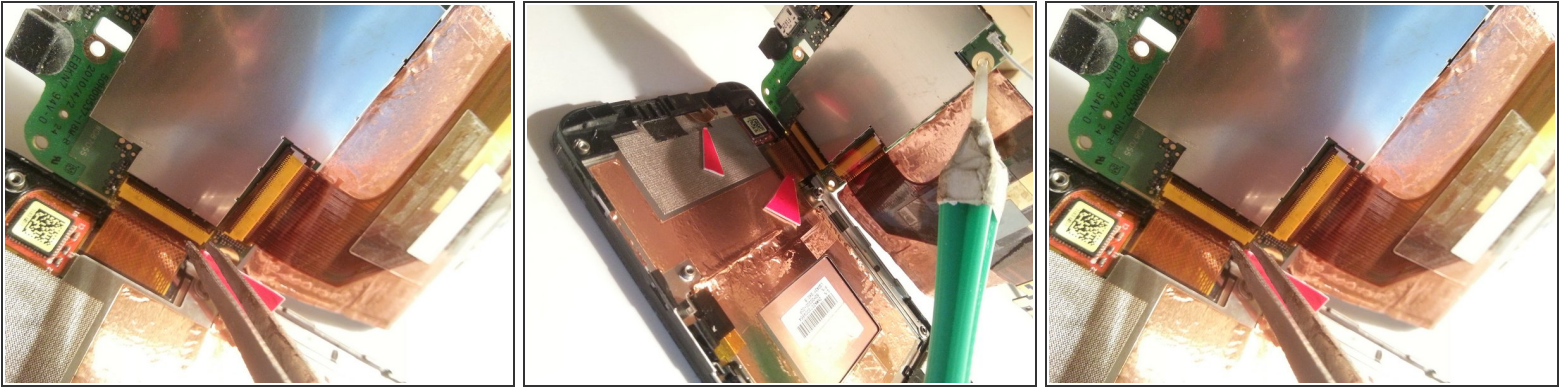

- Aufklappen

Step 12 — Lösen



- Vorsichtig

To reassemble your device, follow these instructions in reverse order.