

Sony Vaio VGN-SR140E Battery Replacement

Removing the battery is the first step in...

Written By: William Thomas



INTRODUCTION

Removing the battery is the first step in servicing or replacing any other component. The battery is locked in the computer but it is easy to unlock and slide out.




Step 1 — Battery



 Turn the laptop over and orient it as shown in the figure.

Step 2

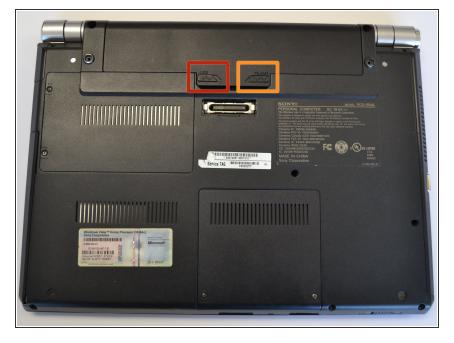

- Slide the lock latch to the right to release the battery lock.
- Slide and hold the release latch to the left.

Step 3





• Use a fingernail or plastic opening tool lift the battery while holding the release latch. Rotate the battery up and away from you to remove it from the laptop.

To reinstall the battery, follow these steps in reverse order