



Handspring Visor Edge Back Panel Replacement

The only tool needed is a #00 Phillips Screw...

Written By: Nick Lazarakis




INTRODUCTION

The only tool needed is a #00 Phillips Screw driver.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Back Panel

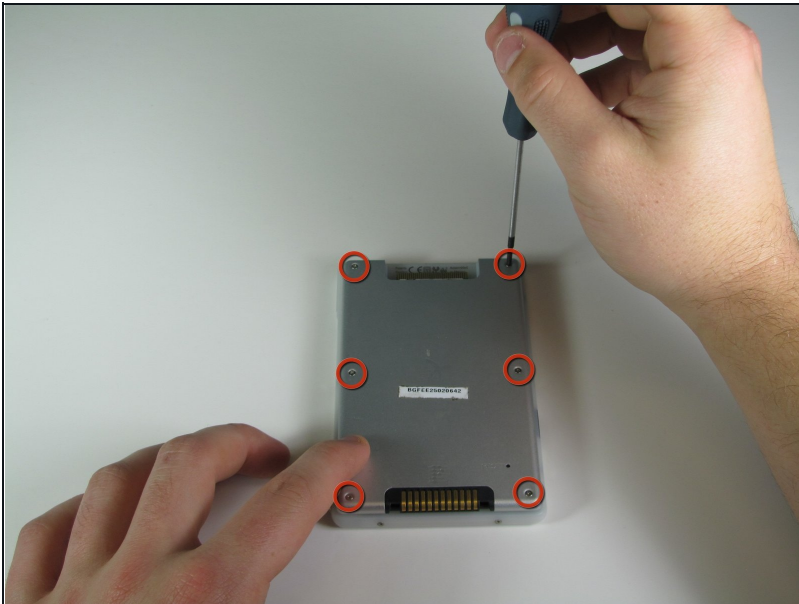

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

Step 2




- Remove the gray back plate from the PDA.

Step 3




- Remove the four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the 3.9 mm Philips screw holding the stylus holster to the frame.

Step 4

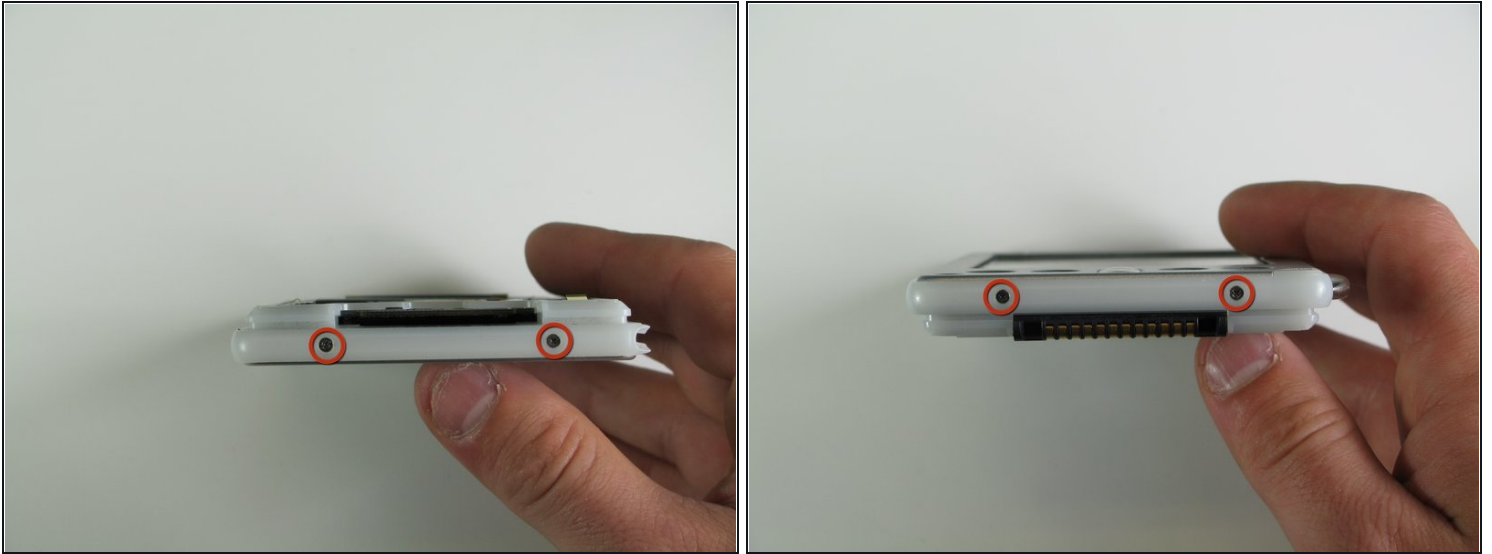

- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.

Step 5

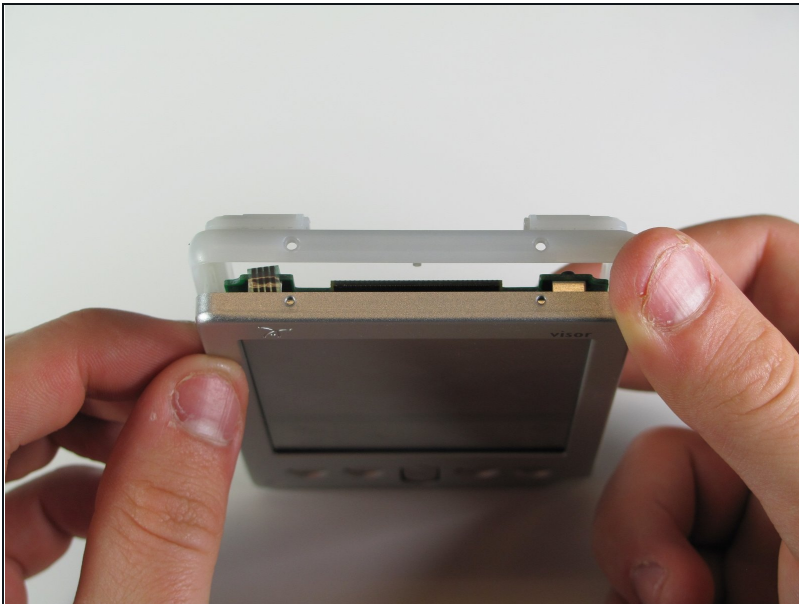

- Gently remove the white frame from the back of the PDA.

To reassemble your device, follow these instructions in reverse order.