



2011年初 13寸 MacBook Pro 一体化机更换硬盘

2011年初13寸 MacBook Pro 一体化机更换硬盘。

撰写者: Andrew Bookholt



介绍

使用本指南来更换坏掉的硬盘。

 工具:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

 章节:

- [MacBook and MacBook Pro \(Non-Retina\) SSD Upgrade Bundle](#) (1)
- [1 TB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the drive and all tools needed.
- [500 GB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the part and all tools needed.
- [250 GB SSD](#) (1)
- [500 GB SSD](#) (1)
- [1 TB SSD](#) (1)
- [MacBook Pro 13" Unibody Hard Drive Bracket](#) (1)
- [Universal Drive Adapter](#) (1)

步骤 1 — 底盖





- 卸下下列十个螺丝
 - 3个 14.4 mm Phillips #00 螺丝
 - 3个 3.5 mm Phillips #00 螺丝
 - 4个 3.5 mm 肩部 Phillips #00 螺丝
- ⓘ 装回小螺丝时，将其垂直于外壳的轻微弯曲对齐（不是直着往下对齐的）。

步骤 2



- 使用手指从靠近MacBook 风扇处撬开背盖。
- 移走背盖、

步骤 3 — 电池连接

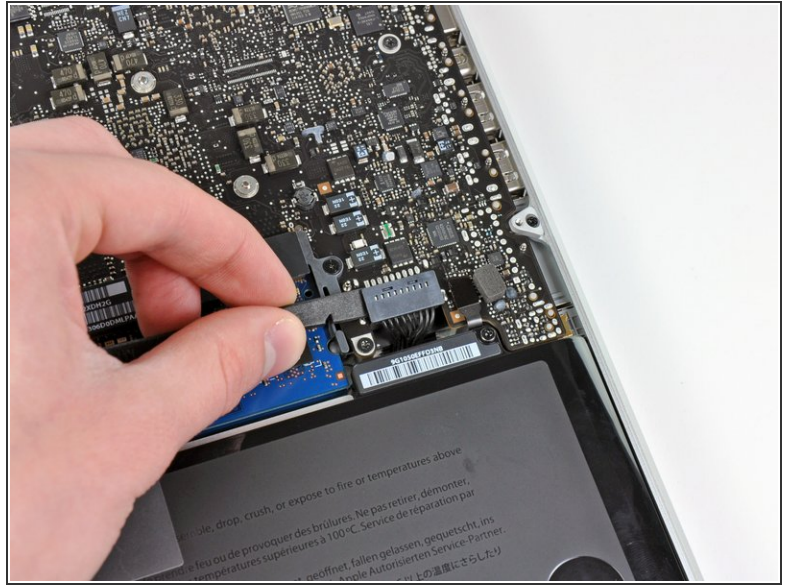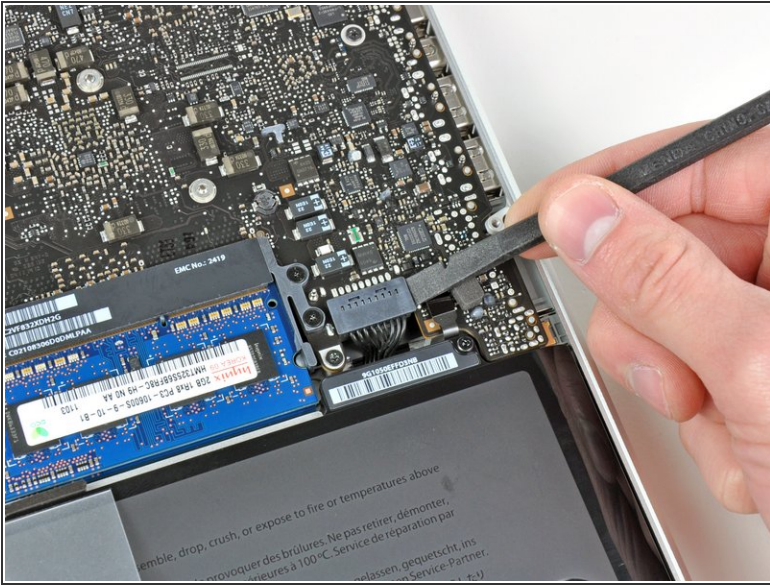


- 使用撬棒边缘处来将电池连接器从逻辑板插座上撬起。
- ❗ 使用撬棒撬起连接器的两个“短边”有助于断开连接。小心对连接器进行操作，连接器很容易断开。

步骤 4



- 稍微弯折连接器，使其远离逻辑板，来确保您进行其他操作时不会意外的重新连接。

步骤 5—硬盘

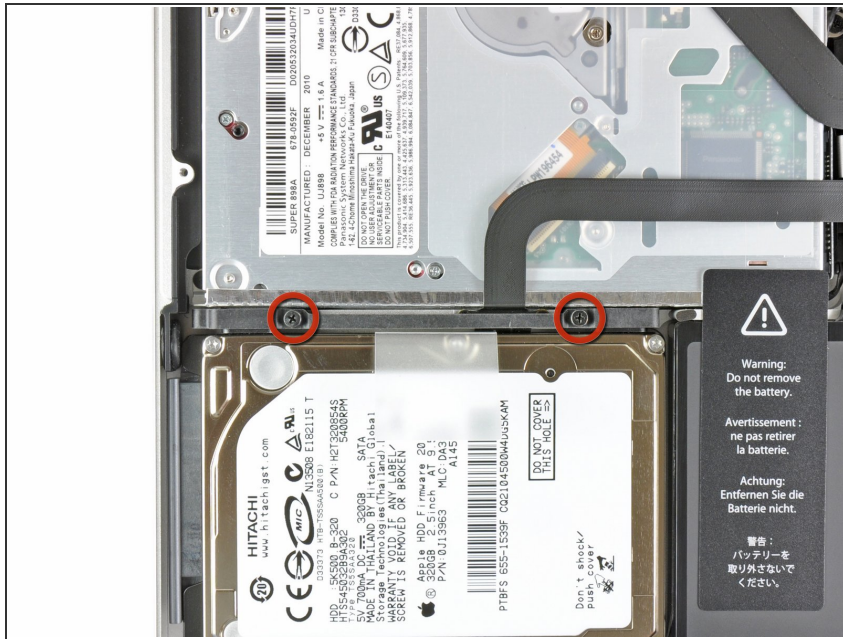

- 松动在硬盘支架与顶壳固定的2个 Phillips 螺丝。
- ⓘ 这两个螺丝将仍然在硬盘驱动器支架上。

步骤 6



- 移除硬盘支架。
- 硬盘支架可能与顶壳连接的很紧。

A close-up photograph showing a person's hand placing a 2.5-inch SATA hard drive into a laptop's drive bay. The drive is a Hitachi model with a white label. The laptop's internal components, including the drive bay and surrounding circuitry, are visible.



- 使用粘在硬盘上的拉手将硬盘拉出。
-  切勿完全将硬盘取出，它仍与硬盘驱动电缆相连。

HITACHI
www.hitachigst.com
 333373 HTB-T056AA(B)
 CE
 HITACHI
 HDS5450320A
 320GB 7200rpm
 512MB 8MB
 320GB
 C P/N HCT056AA(B)
 N3508 E182115 T
 5200564
 320GB
 SATA
 MADE IN THAILAND BY Hitachi Global
 Storage Technology Co., Ltd.
 WARRANTY VOID IF ANY LABEL
 SCREW IS REMOVED OR BROKEN
 J
 Apple
 Reale HDD Firmware 2010
 320GB 12.5 Inch, AT 9.5mm
 P/N 011969 MC4522
 A14522
 PTFB 655-1536F C02104530040G4M4
 DO NOT COVER THIS HOLE
 Don't shock/
 push cover
 ⚠️



- 将硬盘驱动电缆从硬盘上拉出。
- 移走硬盘。

步骤 9 — 硬盘

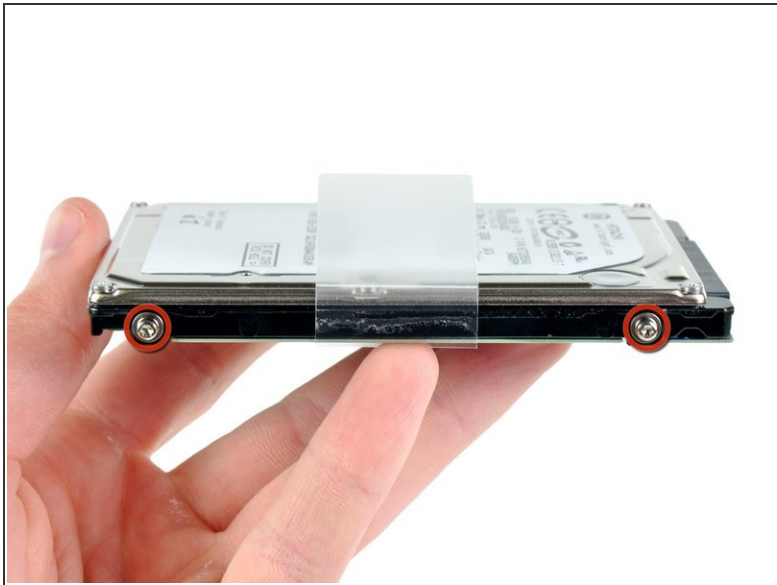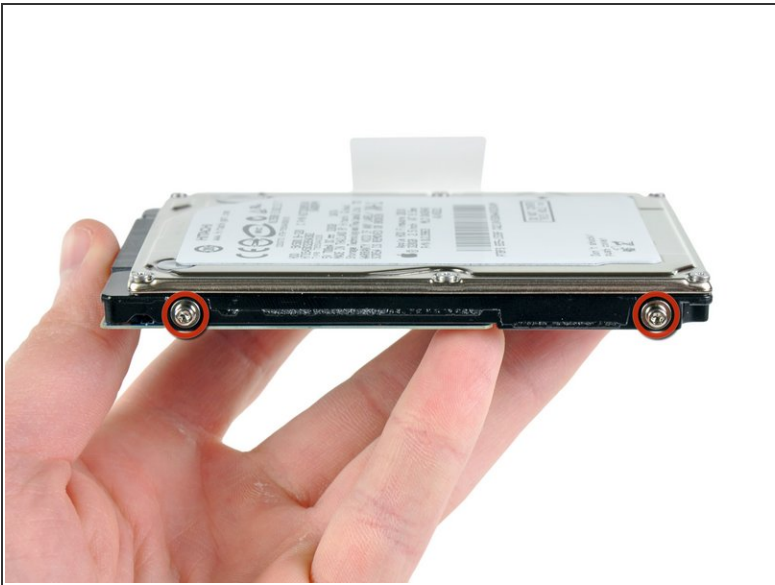

- 从硬盘侧面卸下四个 6.0 mm T6 Torx 硬盘固定住。
- 将固定住安装在新的硬盘上。
- ⓘ 如有需要请将在旧硬盘上粘的拉手也贴到新的硬盘上。
- 🔧 如果您安装新的硬盘，请参阅我们的指南[安装 Mac OS X 10.5 Leopard](#) 安装系统。
- ⓘ 您可以参考[一些并未随附安装 OS X Lion 或更高版本的电脑可以在应用固件更新后使用 OS X 互联网恢复功能。](#) 以及[关于 macOS 恢复功能](#)

要重新组装您的设备，请按照本指南的相反顺序进行操作。