



撰写者: Andrew Bookholt



介绍

需要提前对机器拆解。

工具：


- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

步骤 1 — 可视硬盘



- 使用撬棒平的一端来把AirPort/蓝牙排线接口从逻辑板撬开。

步骤 2

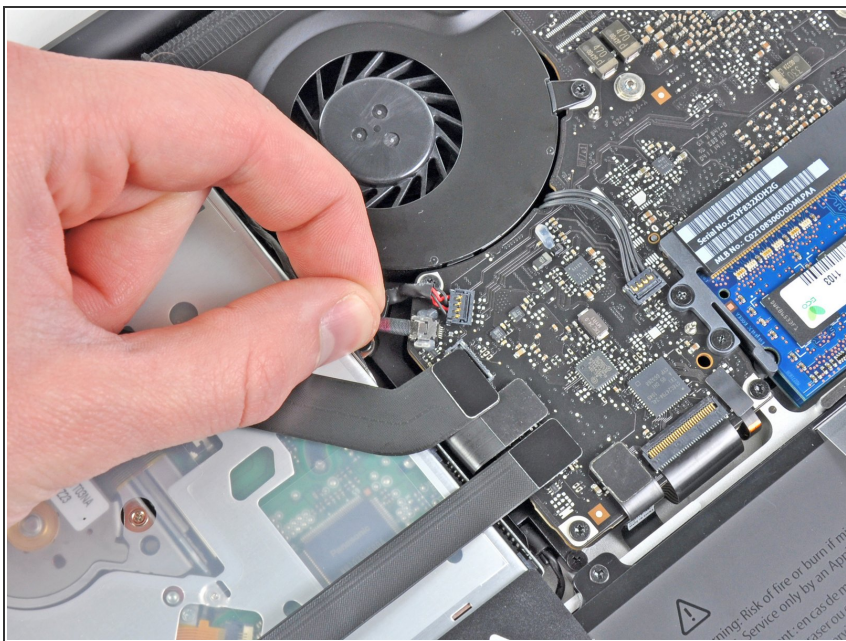

- 小心的把相机线缆从逻辑板上拉开。
- ⓘ 尽管iFixit的工作人员不建议，有些人还是忽略了这个步骤。如需要更多关于这一步骤的信息，请看这一步骤的评论。
- ⚠ 把线缆与逻辑板平行的拉动。向上拉动可能会破坏逻辑板或者线缆本身。

步骤 3



- 小心的把AirPort/蓝牙线缆移除，步骤和之前把摄像头线缆从低音炮和 AirPort/蓝牙后壳一样的方式移除。
- 用手把摄像头线缆从 AirPort/蓝牙后壳 移除。

步骤 4




- 使用撬棒的尖端来把最靠近逻辑板的天线接口从 AirPort/蓝牙板敲来。
- 用手把天线线缆从 AirPort/蓝牙后壳 移除。

步骤 5




- 移除以下五个螺丝：
 - 两个10.3 mm Phillips 螺丝
 - 两个3.1 mm Phillips 螺丝
 - 一个 5 mm Phillips 螺丝

步骤 6

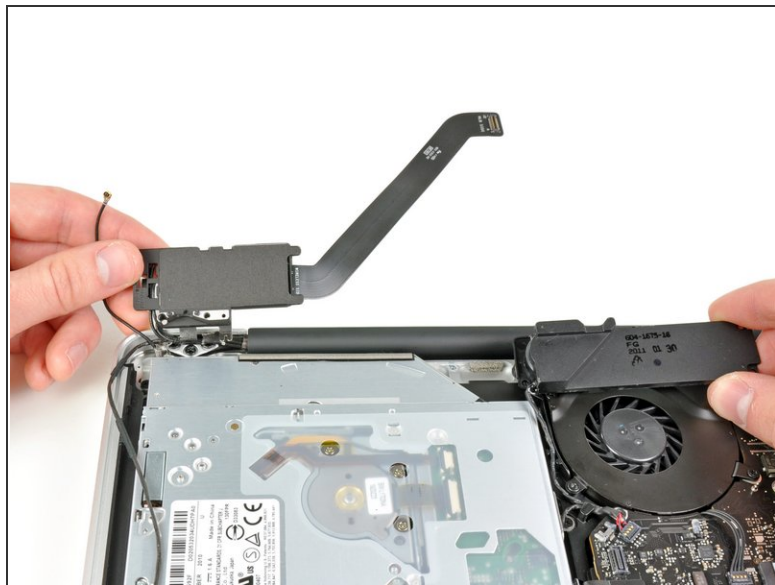


- 把 AirPort/蓝牙组件金额低音炮 向上拉到靠近可视硬盘的中部直到他们互相分离。
- 把AirPort/蓝牙组件和低音炮移除出可视硬盘顶部。

步骤 7

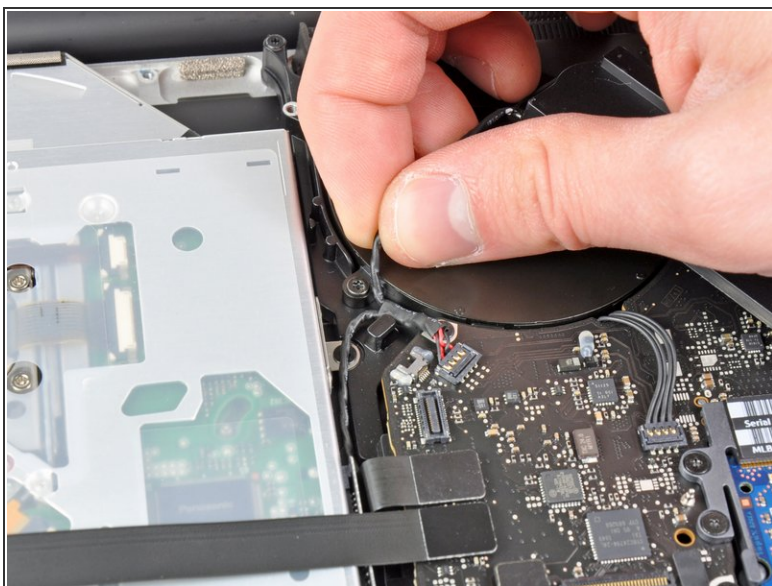


- 把右扬声器/低音炮线缆从可视硬盘附近拉出。
- 把右扬声器/低音炮线缆向上拉动来断开其与逻辑板的连接。

步骤 8

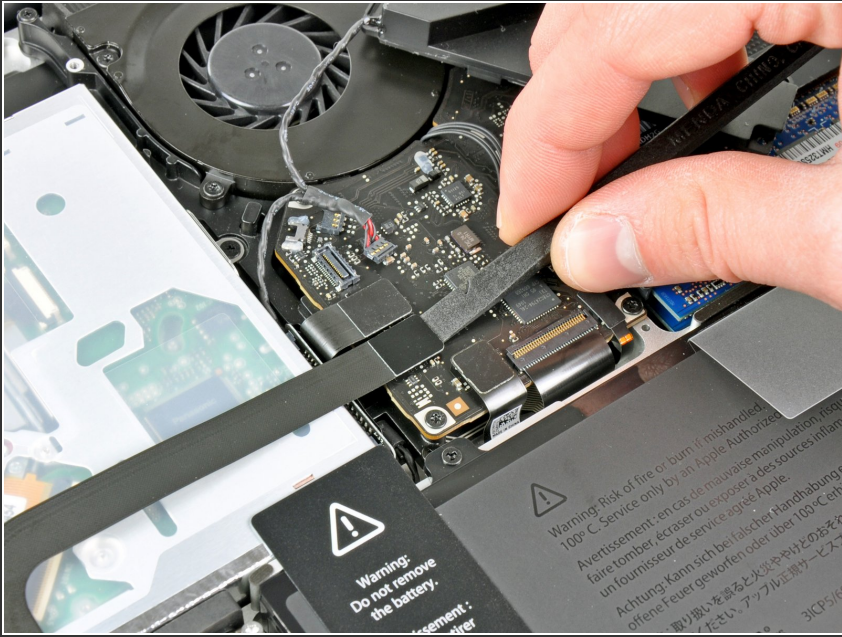

- 使用撬棒平的一端来把硬盘线缆从逻辑板上撬开。
- 弯曲硬盘线缆，使其远离硬盘。

步骤 9

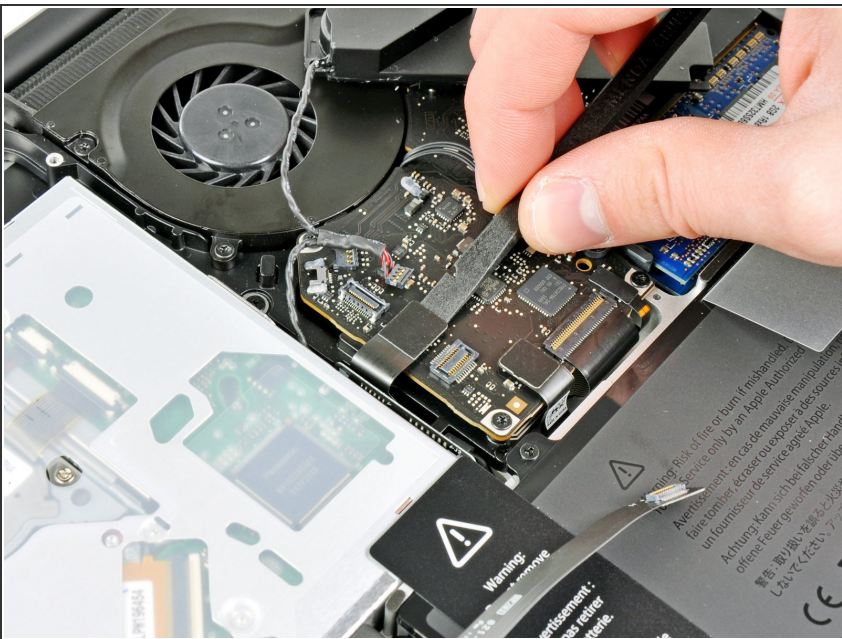

- 使用撬棒平的一端来撬开硬盘的与逻辑板之间的连接处。

-
- A close-up photograph of a person's hand holding a silver laptop hard drive. The drive is partially disassembled, revealing its internal components, including a green printed circuit board (PCB) with various electronic components and a white label with technical specifications and a barcode. The drive is being held over a laptop chassis, which shows a cooling fan and other internal components. The background is a plain, light-colored surface.

- 8 / 8 έίμ