


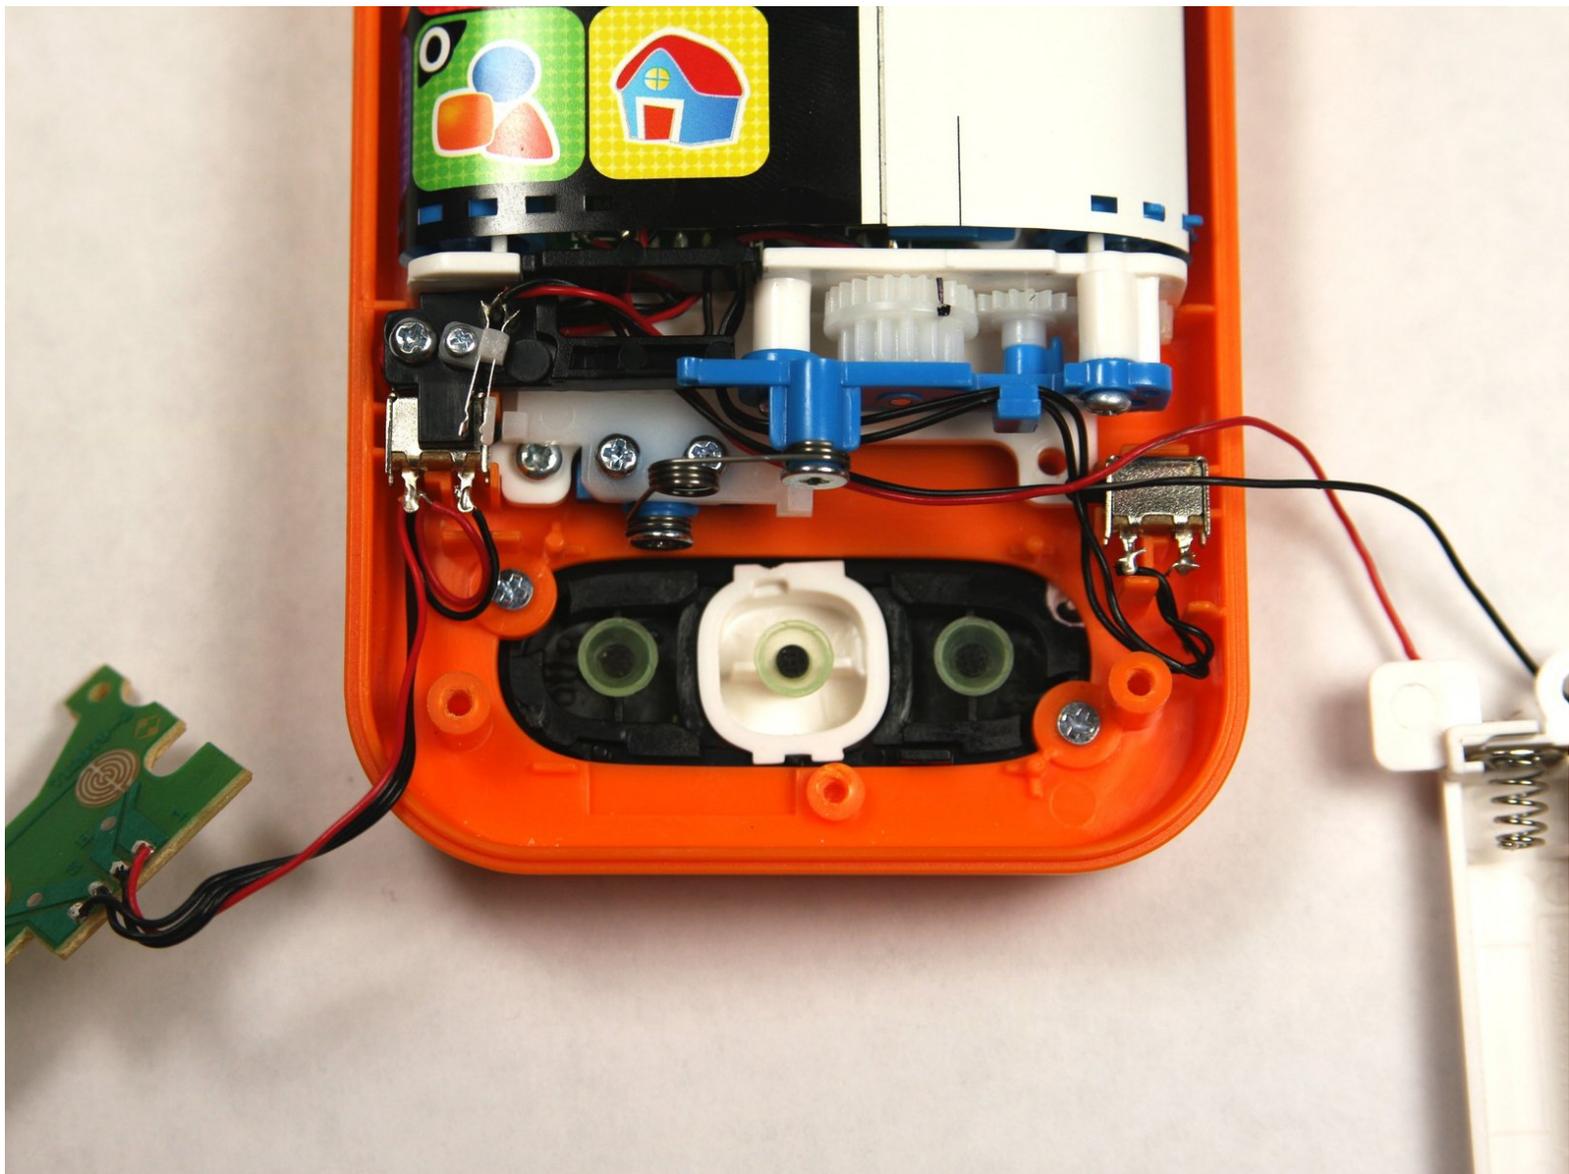

Phone Buttons Replacement

It is possible that the buttons may get jammed from time to time. This guide will show necessary steps to arrange them to work properly.

Written By: tellocordova



INTRODUCTION

This guide requires basic disassembly skills to get inside the phone. Allowing you to pull out and then realign the buttons.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Using a Phillips #1 screwdriver, remove the 4.8mm screw on the battery cover by twisting the screwdriver counter-clockwise.

Step 2




- Remove the two AAA batteries by pulling on one end of the battery and lifting it straight out.

Step 3



- ☑ When reassembling, align the notch on the battery panel with the slot on the phone.

Step 4 — Buttons

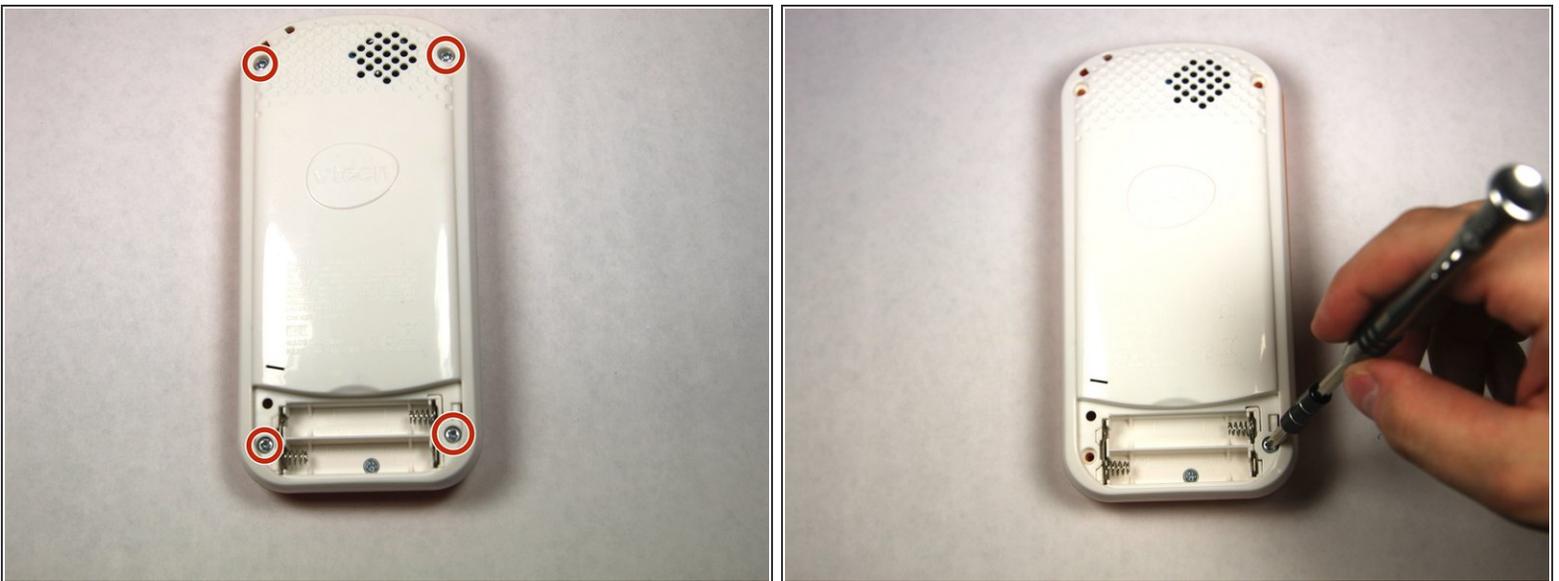


- Remove 4 13.8mm screws holding the device back using a Phillips #1 screw driver.

Step 5




- Removed 1 4.8mm phillips head screw with a #0 Phillips head screw driver and lift away battery back being conscientious of wires.

Step 6

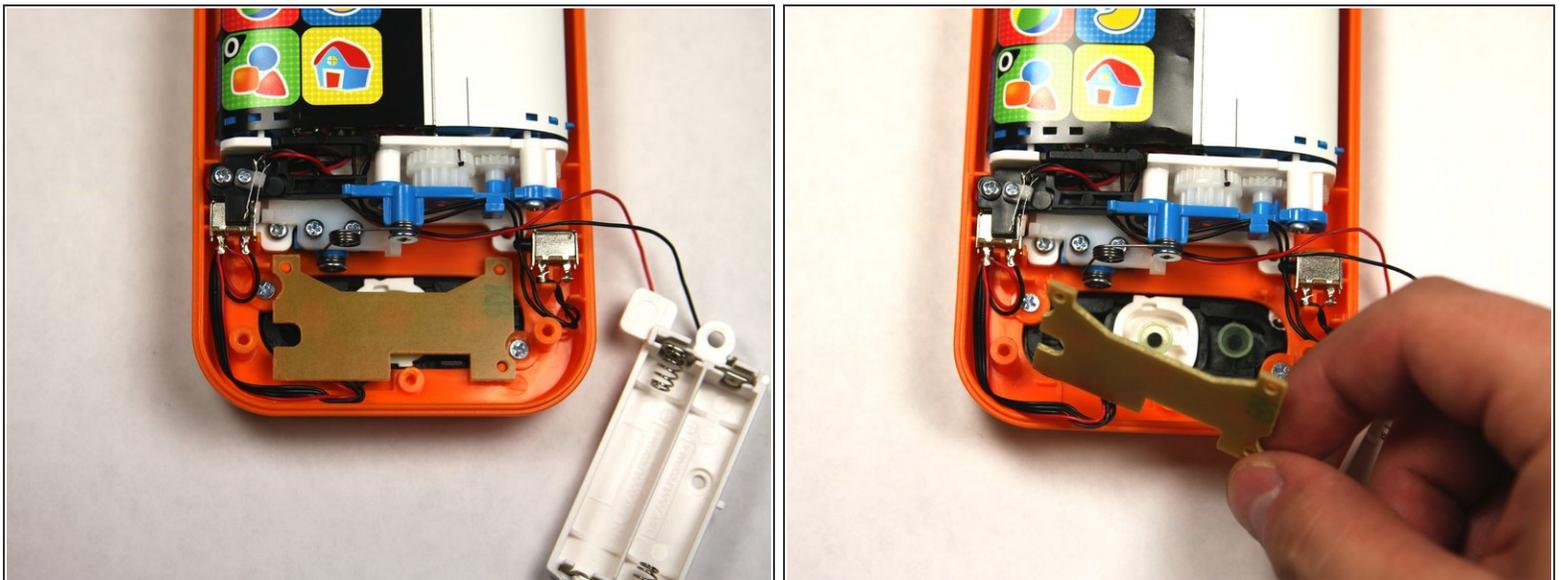

- Carefully remove the button board to gain access to the buttons.

Step 7

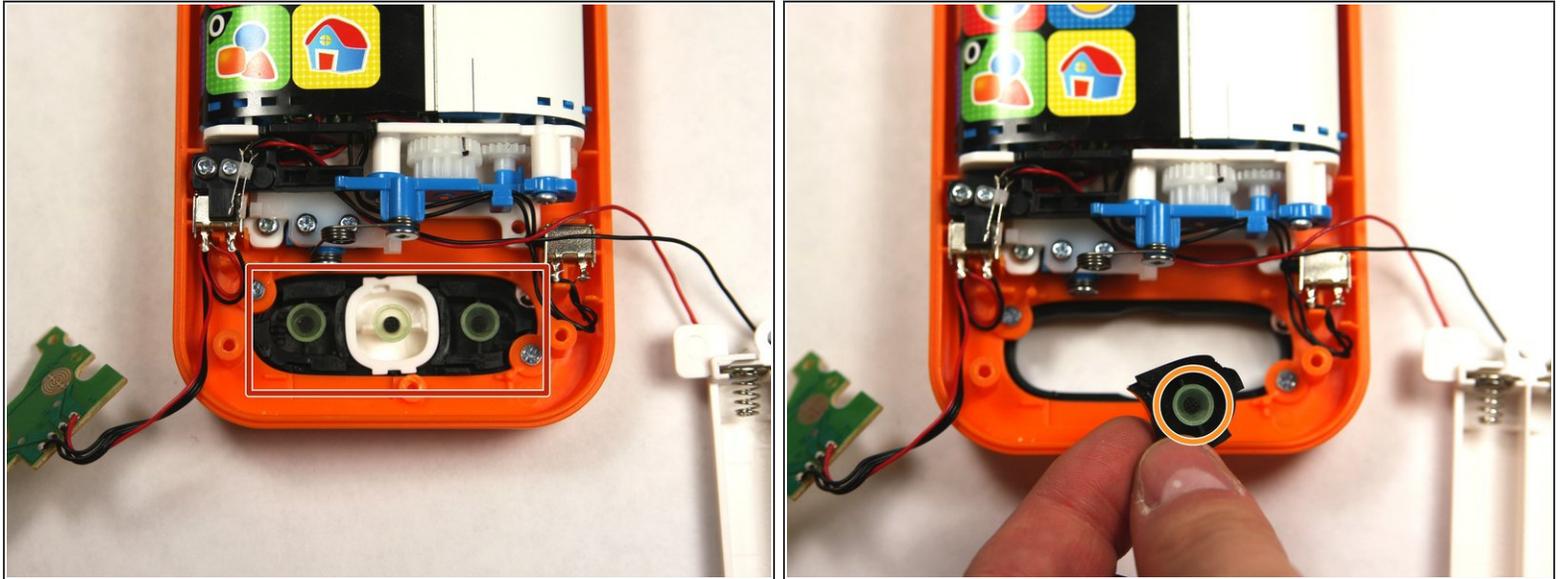

- Carefully remove each button from the baby phone.
- When handling buttons be sure not to misplace the button contacts.

To reassemble your device, follow these instructions in reverse order.