



HP Pavilion zd8000 CD/Optical Drive Replacement

These steps will allow you to remove your...

Written By: Allie Menard



INTRODUCTION

These steps will allow you to remove your CD/Optical drive with ease.

TOOLS:

Paper Clip (1)

Phillips #00 Screwdriver (1)

Step 1 — Battery



- Slide the battery release latch towards you.

Step 2



- Pull up on the battery to remove it.

Step 3 — CD/Optical Drive




- Remove the 8mm Philips screw located between the hard drive and the WiFi card.

Step 4



- Turn the laptop 90 degrees clockwise so you are facing the CD drive.
- Unbend a paperclip and insert the end into the small hole by the eject button to cause the tray to pop out towards you.

Step 5

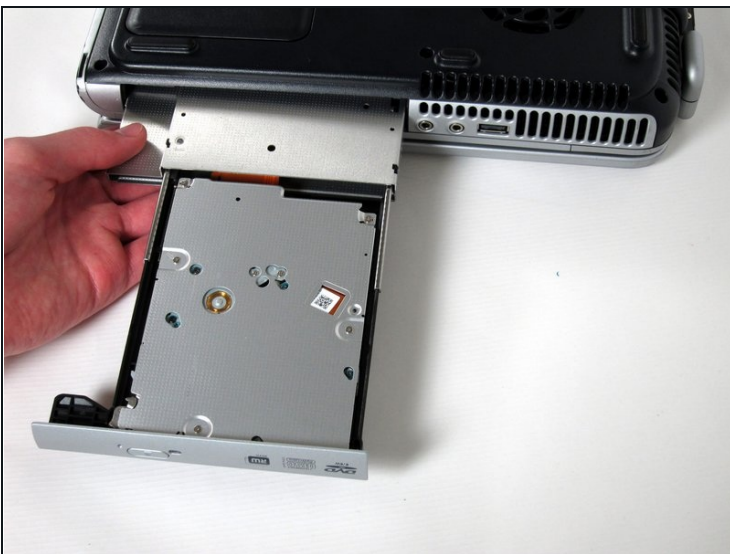

- Gently pull the tray away from the laptop and the rest of the optical drive will follow.

To reassemble your device, follow these instructions in reverse order.

