




# HP Spectre 13-3010dx Battery Replacement

Use the Back Case Removal Guide as a...

Written By: Laurisa Titterud

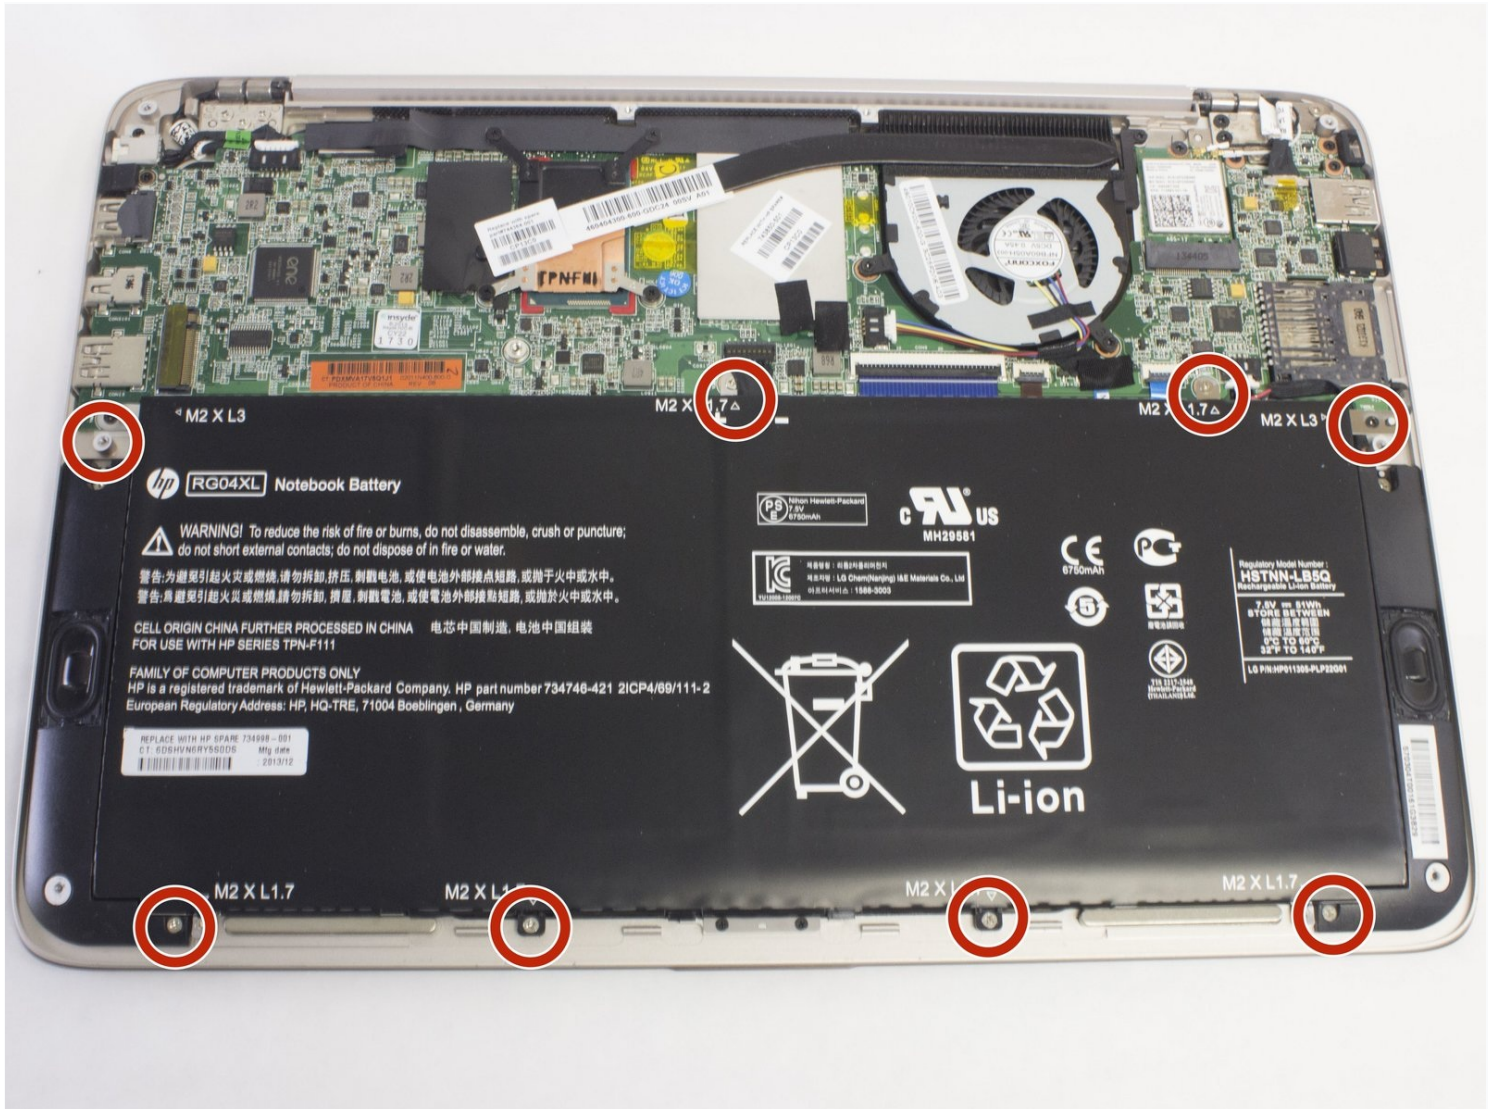

# INTRODUCTION

Use the Back Case Removal Guide as a prerequisite to this guide. Make sure you are wearing the Anti-Static Wrist Strap to avoid damaging the electronics.

It is always a good idea to remove the battery before working on any other components, for the safety of you and your computer.

---

## TOOLS:

[Anti-Static Wrist Strap](#) (1)

[iFixit Opening Tool](#) (1)


[Phillips #00 Screwdriver](#) (1)

[T4 Torx Screwdriver](#) (1)

---

## Step 1 — Removal of the Back Case




- Put on [Anti Static Wrist Strap](#).  
 It is always a good idea to ground yourself when working with electronics to prevent static buildup. You wear this strap to protect you and your device from accidental electrostatic discharge (ESD) damage during repairs.]
- Flip Computer Upside down.
- Unscrew the eight 3.3mm black screws on the back casing with the T4 Torx Screwdriver.

## Step 2



- Use the plastic opening tool to lift the back case off.
  - ① Use the plastic opening tools first; metal spudgers can damage your device.


## Step 3 — Battery

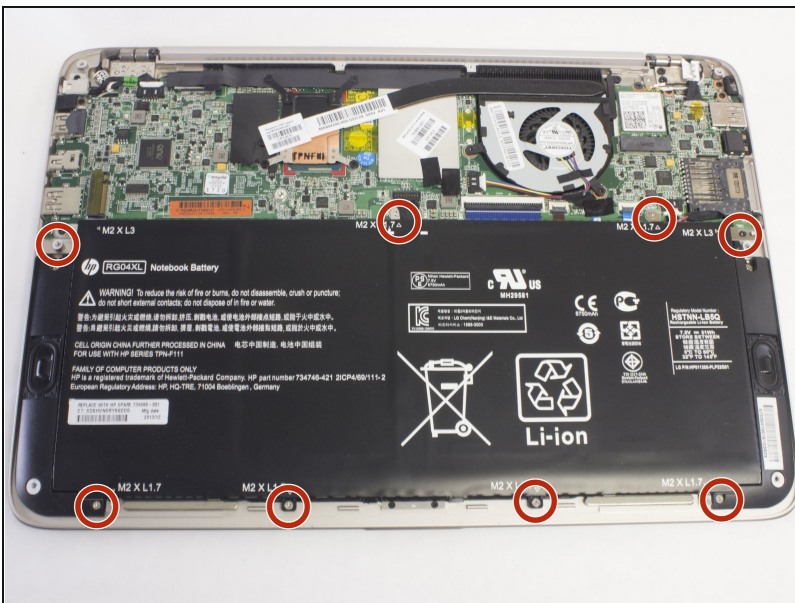

- Remove the six 2.0mm silver screws and the two 3.2 mm black screws using the PH00 Phillips Screw Head.



## Step 4

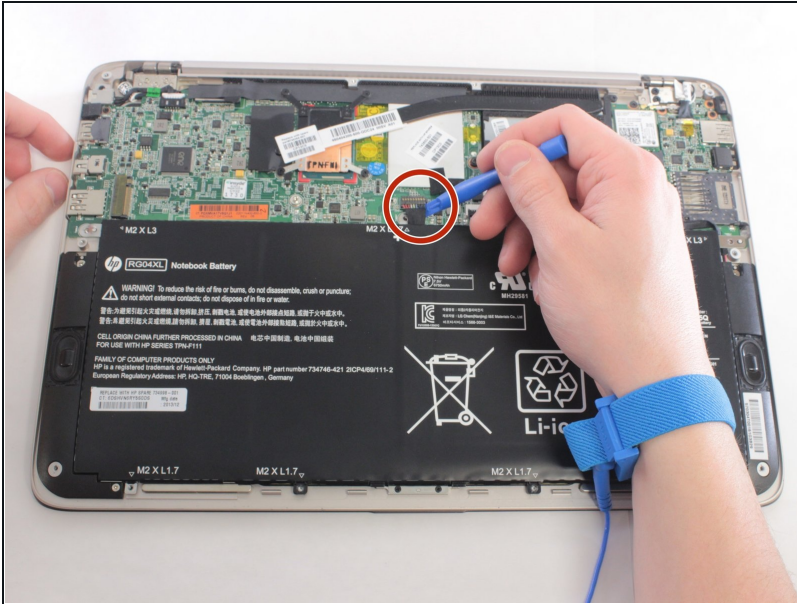

- Gently unplug from CONO851 plug, using the plastic opening tool.

## Step 5



- Gently lift up the battery and remove using the plastic opening tools.

To reassemble your device, follow these instructions in reverse order.