



# HTC Touch Front Buttons Replacement

Warning: Always be sure you are grounded...

Written By: Andrew Brooks



# INTRODUCTION

Warning: Always be sure you are grounded whenever handling any of the circuit or logic boards.

---

## TOOLS:

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)

T5 Torx Screwdriver (1)

---

## Step 1 — Front Buttons



- Using your finger, remove the back panel by sliding it up.

## Step 2



- Remove the battery.

## Step 3



- Remove the four screws in the corners of the phone using the T5 Torx screwdriver.




## Step 4




- Use the plastic opening tool to remove the front panel from the phone.
- Unplug the front button cable from the inside of the phone.

## Step 5

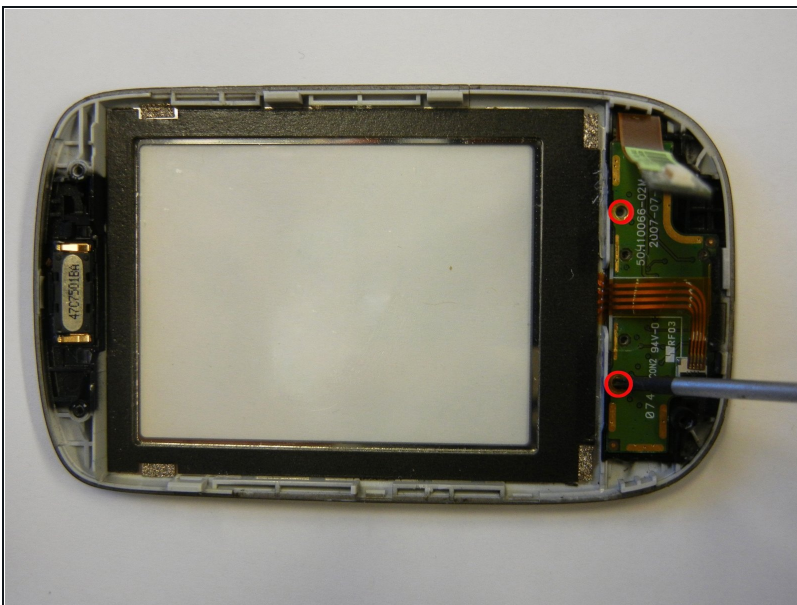

- Remove the two screws from the back of the front panel using the Phillips #00 screwdriver.

## Step 6

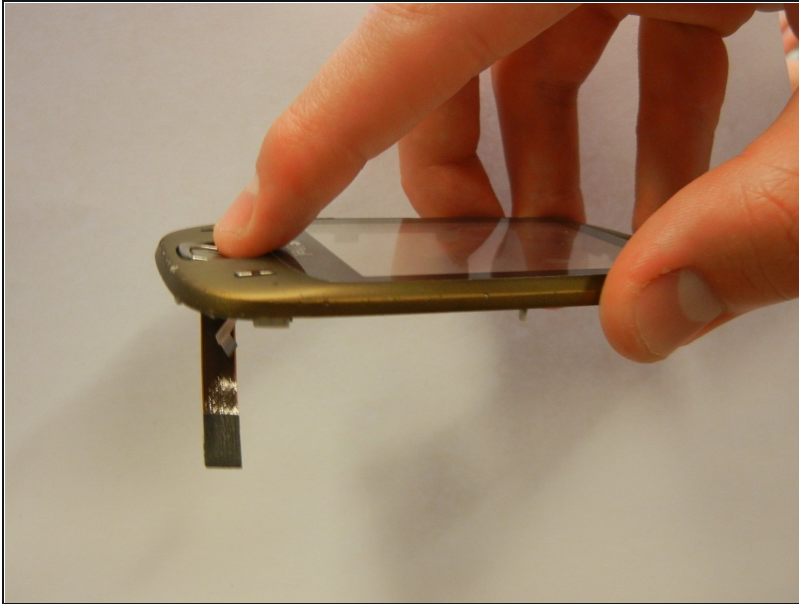

- Remove the small circuit board by gently pushing on the center button on the front of the phone.

## Step 7



- Remove the buttons by pushing on them from the front side of the phone.

---

To reassemble your device, follow these instructions in reverse order.