




Nintendo 3DS Microphone Replacement

Nintendo 3DS microphone prerequisite

Written By: David Hodson

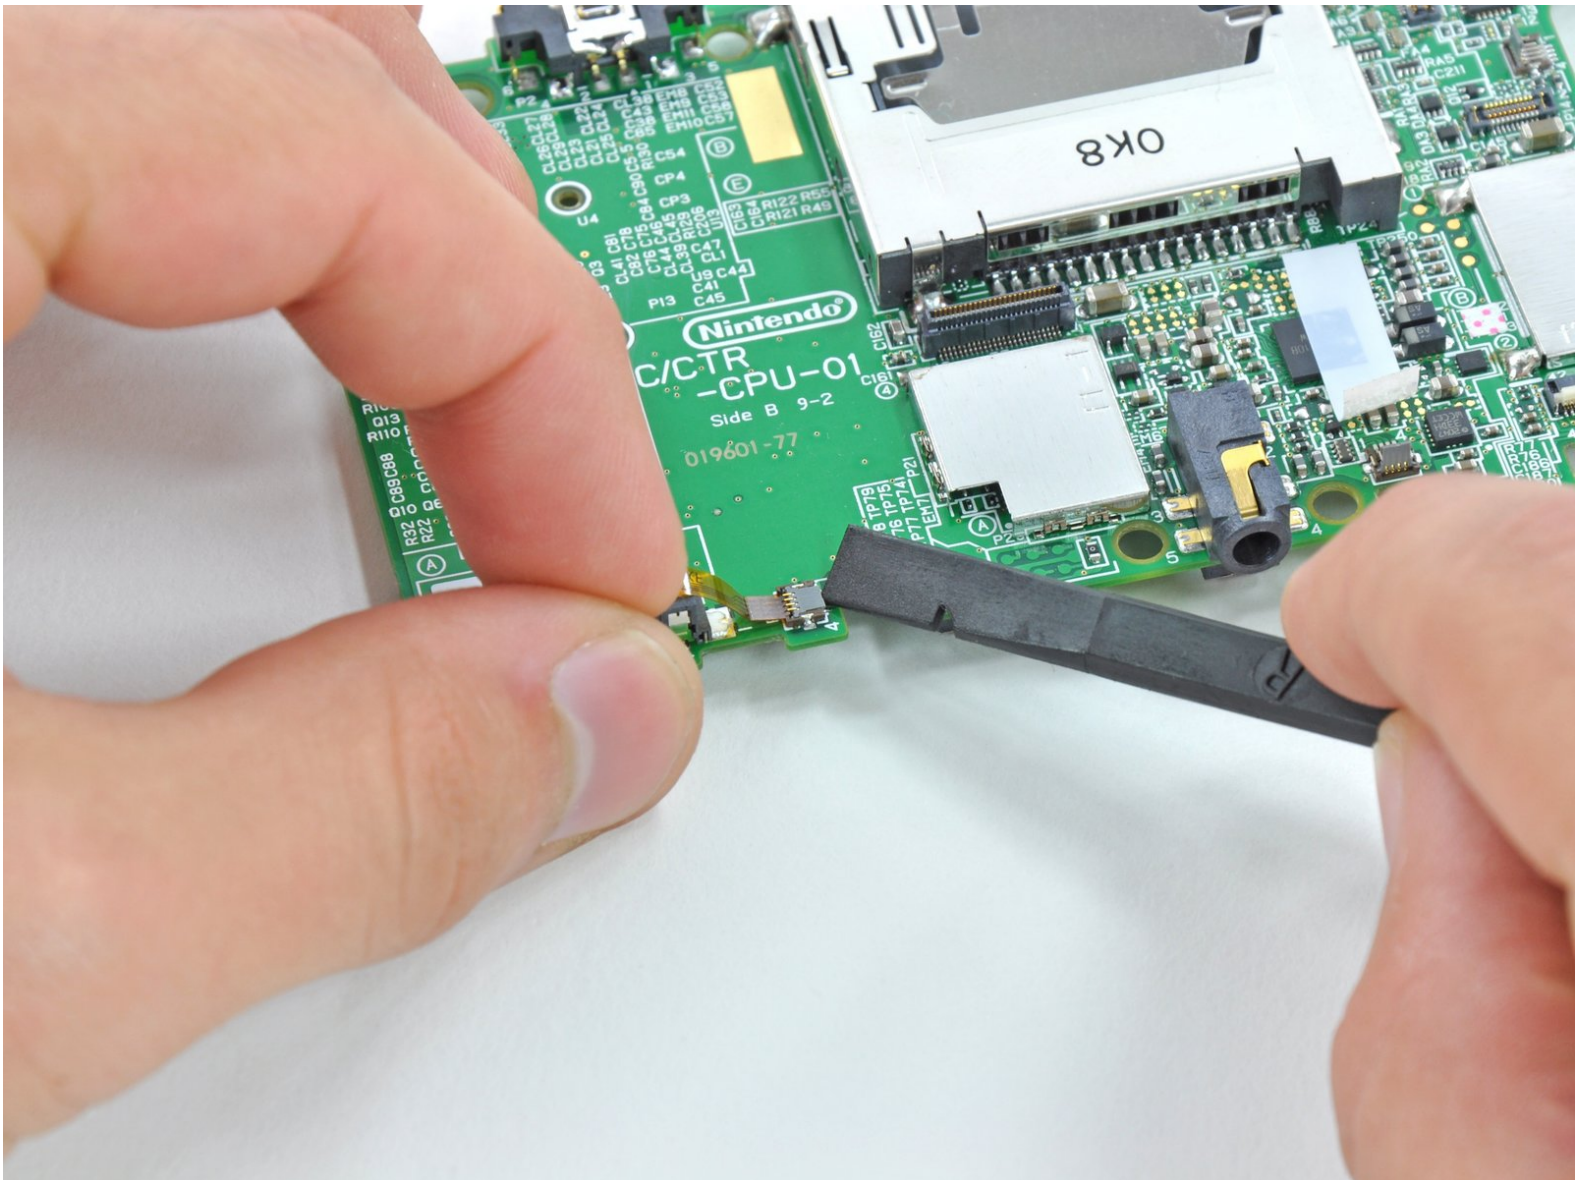

INTRODUCTION



This guide is a prerequisite to replacing the motherboard.



TOOLS:

- [Spudger](#) (1)
-


Step 1 — Microphone

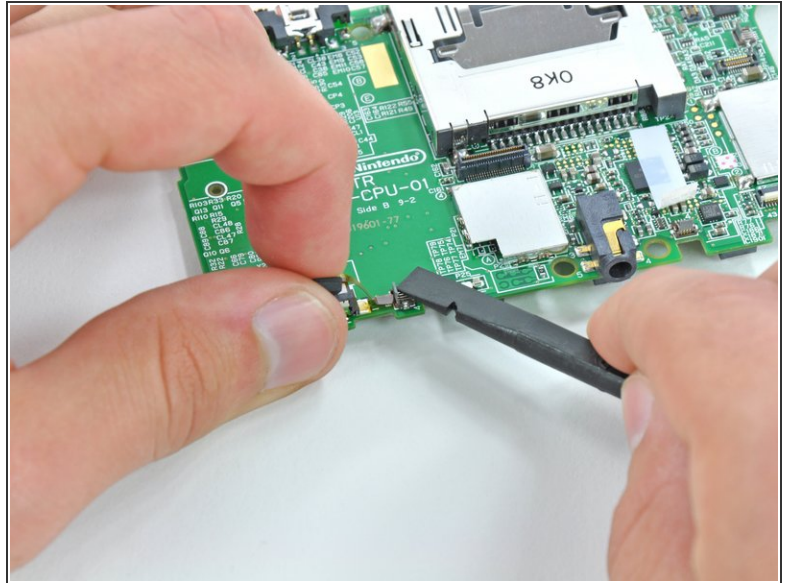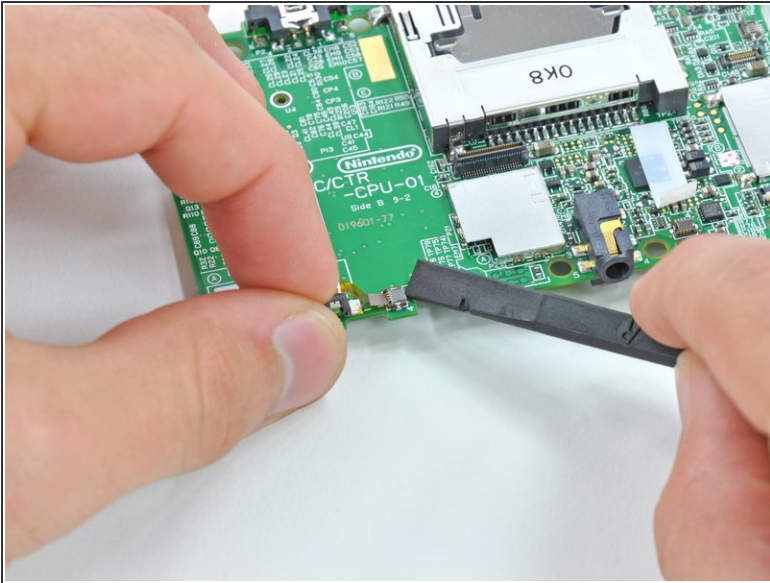

- Use the flat end of a spudger or your fingernail to flip up the retaining flap on the microphone ribbon cable ZIF socket.

⚠ Be sure you are prying up on the hinged retaining flap, **not** the socket itself.

Step 2

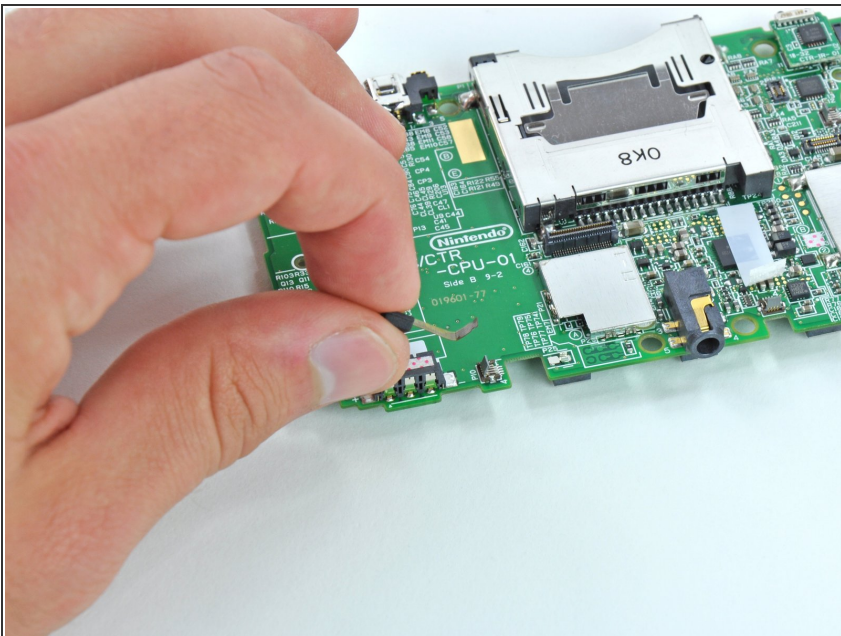

- Lift the microphone and its attached ribbon cable off the motherboard.

To reassemble your device, follow these instructions in reverse order.