



Dell Inspiron 6400 keyboard Replacement

I need to replace the keyboard Dell Inspiron Mini 1012. Because some keyboard it struck together.

Written By: kempc8



INTRODUCTION


Dell Inspiron Mini 1012 key board removing and replace the keyboard .



TOOLS:



- [Essential Electronics Toolkit](#) (1)
-

Step 1 — replacing Keyboard

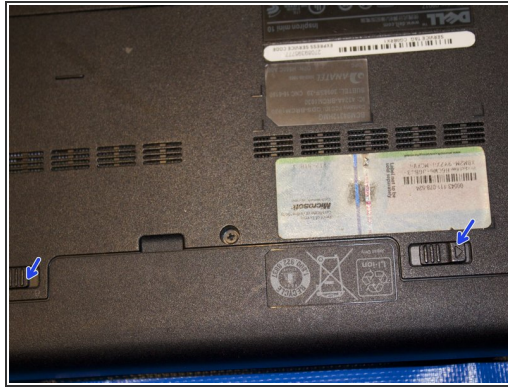


- Turn over laptop .Remove battery from laptop by pushing the two tabs are highlighted in blue. Place the battery off to the side.

Step 2

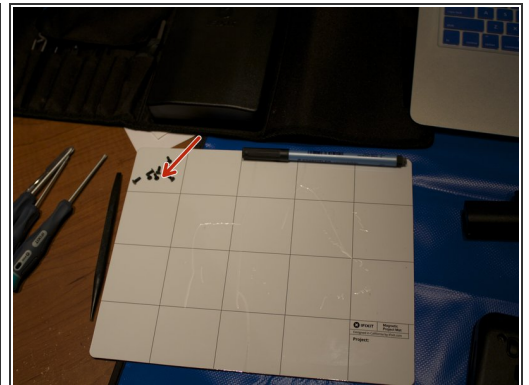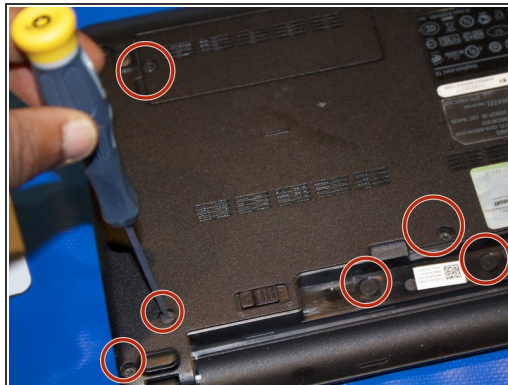

- Remove the 3 screws highlighted in red that secure the keyboard to the case using the screwdriver with largest phillips head in the box. Make

Step 3

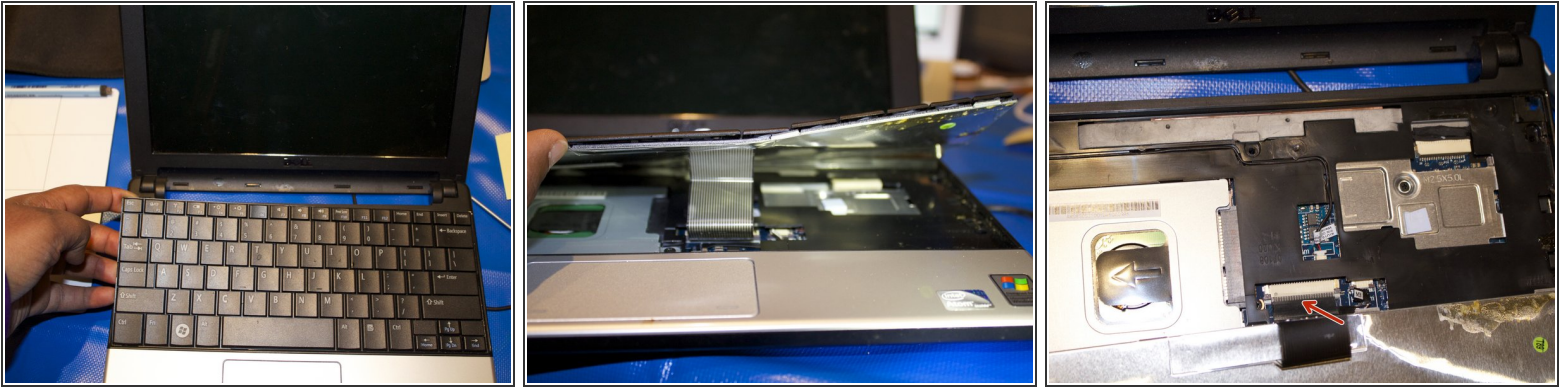

- Turn the device right side up and open the device to view the keyboard.
- Remove the keyboard away from the case ,using a plastic spudger if necessary.
- The keyboard will still be attached to the motherboard by a ribbon cable.

Step 4



- Replace the new keyboard with plastic spudger.
- The keyboard will have to be attached to the motherboard by a ribbon cable.
- Snapped the keyboard back in place.

Step 5



- Flip over the laptop
- Put the screws back in laptop

Step 6



- Place the battery and lock it into place

To reassemble your device, follow these instructions in reverse order.