


Chain Adjustment

How to adjust the chain of a Poulan 1.5 HP Peak 8 Amps Pole chainsaw

Written By: kempc8

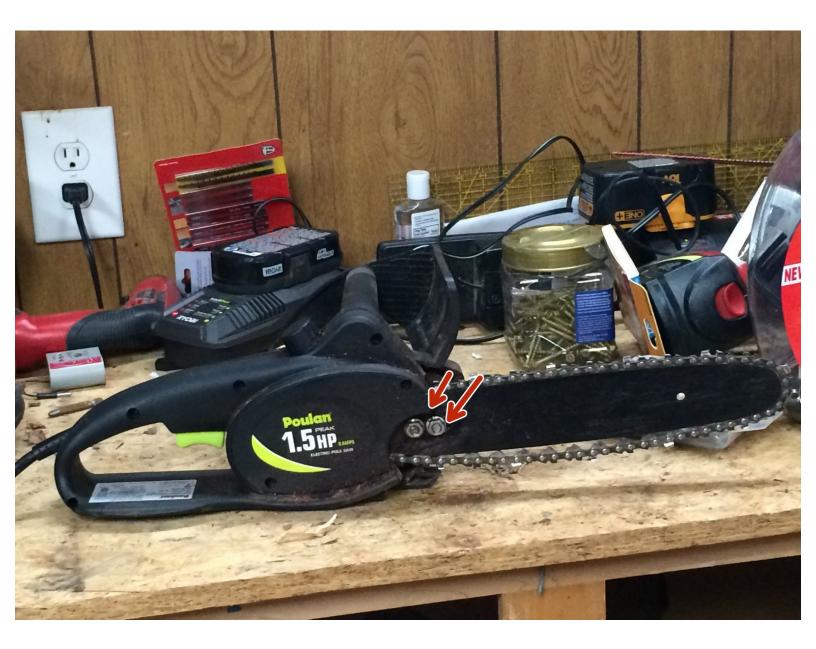

This document was generated on 2020-11-16 10:37:11 PM (MST).

INTRODUCTION

Outline what you are going to teach someone how to do.

This document was generated on 2020-11-16 10:37:11 PM (MST).

Step 1 — Chain Adjustment



- Locate the two nuts and screws to adjust the chain saw.
- YOU MAY NEED TO PULL THE BLACK INTER CASING THAT THE CHAIN GO AROUND TO TIGHT

Step 2



- USE nut driver 7/16 to loosen the nuts and realignment chain around the black casing.
- Tight the chain saw chain that it tight enough that it move around the black inter case.
- YOU must have to readjust move than once.
- (i) Must have to pull the black casing forward . Readjust the nuts agaian.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-16 10:37:11 PM (MST).