


# iPad 2 CDMA LCD Replacement

Prereq only for removing the front panel.

Written By: Phillip Takahashi

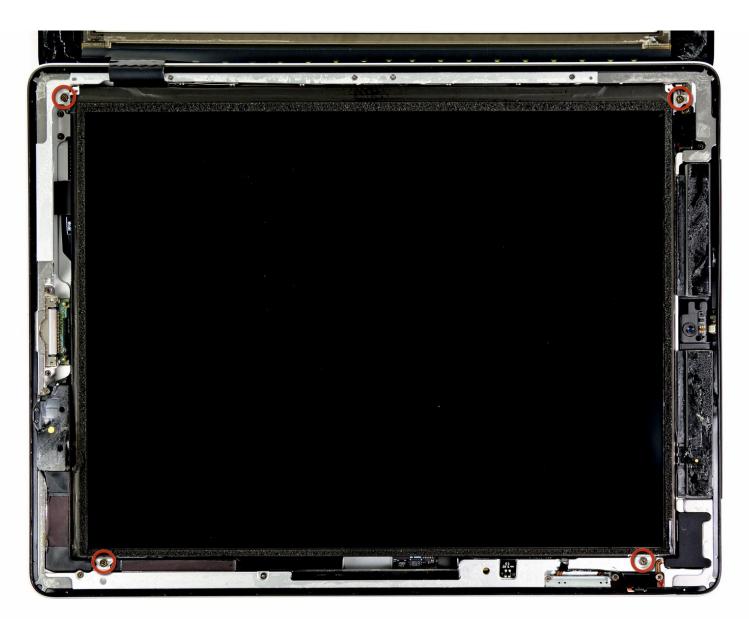


## INTRODUCTION

Prereq only for removing the front panel.

## TOOLS:


• Phillips #0 Screwdriver (1)

### Step 1 — LCD

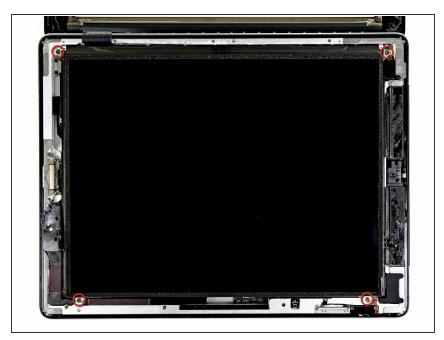

 Remove the four 2.0 mm Phillips #0 screws securing the LCD to the rear case.

#### Step 2

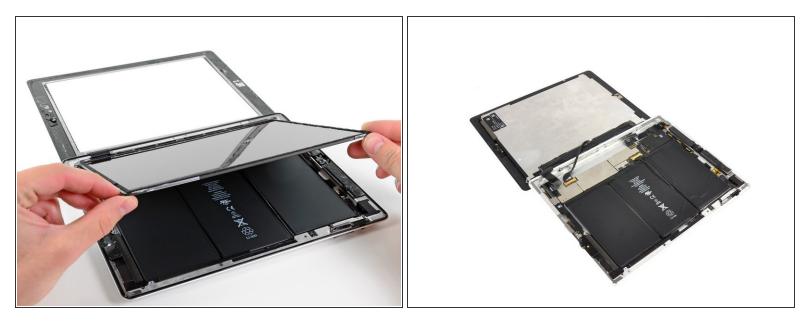

• The front panel ribbon cables are connected beneath the LCD. To access them, you'll need to temporarily flip the LCD over and out of the way.

Be very careful when moving the LCD, and do not attempt to remove it from the iPad—its display data cable will remain connected while it is rotated over.

- Lift the LCD from its long edge closest to the volume buttons and gently flip it out of the rear case
  —like turning the page in a book.
- Set the LCD face down on the front panel.

To reassemble your device, follow these instructions in reverse order.