




Toshiba Satellite C55-C5268 Battery Replacement

This guide will show you how to properly remove the battery of your Toshiba Satellite.

Written By: Greg Smith

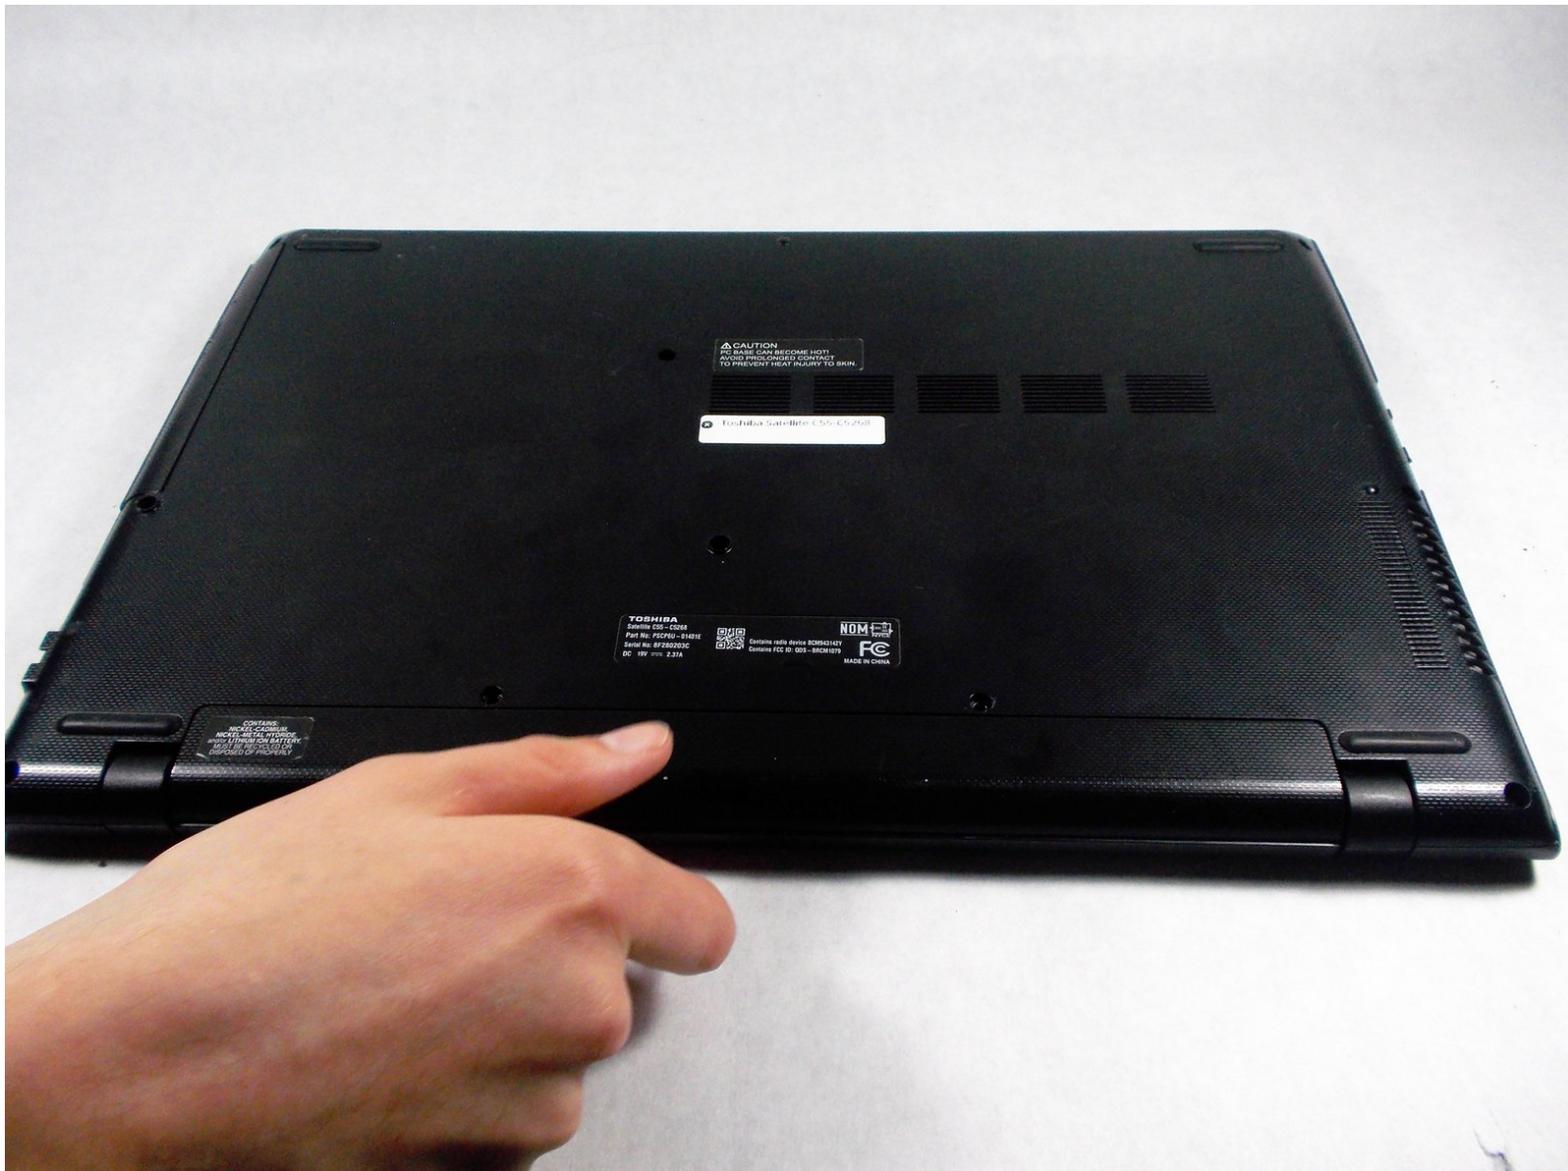

INTRODUCTION

The battery of the Toshiba Satellite is located on the bottom of the laptop, near where the screen attaches to the base. It is held in place by two Phillips head screws which need to be removed in order to remove the battery. The iFixit toolkit size PH1 bit will fit.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Toshiba Satellite L50-B C55-C and C70-C Series Replacement Laptop Battery](#) (1)

Step 1 — Battery

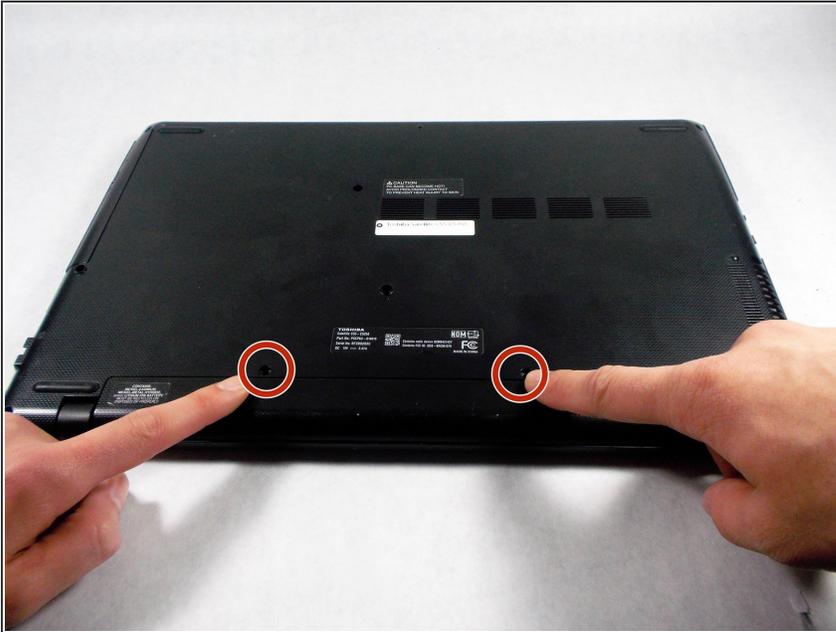

- i** Unplug and power off the laptop.
- Unscrew the two 9 mm Phillips #1 screws holding the battery in place.

Step 2



- Grab the battery and pull it away from the laptop to remove it.
- i** This doesn't require a lot of effort, so you don't have to pull too hard.

To reassemble your device, follow these instructions in reverse order.