




How to check Magnavox MWD200F fuses

Written By: Taryn

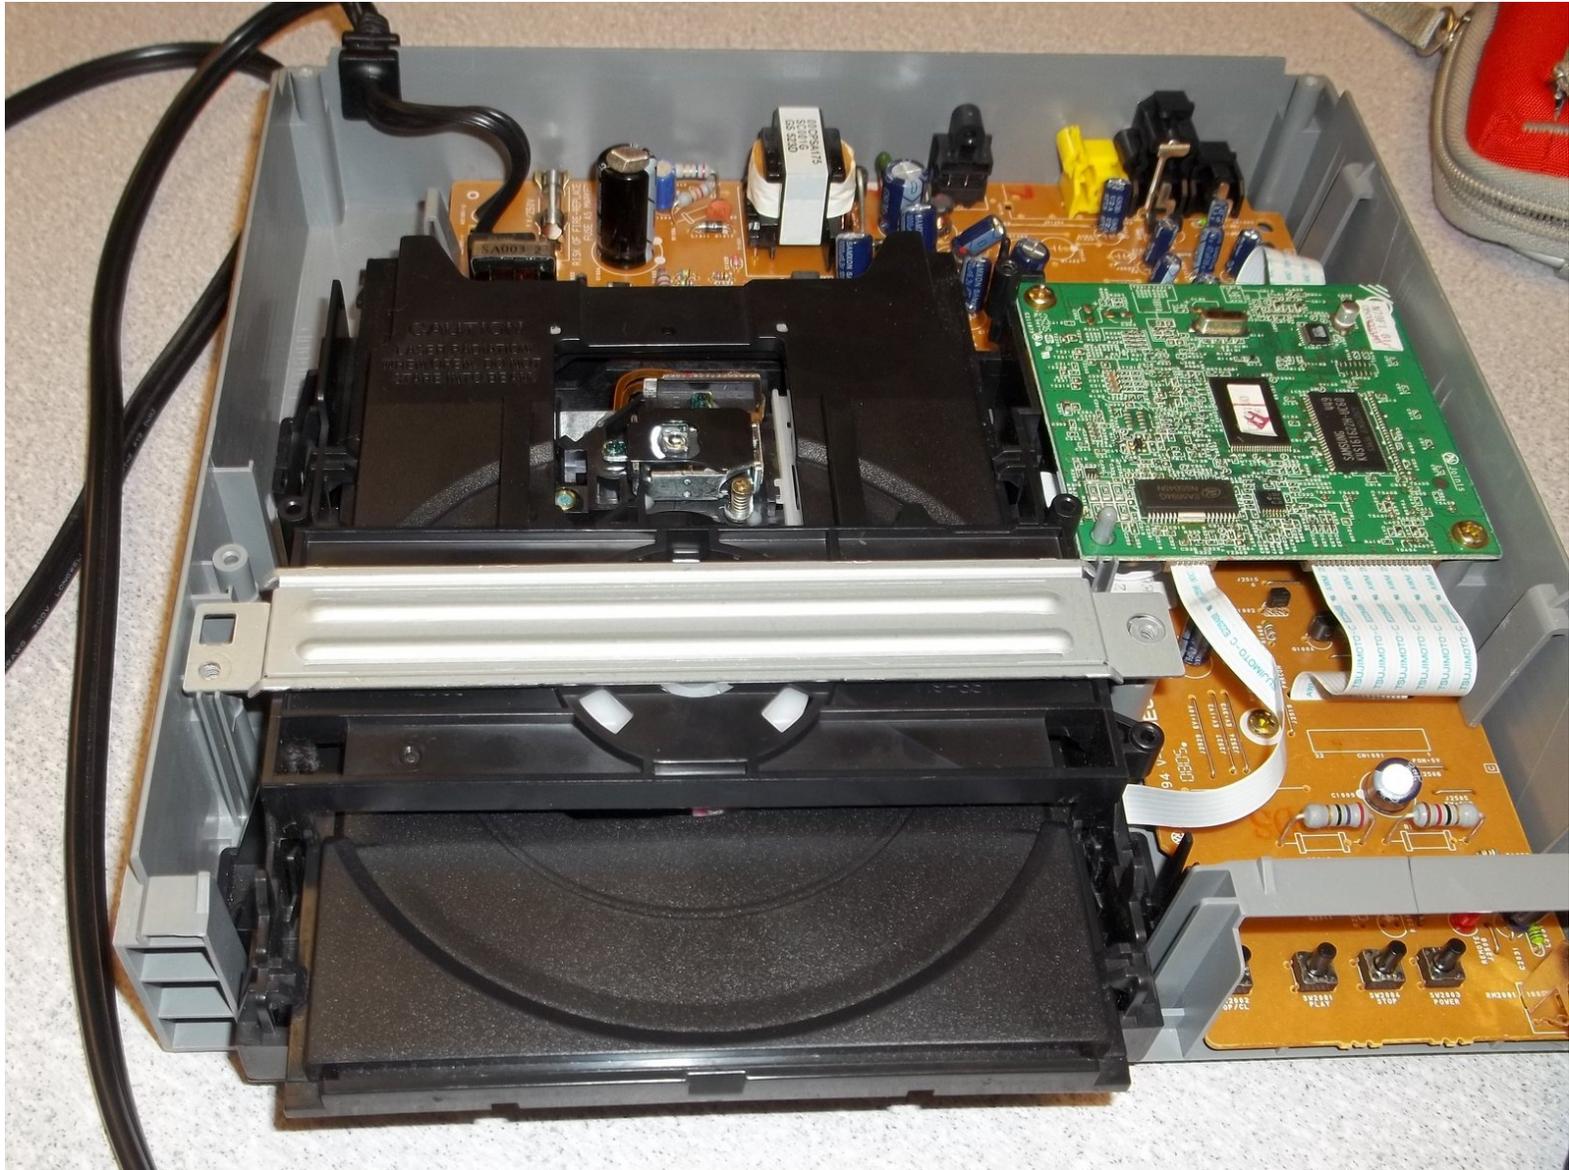

 **TOOLS:**

- [Tweezers](#) (1)
-

Step 1 — Faceplate




- Use a Phillips #2 screwdriver to remove the two screws on the top of the device toward the back.

Step 2




- Remove the plastic cover by lifting up the back and pulling it away from the faceplate.

Step 3

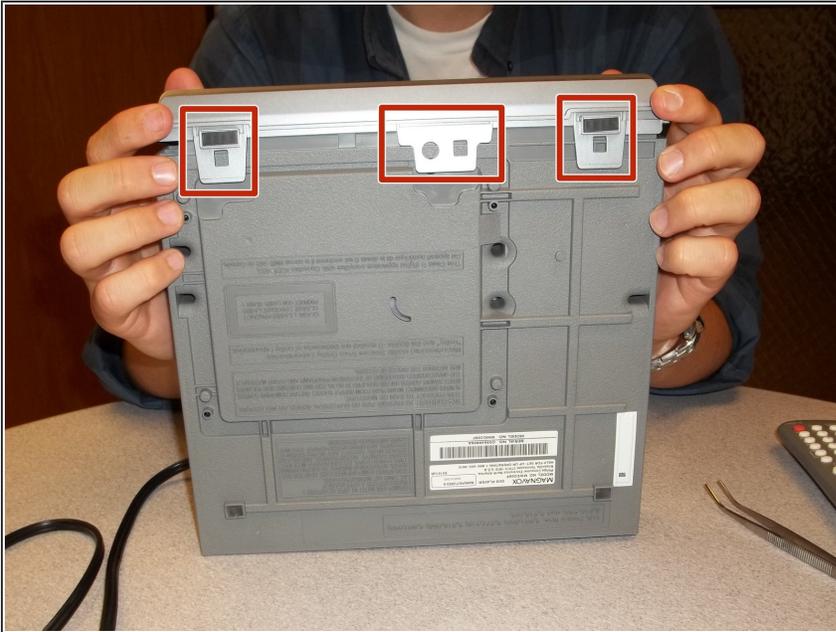


- Unclip the three latches on the bottom of the device.

Step 4

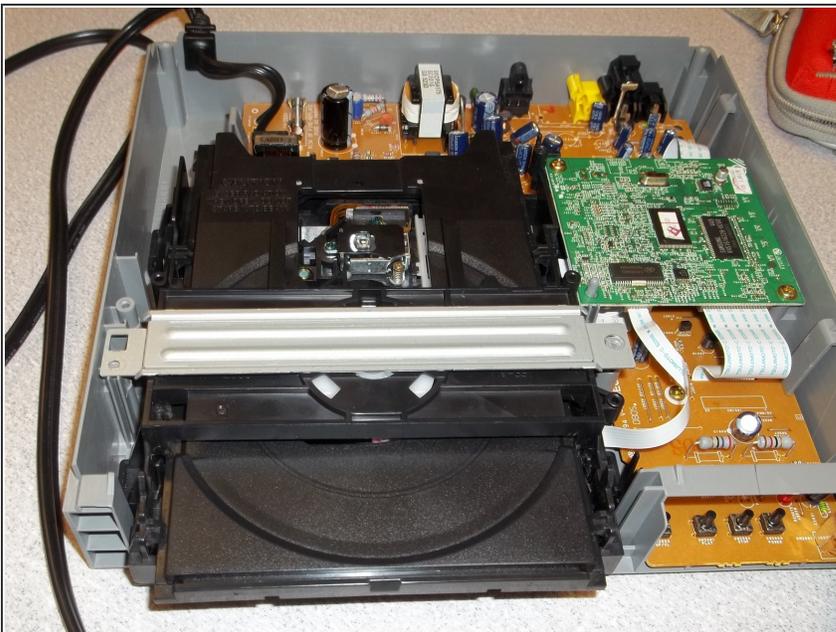

- Pull the faceplate off.

Step 5 — How to check Magnavox MWD200F fuses

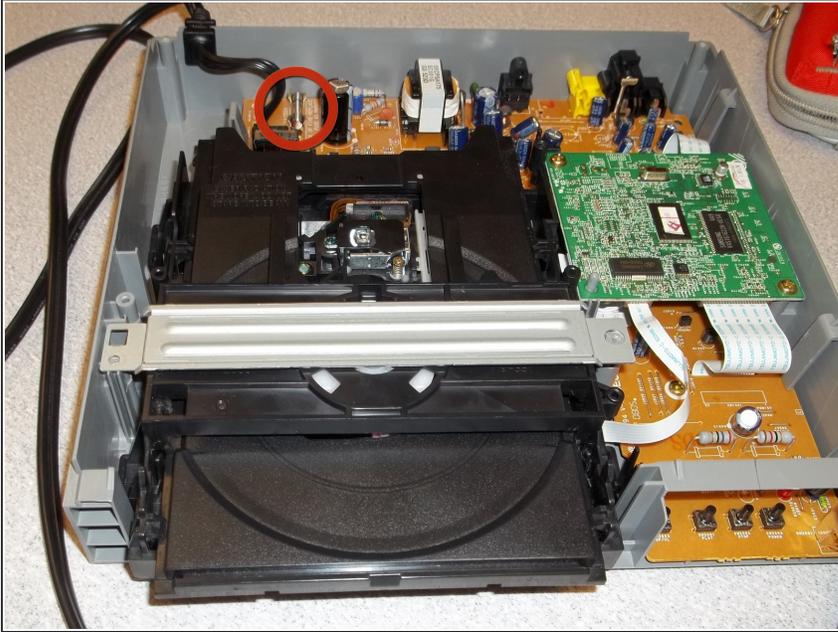

- Now that the device is open, you can check for any blown fuses that may need to be replaced.

To reassemble your device, follow these instructions in reverse order.