


## Replace iMac SuperDrive with MacBook Pro SuperDrive

Written By: Ronnoc Nailli

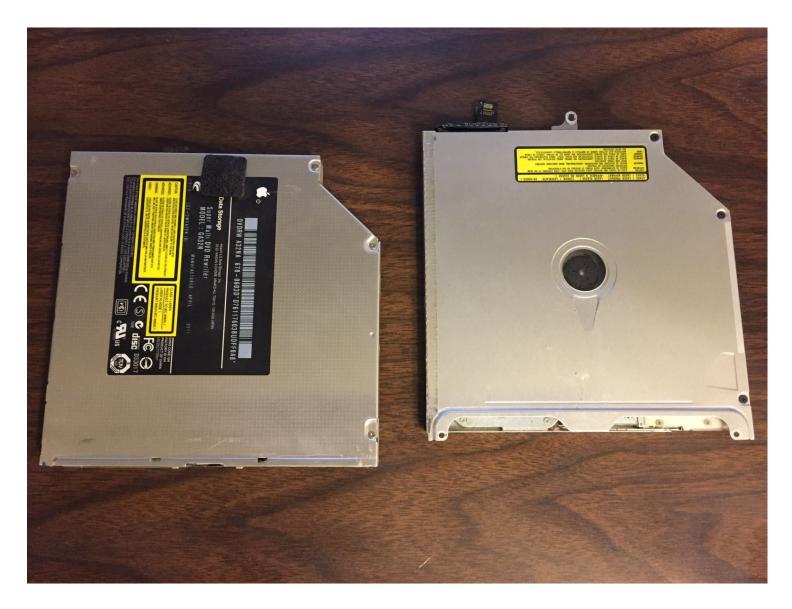

## TOOLS:

Thermal Paste (1)

## 🌣 PARTS:

12.7 mm SATA 8x SuperDrive (1)12.7 mm PATA 8x Pioneer SuperDrive (1)iMac Intel 21.5" and 27" (Late 2009-Mid

iMac Intel 21.5" and 27" (Late 2009-Mid 2011) SATA Optical Drive (1)

## Step 1 — Observe the minor differences between units



• These drives are the same manufacturer LG, although you'll find several makes throughout the years.

To reassemble your device, follow these instructions in reverse order.