



撰写者: Miroslav Djuric



介绍

升级你的硬盘来获得更多存储空间。

 工具:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

 章节:

- [MacBook and MacBook Pro \(Non-Retina\) SSD Upgrade Bundle](#) (1)
- [Crucial MX500 250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [Crucial MX500 1 TB SSD](#) (1)
- [500 GB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the part and all tools needed.
- [1 TB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the drive and all tools needed.
- [500 GB 5400 RPM 2.5" Hard Drive](#) (1)
- [1 TB 5400 RPM 2.5" Hard Drive](#) (1)
- [MacBook Pro 15" Unibody \(Mid 2009 to Mid 2012\) Hard Drive Bracket](#) (1)
- [SATA Universal Drive Adapter](#) (1)

步骤 1 — 底壳



- 拆除以下十颗固定在机壳上的螺丝
 - 三颗13.5mm (14.1 mm) 菲利普斯十字螺丝。
 - 七颗3 mm 菲利普斯十字螺丝。
- ✦ 卸下这些螺丝时，请注意它们如何以很小的角度伸出。必须以相同的方式重新安装它们。

步骤 2




- 使用双手在后壳接近风扇处提起固定后壳的两个卡扣。
- 将后壳放置在一边。

步骤 3 — 电池排线



- ✎ 对于某些维修（例如硬盘），不需要断开电池连接器，但断开连接器可防止主板上电子设备的意外短路。如果不断开电池连接器，请小心，因为主板的部件可能会通电造成短路或其他伤害。
- 使用撬棒的边缘从逻辑板上的插座向上撬开电池连接器。
- ① 在连接器的两个短边上分别向上撬起插座是十分有效的手段。

步骤 4

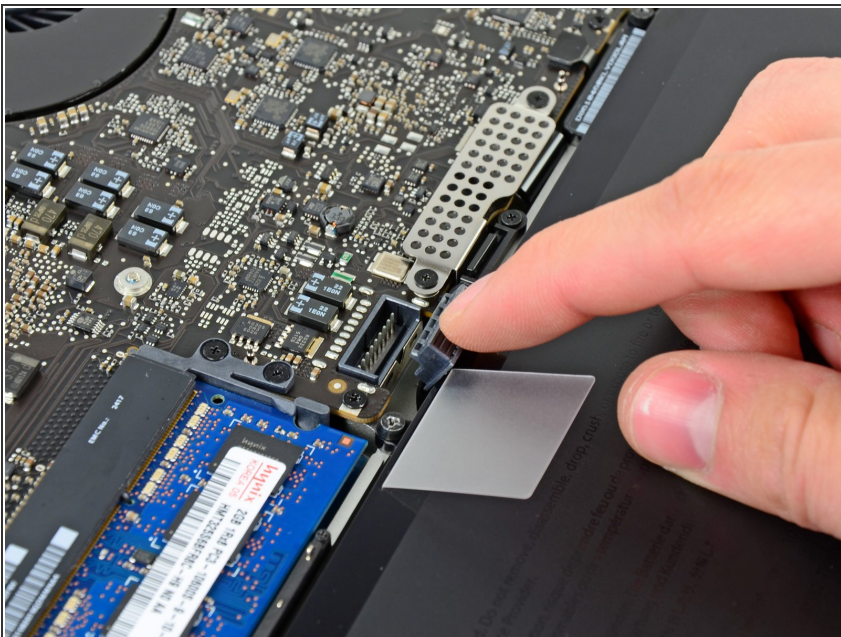

- 将电池电缆稍微掰离主板上的插座，以免在进行其他工作时插头与插座意外连接。

步骤 5 — 硬盘



- 拆下将硬盘支架固定到上盖上的两颗十字螺丝。

ⓘ 这些螺丝固定在硬盘支架上。

步骤 6



- 将固定支架从上盖上提起。

步骤 7




- 通过拉片提起硬盘并将其从上壳中拉出，断开将其连接到电脑上的电路。

步骤 8



- 将硬盘的电路从硬盘上拔下即可。

步骤 9 — 硬盘

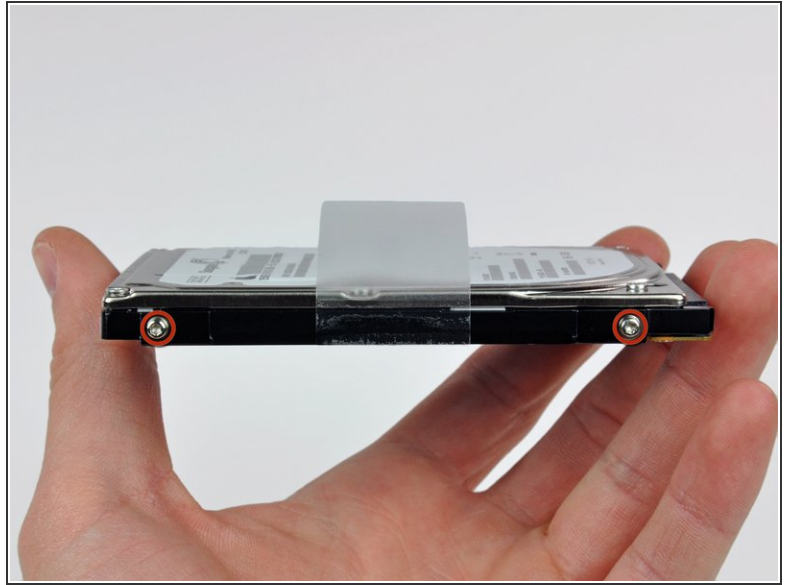

- 从硬盘驱动器两侧卸下两个T6 Torx螺丝（总共四颗螺丝）

✦ 如果你要更换硬盘，则需要将这些螺丝转移到新的硬盘驱动器上。

- 如果需要的话，撕下旧的硬盘驱动器的拉条，并将其转移到新驱动器的一侧。

ⓘ 如果你正在安装新的硬盘驱动器，我们有一个[OS X安装指南](#)来启动和运行。许多最近出产的Mac 能够使用[OS X 因特网恢复](#)。

请按逆序重组你的设备。