




Asus G501JW-BHI7N12 Battery Replacement

This guide requires a basic toolkit and deals...

Written By: Bruce Baker

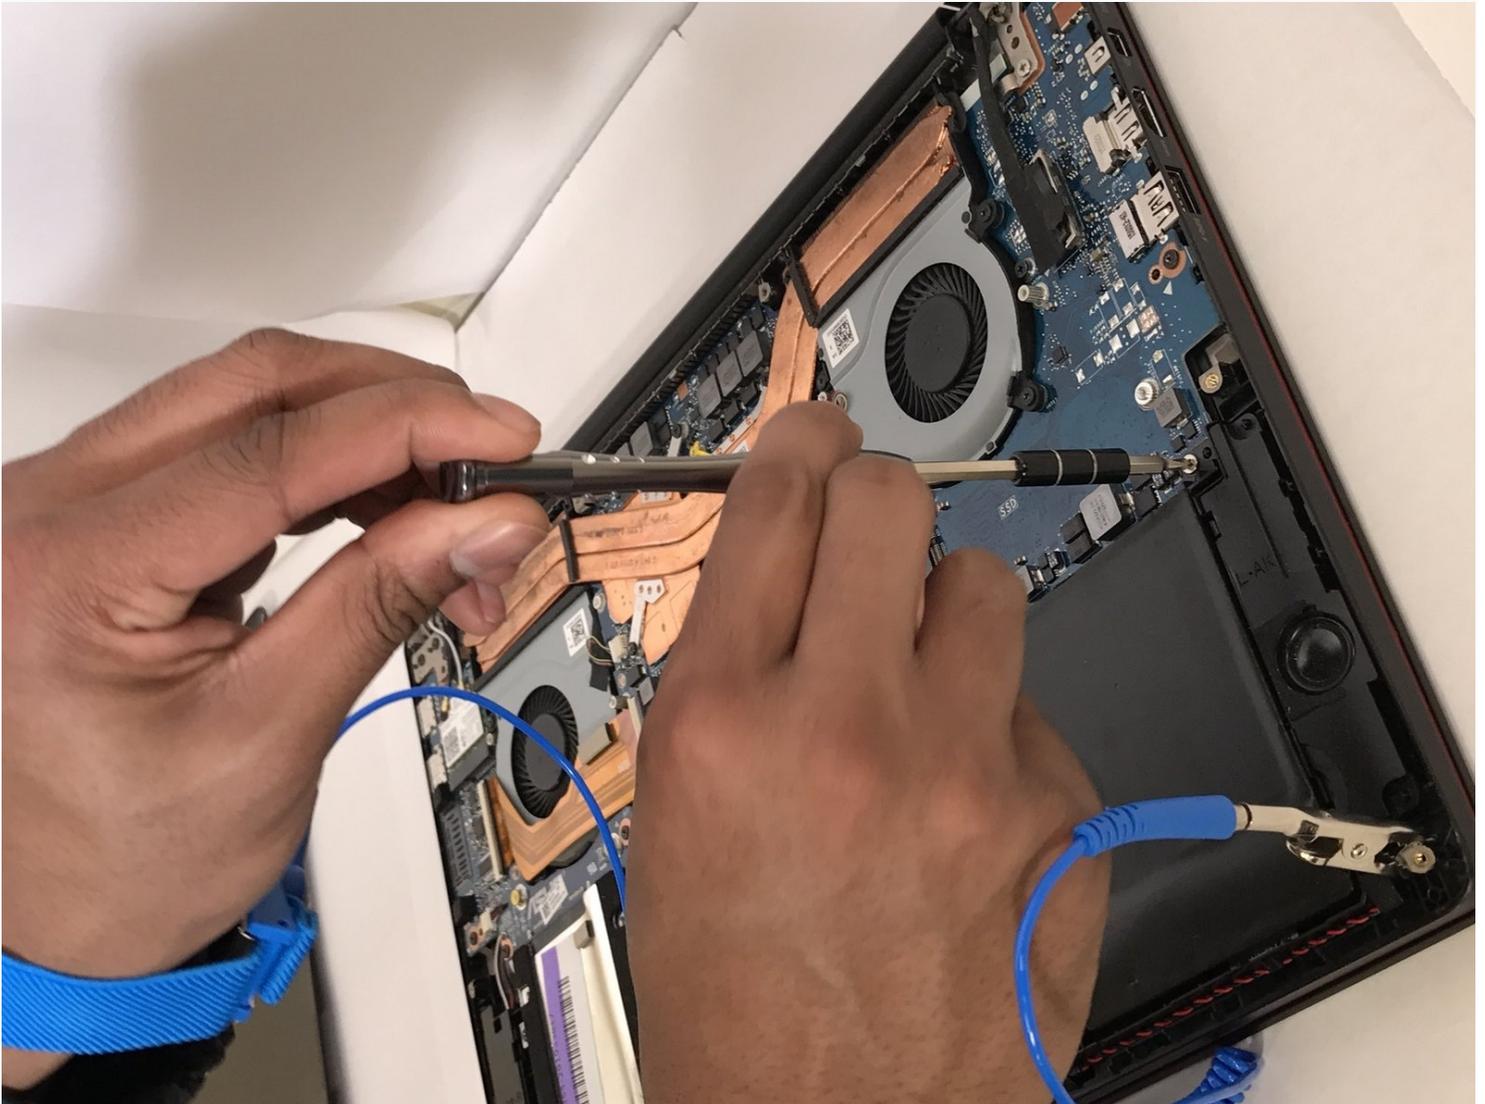

INTRODUCTION



This guide requires a basic toolkit and deals with the battery of a laptop. Replacing your battery could be a good solution if you are running into problems with a shortened battery life or you have a higher quality replacement battery ready.

🔧 TOOLS:

[Anti-Static Wrist Strap](#) (1)

[Phillips #0 Screwdriver](#) (1)


Step 1 — Battery

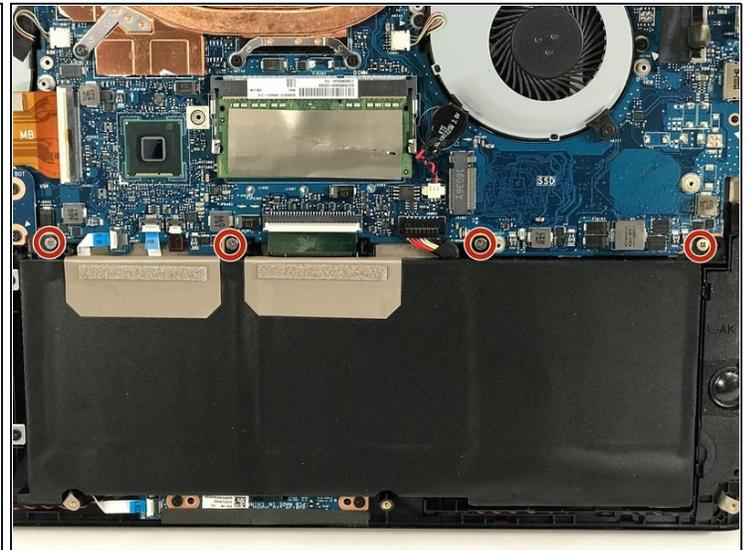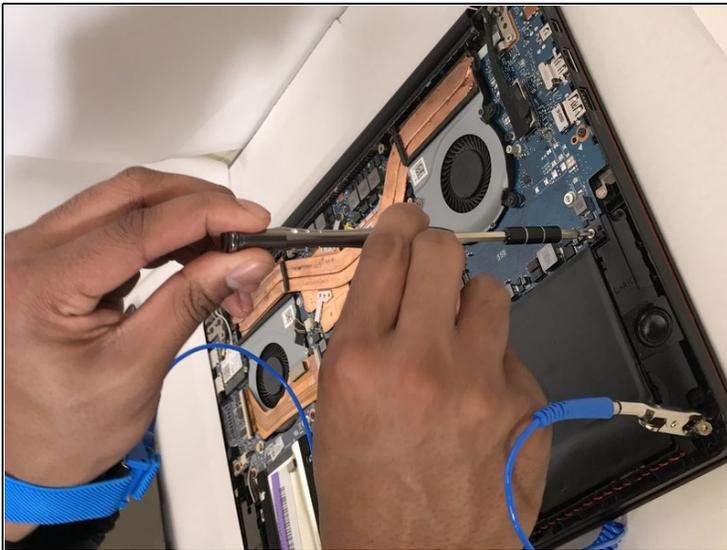

⚠️ Attach the clip of your [anti-static wrist strap](#) to the case of the laptop. This prevents any accidents that could fry the motherboard.

- Remove the four 7.0mm Phillips #0 screws around the battery.

Step 2

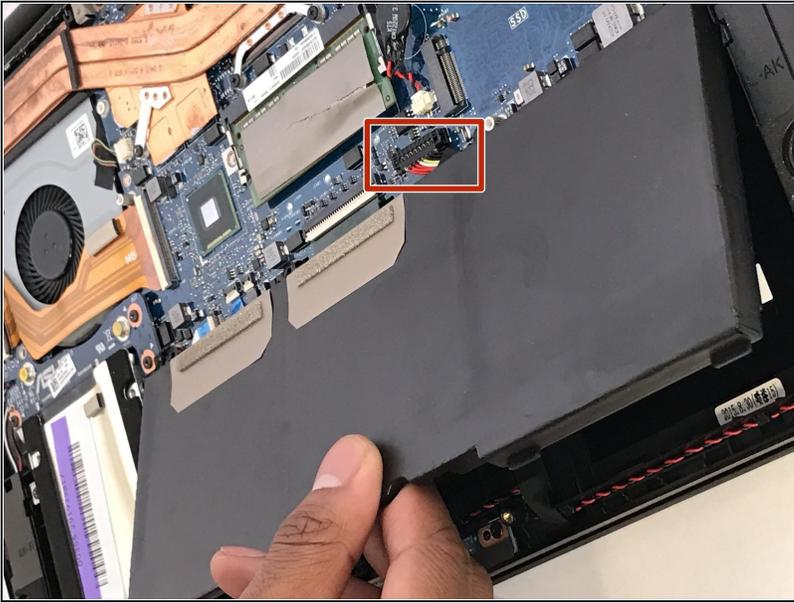

- Unplug the connector highlighted in this picture by pulling it up and out of its seating, then pull the battery away from the motherboard and remove the battery.

To reassemble your device, follow these instructions in reverse order.