



撰写者: Tobias Isakeit



介绍

使用本指南更换华为 P9 Lite 主板。

工具:


- [iFixit Opening Picks set of 6](#) (1)
- [Plastic Cards](#) (1)

- 从底角开始，使用三角撬片打开后盖。
- 逆时针方向操作，一个接一个地小心地撬开塑料卡扣。

A close-up photograph showing a person's thumb and index finger holding a blue plastic SIM ejector tool. The tool is inserted into the SIM card tray of a gold-colored iPhone. The iPhone is lying flat, and the internal components of the SIM tray are visible. The background is a plain, light-colored surface.


- 后盖下方有粘合剂，可将其固定在电池上，顶部装有金属板。
-  小心右侧的柔性电缆。
- 拧开三角撬片，将后盖拉开，并将其从粘合剂上松开。

步骤 3

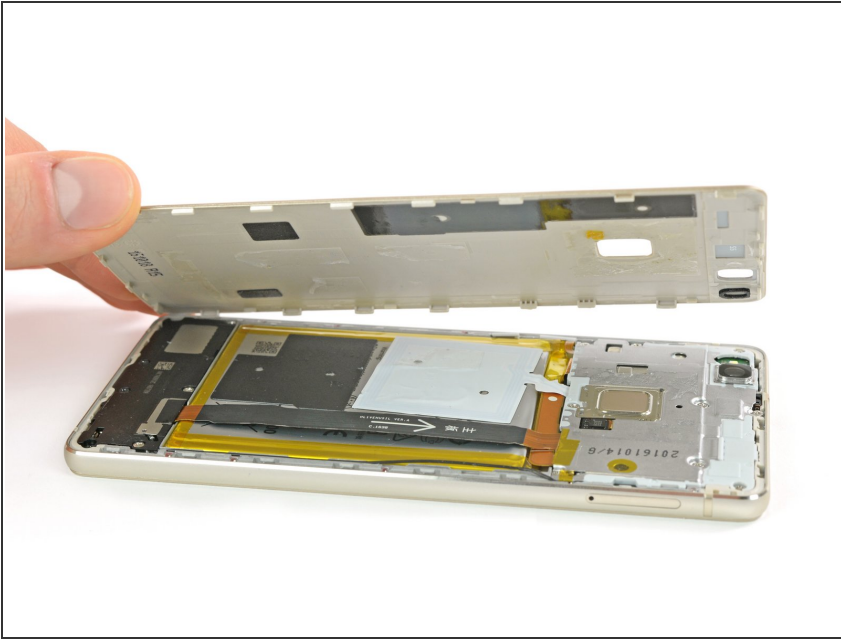



- 当后盖没有粘合剂时，你可以完全用手将其弹出。

步骤 4 — 主板盖板

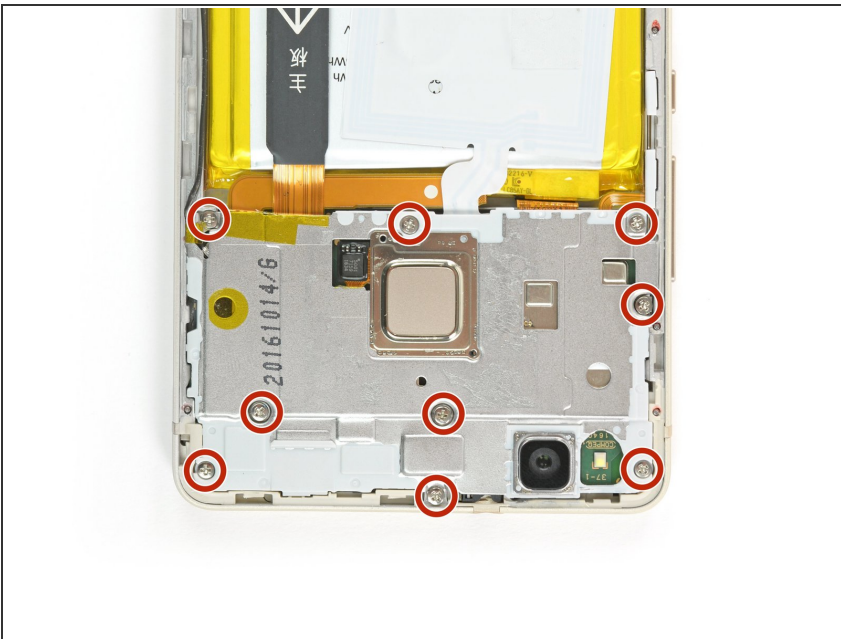

- 拆下固定金属屏蔽板的九个菲利普斯 #00 螺丝。
- ① 如果螺钉顶部有任何水指示器，请将其拆下，以确保螺丝刀能够正确就位。


步骤 5

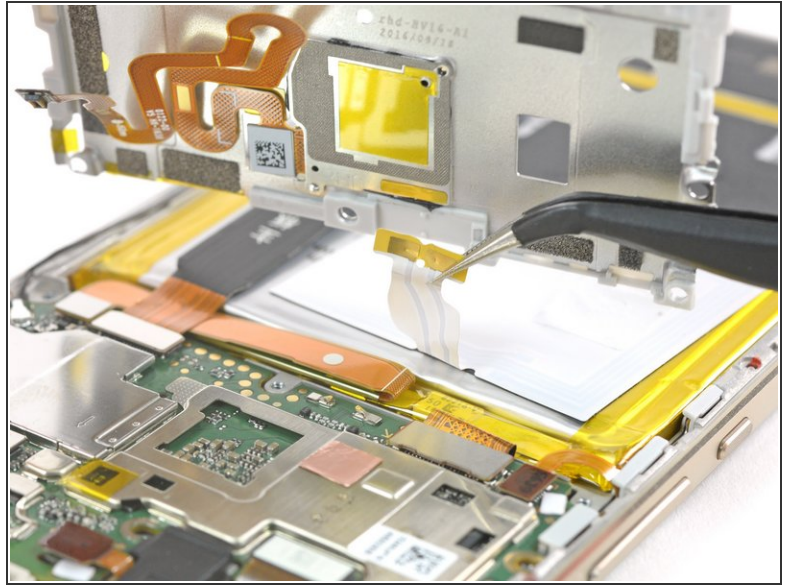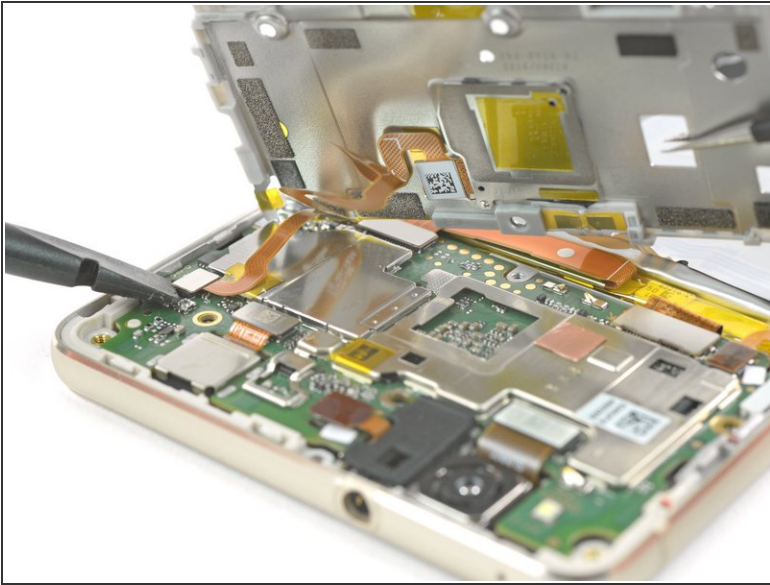

⚠ 不要拆下屏蔽板，它是通过连接器和电缆连接的。

- 使用撬棒断开指纹传感器与主板的连接。
- 将NFC天线电缆从金属板上剥离。

步骤 6 — 主板

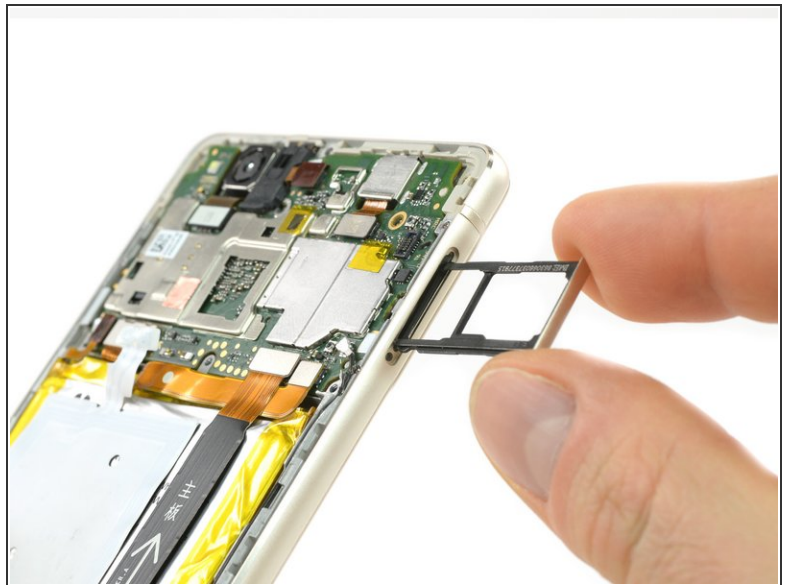


- 移除 SIM 卡槽。

步骤 7



- 断开主板柔性电缆、电池柔性电缆和天线电缆。

步骤 8

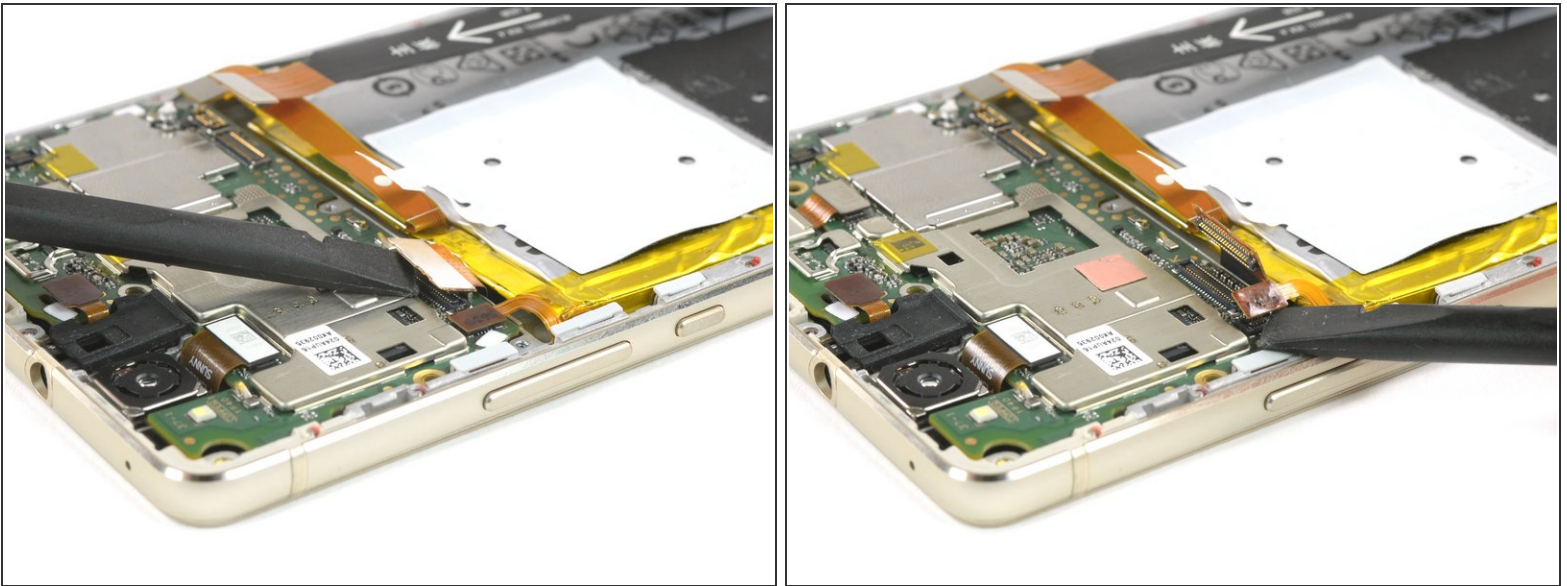


- 断开显示屏电缆和电源音量按键电缆。

步骤 9



- 断开后置摄像头和耳机接口。

步骤 10

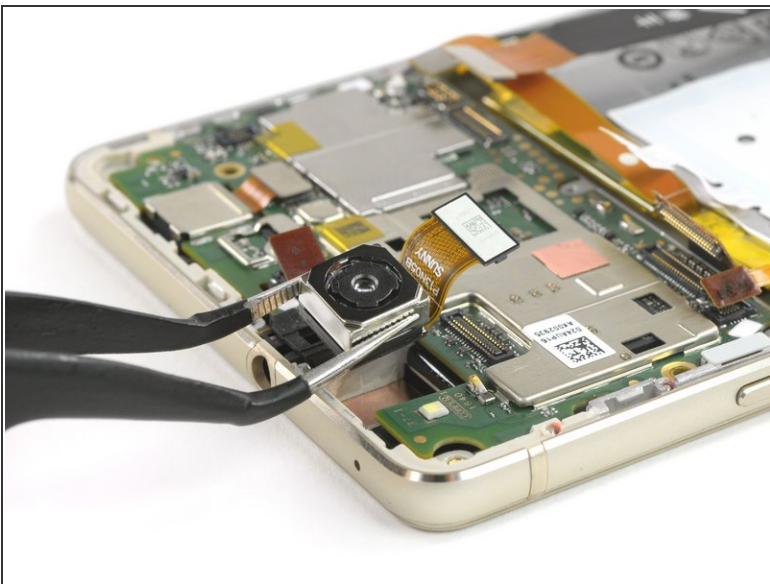

- 把摄像头和耳机接口从它们的位置移除。

步骤 11



- 使用撬棒小心抬起主板。
 - 卸下主板组件。
- ☒ 在主板的背面有一个散热垫（粉红色的橡胶状），用于散热。如果你要更换显示屏组件，并且散热垫损坏或太干，你可能需要更换新的散热垫。

请按逆序重组你的设备。