


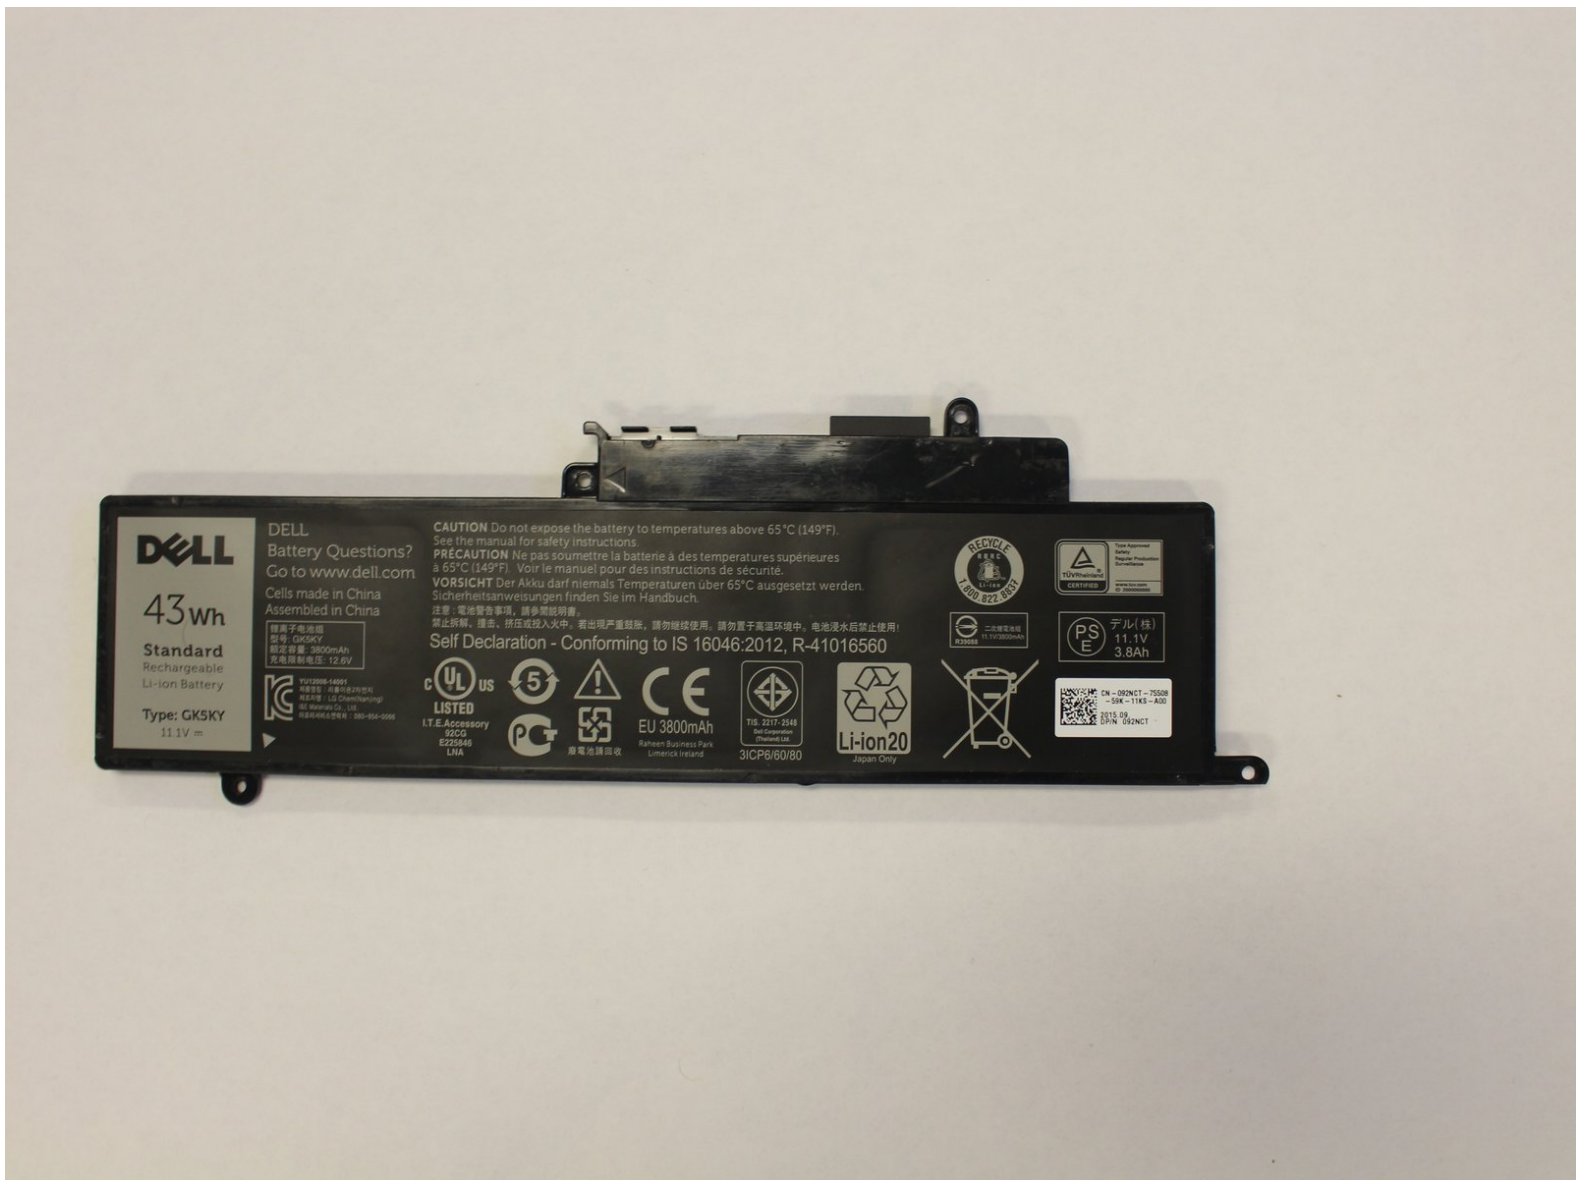

Dell Inspiron 7568 Battery Replacement Guide

How to replace a Dell Inspiron 7568 battery.

Written By: Luis Velez



INTRODUCTION



By following the steps in this guide one should be able to replace the battery on the device (Dell Inspiron 7568).



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

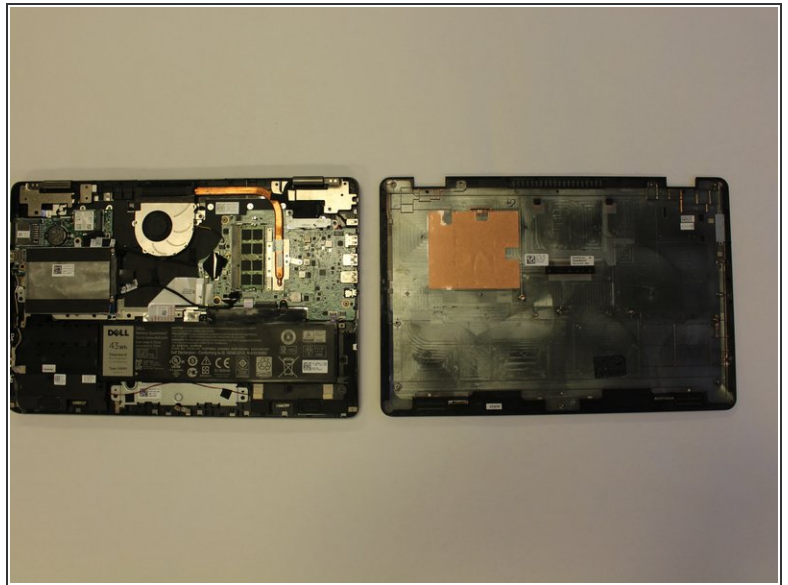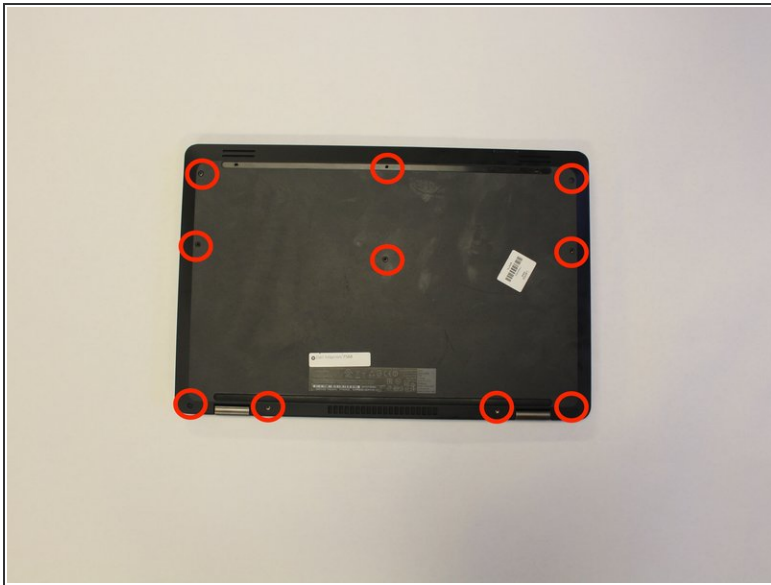

- Remove the ten 7mm Phillips #1 screws on the bottom cover.
- Remove the bottom cover.

Step 2

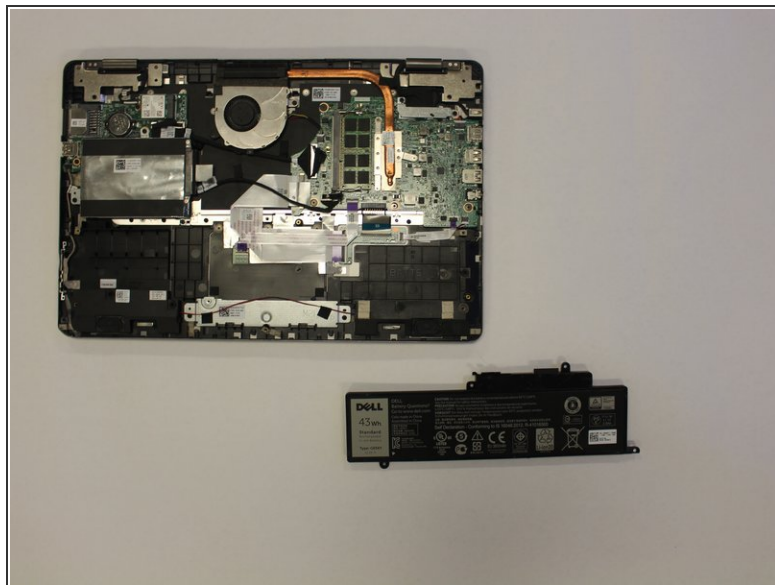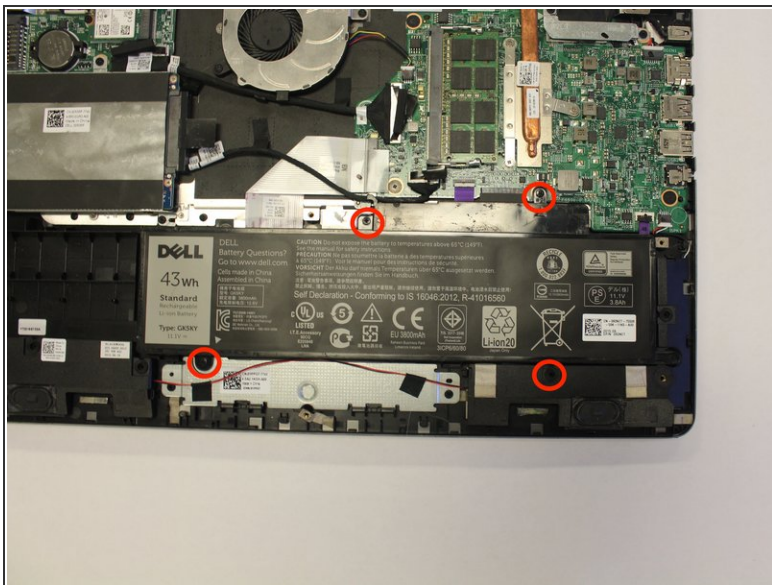

- Remove the four 3mm Phillips #1 screws holding the battery.
- Unhinge the connector cable to the battery.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.