



VooDooQuad 250 Propeller Replacement

In this guide the removal of broken or chipped propellers is detailed in addition to the installation of a new set.

Written By: Damir Pamic





INTRODUCTION

Chipping or breaking of a propeller for any level drone flier is inevitable. It is an incredibly common troubleshoot, but luckily a simple replacement. Make sure you have a clean working station, and all you'll need is a set of pliers to put on the new set.

TOOLS:

- [Slip Joint Pliers](#) (1)

Step 1 — Propeller

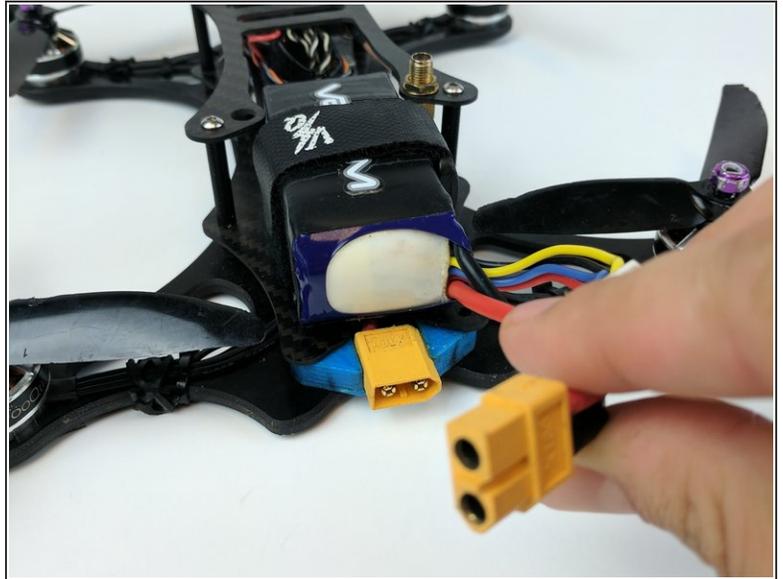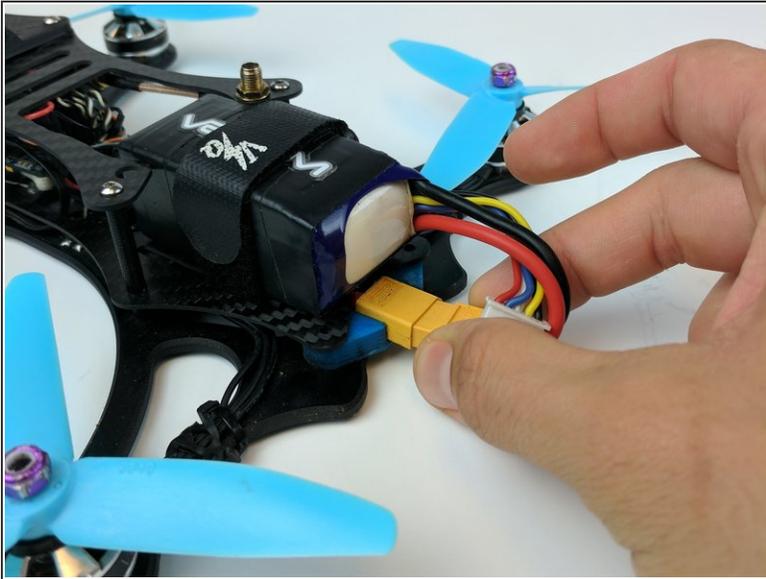


- Unplug the power cable of the drone to eliminate unnecessary mishaps.

Step 2



- With your set of pliers loosen and remove the four bolts holding the propellers to the motor.

Step 3

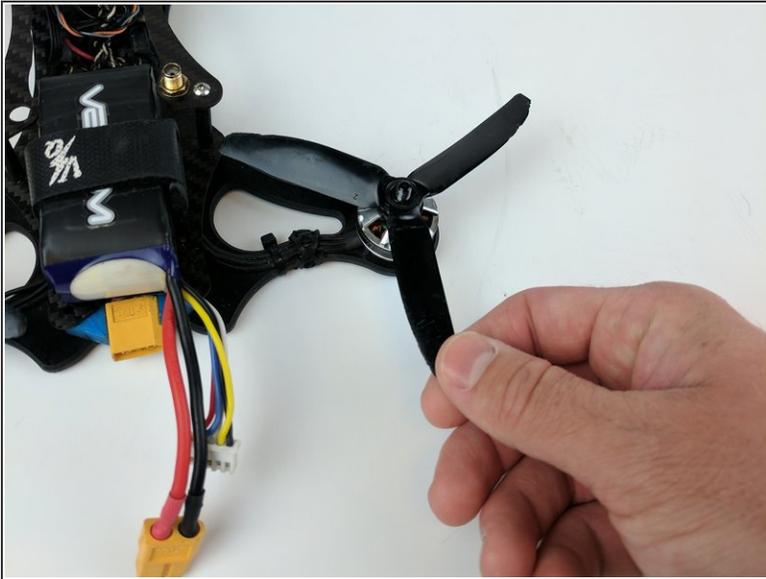

- Gently remove the propellers perpendicular to the device.
 - When placing the new set of propellers on the drone, make sure that the wings angled upward are facing towards the center, or the battery.

Be careful removing the bolts multiple times because it may create slippage and then this will not allow the bolt nor the propeller to stay on. To reassemble your device, follow these instructions in reverse order