

Dell Alienware M11x R3 lower case Replacement

Use this guide to replace the lower case of the...

Written By: Richard Maurice



INTRODUCTION

Use this guide to replace the lower case of the Dell Alienware M11x R3 or remove it for other repairs.




TOOLS:

• Mako Driver Kit - 64 Precision Bits (1)

Step 1 — Lower Case



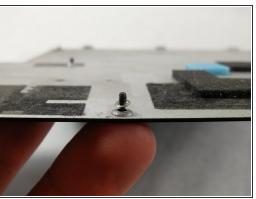



- Loosen the eight retaining screws on the base of the computer with a small Phillips screwdriver.
 - The screws have retaining washers to hold them in place, so you don't have to remove them from the base plate.
- Remove the bottom cover from the laptop.

To reassemble your device, follow these instructions in reverse order.