




# VTech Safe and Sound DM111-2 Battery Replacement

This guide shows how to replace the battery on the VTech safe and sound baby monitoring device.

Written By: Darrell Griffin

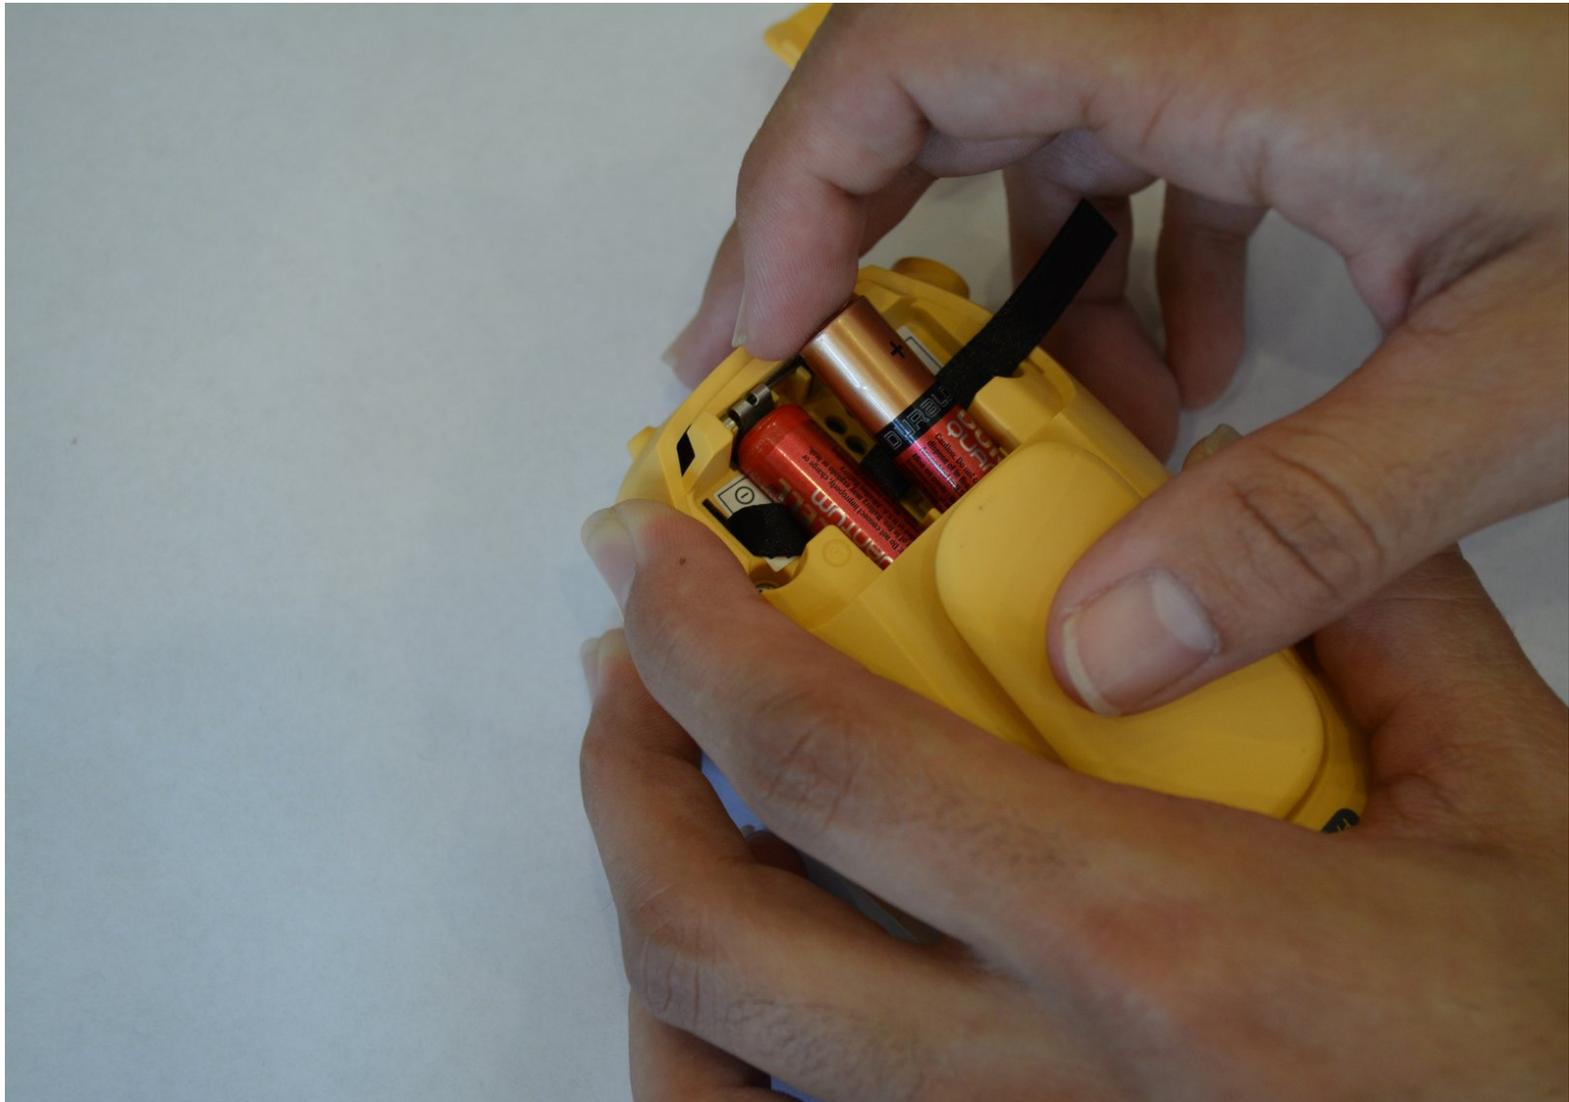

## INTRODUCTION


Use this guide to replace the battery if the device shuts off during use or will not turn on. Be careful while removing the battery, make sure to check for signs of corrosion or battery acid. once the batteries have been removed make sure to replace them with alkaline batteries.

## Step 1 — Battery



- Expose the battery compartment by removing the lower back cover of the device.
- Do this by holding the back side of the device upside down in your hands and applying pressure to the indented portion with both thumbs.

## Step 2

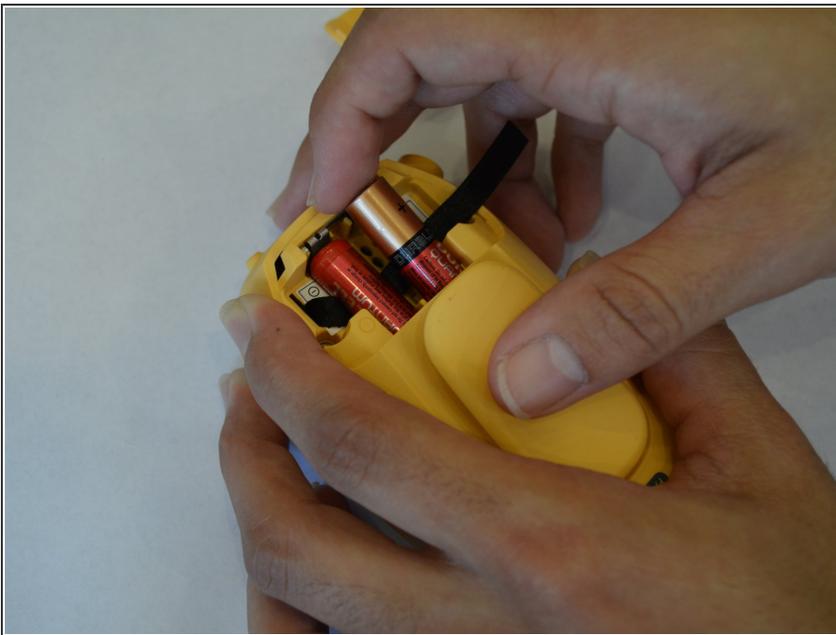

- Once the batteries are exposed, use your index finger to push the battery against the spring and pull up to dislodge the battery.
- ⚠ Make sure to check for battery acid or other corrosive substances before touching the battery. If needed, use latex gloves to avoid skin irritation from battery acid.

To reassemble your device, follow these instructions in reverse order.