




# Lenovo Yoga 910-13IKB Wi-Fi Card Replacement

If you need to replace the Wi-Fi card in your...

Written By: Tyler Jane McClure

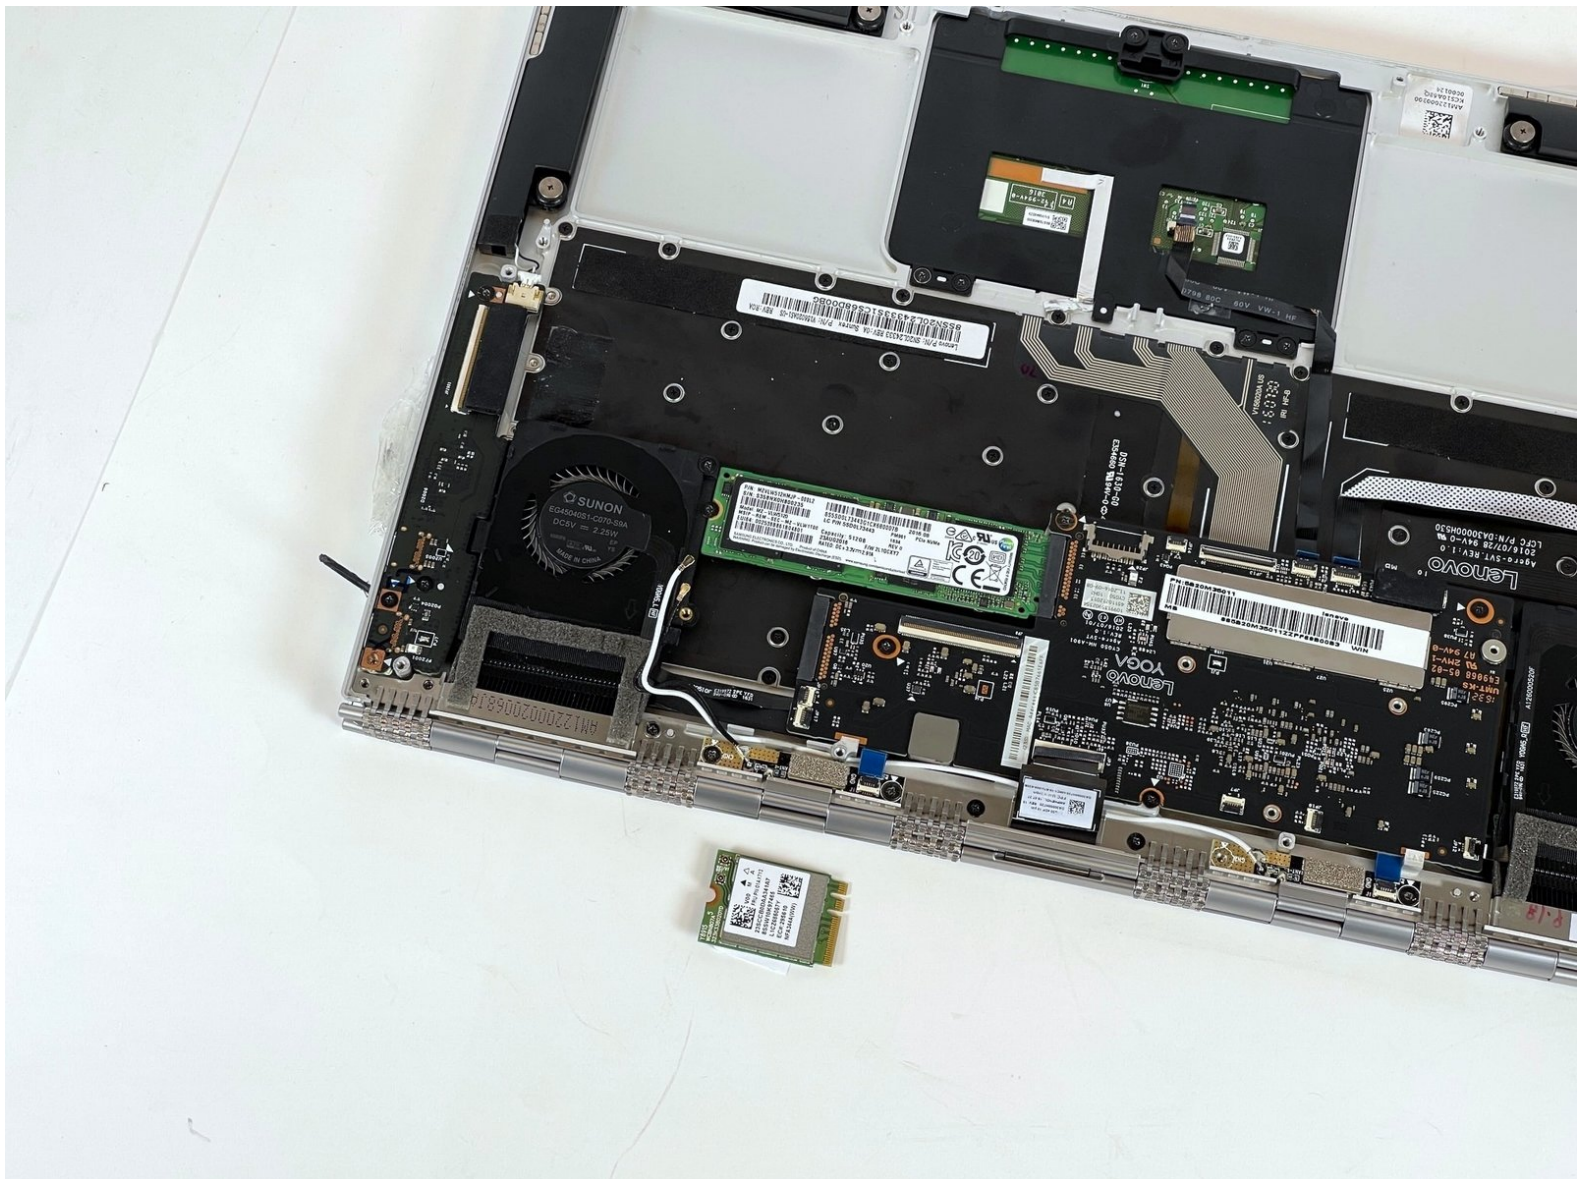

# INTRODUCTION

If you need to replace the Wi-Fi card in your Lenovo Yoga 910-13IKB follow this guide.



## TOOLS:


- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)



## PARTS:


- [Lenovo Yoga 910 \(13"\) Replacement Battery](#) (1)
- [lenovo yoga 910 wifi card](#) (1)

## Step 1 — Back Panel

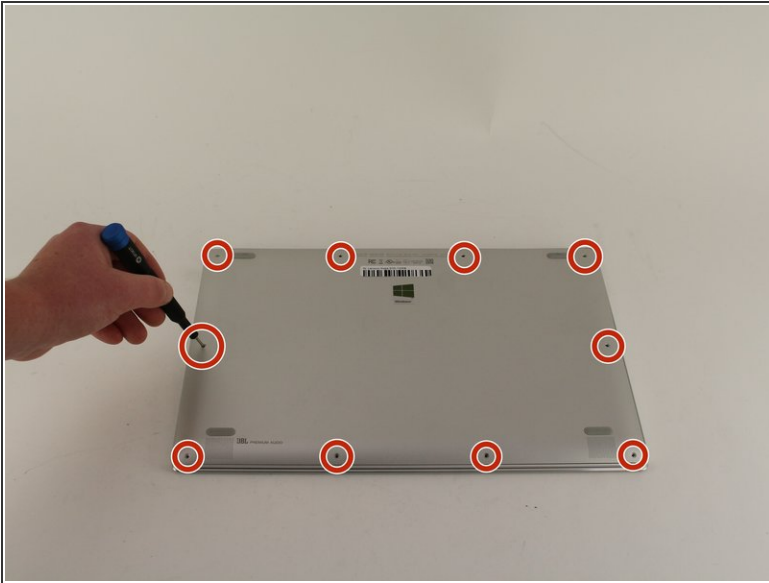

- Turn the laptop over and remove the ten Torx T5 screws along the perimeter of the bottom panel using the T5 Torx Screwdriver.
- Remove the back panel from the device exposing the components.


## Step 2 — Battery

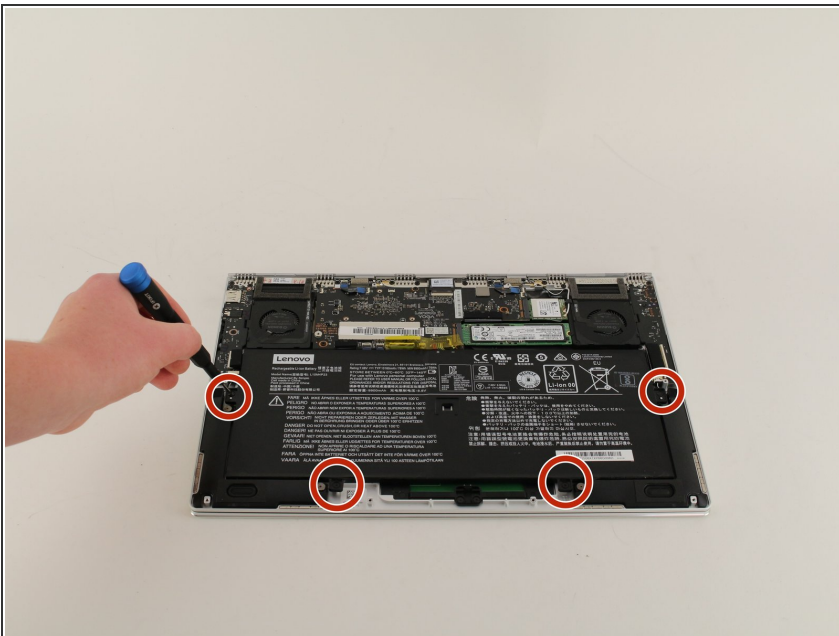

- Remove the four 3 mm Phillips #0 screws holding the battery in place.




## Step 3

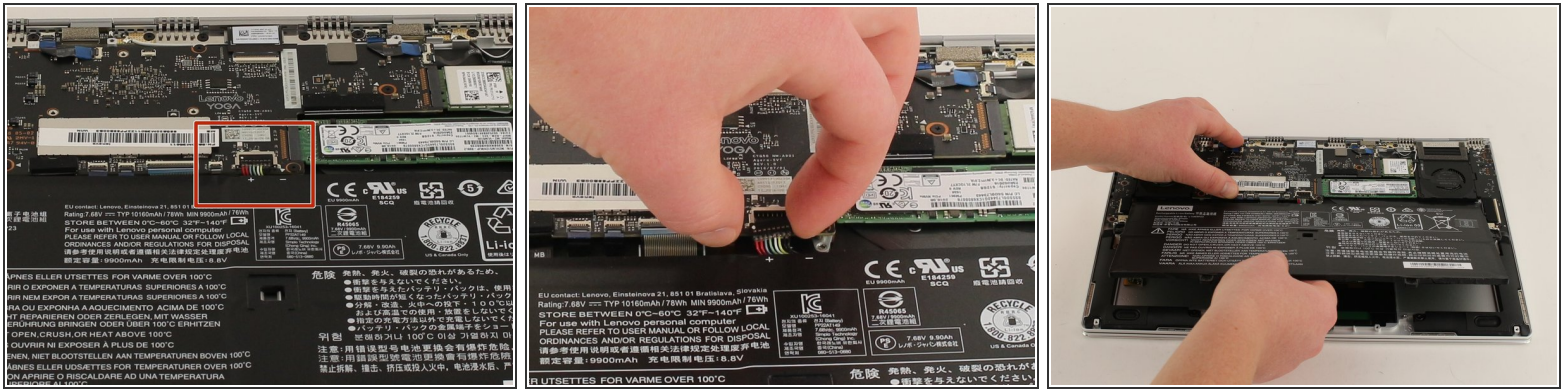



- Disconnect the battery cable from its motherboard socket by gently pulling it towards the battery. The spudger tool may be needed to lift the flap seal.
- ⚠ Pull parallel to the battery, not straight up.
- ⓘ Pull evenly on the width of the cable so that no individual wire is overly strained.
- Lift the battery out.

## Step 4 — Wi-Fi Card

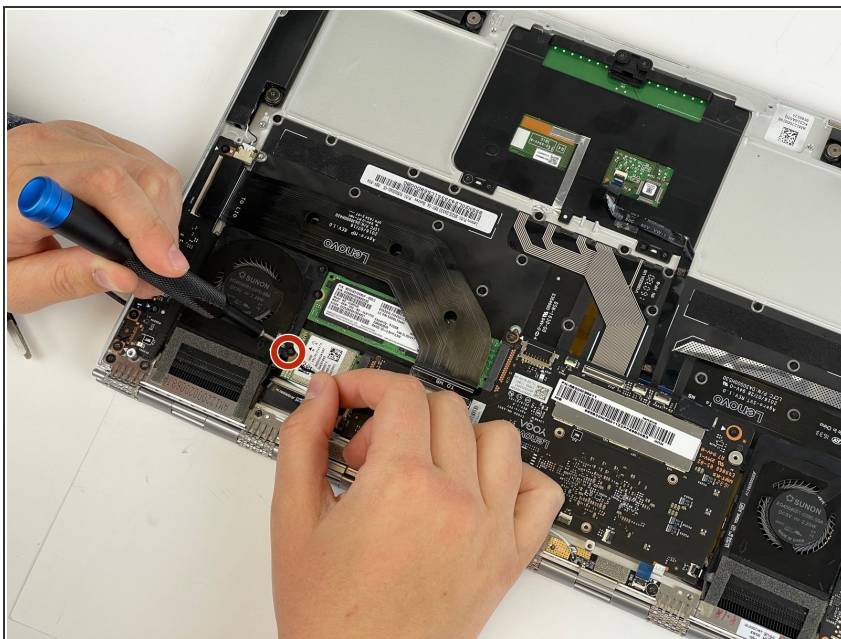




- Remove the single 1 mm screw at left of Wi-Fi card with a Phillips #0 screwdriver.

## Step 5

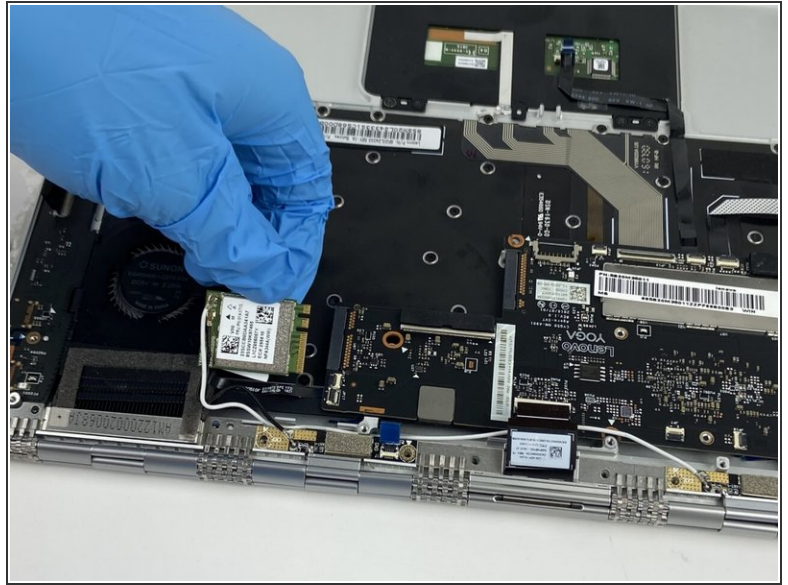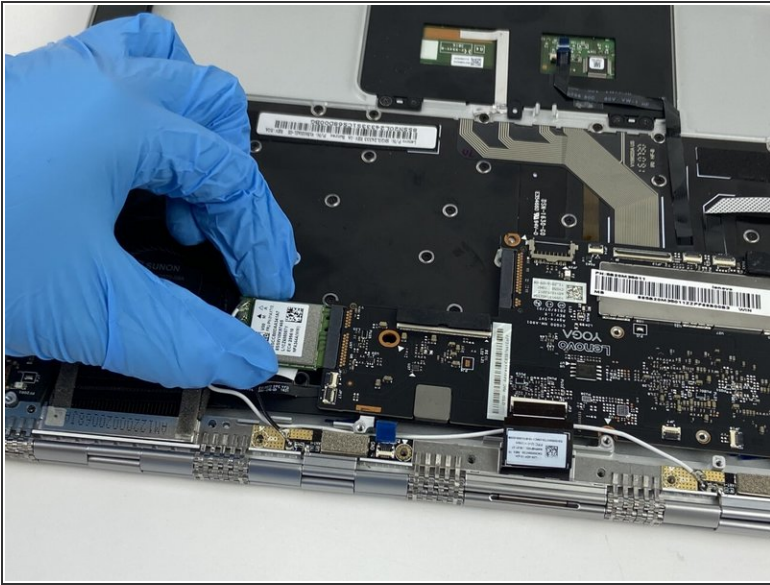

- Pull the Wi-Fi card out of the slot on the motherboard.
- ❗ It is still connected to the coaxial cables so don't yank it out or those connections will break.

## Step 6

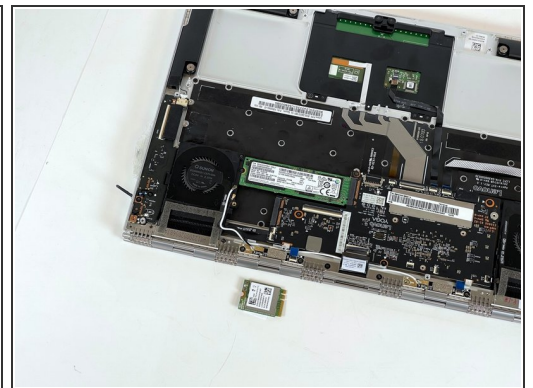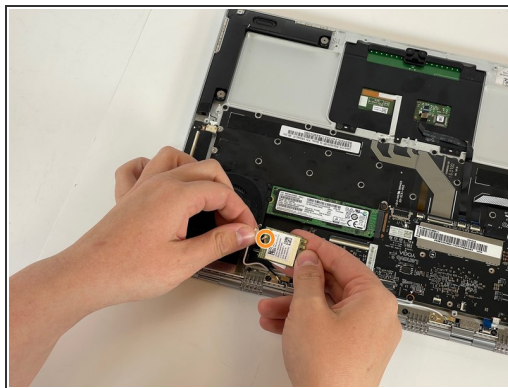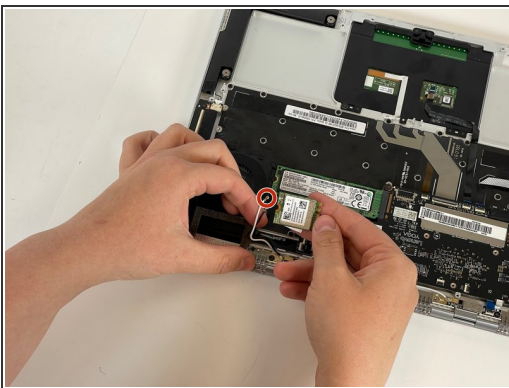

- Detach the white wire that is connected to the Wi-Fi card by applying gentle pressure.
- Detach the black wire by applying gentle pressure.

To reassemble your device, follow these instructions in reverse order.